## **Contents**

Introduction	••••••
Keys, Doors, and Windows	6
Seats and Restraints	3!
Storage	8
Instruments and Controls	94
Lighting	13
Infotainment System	139
Climate Controls	164
Driving and Operating	169
Vehicle Care	289
Service and Maintenance	34
Technical Data	352
Customer Information	356
OnStar	366
eCall	372
Connected Services	374
Index	37

## Introduction



The names, logos, emblems, slogans, vehicle model names, and vehicle body designs appearing in this manual including, but not limited to, GM, the GM logo, GMC, the GMC Truck Emblem, SIERRA, and DENALI are trademarks and/or service marks of General Motors LLC, its subsidiaries, affiliates, or licensors.

This manual describes features that may or may not be on the vehicle because of optional equipment that was not purchased on the vehicle, model variants, country specifications, features/applications that may not be available in your region, or changes subsequent to this publication's release, including changes in standard or optional content.

Refer to the purchase documentation relating to your specific vehicle to confirm the features.

## **Using this Manual**

To quickly locate information about the vehicle, use the Index in the back of the manual. It is an alphabetical list of what is in the manual and the page number where it can be found.

## Danger, Warning, and Caution

Warning messages found on vehicle labels and in this manual describe hazards and what to do to avoid or reduce them.

## **⚠** Danger

Danger indicates a hazard with a high level of risk which will result in serious injury or death.

## ⚠ Warning

Warning indicates a hazard that could result in injury or death.

### 2 Introduction

### **Caution**

Caution indicates a hazard that could result in property or vehicle damage.



A circle with a slash through it is a safety symbol which means "Do not," "Do not do this," or "Do not let this happen."

## **Symbols**

Some of the vehicle components and labels use symbols instead of text relating to a specific feature, control, message, gauge, or indicator.

### **Vehicle Symbol Chart**

This chart defines the symbols that may be found on the vehicle.

Air Conditioning System

🗱 : Air Conditioning Refrigerant Oil

★: Airbag Readiness Light

(ABS) : Antilock Brake System (ABS)

(I): Brake System Warning Light

ً : Dispose of Used Components Properly

: Do Not Apply High Pressure Water

: Energy Usage and Charge Mode Selection

**③**: Flame/Fire Prohibited

**4**: Flammable

.: First Responder

⇒ : Forward Collision Alert

☐ ⇒: Fuse Block Cover Lock Location

🗗: Fuses

**A**: High Voltage

2: ISOFIX/LATCH System Child Restraints

: Keep Fuse Block Covers Properly Installed

**→** : Lane Change Alert

: Lane Departure Warning

: Lane Keep Assist

🔭 : Pedestrian Ahead Indicator

ப்: Power

∴ Rear Cross Traffic Alert

: Registered Technician

(x2): Remote Start

: Risk of Electrical Fire

: Seat Belt Reminders

: Service Vehicle Soon

ຄ<sup>ນ</sup>ີ∷ Side Blind Zone Alert

: Tire Pressure Monitor

慧: Traction Control/StabiliTrak/Electronic Stability Control (ESC)

🚇 : Under Pressure

: Vehicle Ahead Indicator

READY: Vehicle Ready

### Additional Instructions or Information

The following symbols are used to indicate additional instructions or information.


: Shown when the owner's manual has additional instructions or information.

: Shown when the service manual has additional instructions or information.

		Introduction	3
⇒: Shown when there is more information on another page — "see page."			

## 1 Introduction

## **Instrument Panel Overview**

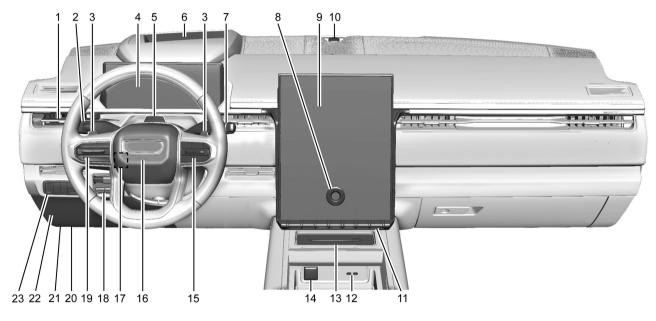

1. Air Vents. See Air Vents \$\infty\$ 166.

Lane-Change Signals \$\Display\$ 134.

- Windshield Wiper/Washer. See Windshield Wiper/Washer 

  96.
   Turn and Lane-Change Signals. See Turn and
- 3. Regenerative Braking. See Regenerative Braking \$\simes\$ 195.
- 4. Instrument Cluster. See *Instrument Cluster* 

  ⇒ 104.
- 5. Driver Monitoring System. See *Driver* Attention Assist \$\dip\$ 252.
- 6. Head-Up Display (HUD). See Head-Up Display (HUD) ⇒ 125.
- 7. Shift Switches. See *Electric Drive Unit* \$\sigma\$ 187.
- 8. Infotainment Controls. See Overview \$\info\$140.
- Light Sensor. See Automatic Headlight System \$\simeq 133.
   Vehicle Alarm System. See Vehicle Security \$\simeq 27.

- 12. USB Port. See USB Port ▷ 146.
- 13. Wireless Charging. See Wireless Charging 

  ⇔ 101.
- 14. Power Outlets. See *Power Outlets* ♀ 97.
- 15. Steering Wheel Controls. See Steering Wheel Controls 

  Driver Information Center (DIC) Controls. See Driver Information Center (DIC) 

  Heated Steering Wheel. See Heated Steering Wheel 

  95 (If Equipped).
- 16. Horn. See *Horn ⇔* 96.
- 17. Steering Wheel Adjustment. See Steering Wheel Adjustment \$\triangle\$ 95 (Out of View).
- 18. Trailer Brake Control Panel. See "Integrated Trailer Brake Control System" under *Towing Equipment* ⇔ 276.
- Adaptive Cruise Control. See Adaptive Cruise Control (Advanced) \$\sip\$ 204.
   Forward Collision Alert (FCA) System. See Forward Collision Alert (FCA) System \$\sip\$ 242.

- 20. Data Link Connector (DLC) (Out of View). See Service Vehicle Soon Light (Propulsion System Failure) ⇒ 110.
- 21. Manual Hood Release. See Hood \$\Display\$ 15.

Air Suspension. See *Air Suspension* ⇒ 201. Rollover Detection Disable Button. See *Rollover Detection Disable Button* ⇒ 57. Lane Keep Assist (LKA). See *Lane Keep Assist* (LKA) ⇒ 253.

Power Hood Release. See *Hood* \$\times\$ 15.

Power Tailgate Release. See *Tailgate* \$\times\$ 23.

Instrument Panel Illumination Control.
See *Instrument Panel Illumination Control* \$\times\$ 135.

## **Keys, Doors, and Windows**

6

Keys and Locks	
Keys	6
Remote Key	
Remote Key Operation	
Remote Start	
Door Locks	13
Power Door Locks	
Delayed Locking	14
Automatic Door Locks	14
Lockout Protection	
Safety Locks	15
Doors	
Hood	15
Midgate	
Tailgate	
Vehicle Security	
Vehicle Security	27
Vehicle Alarm System	
Immobilizer Operation	
•	20
Exterior Mirrors	
Power Mirrors	
Folding Mirrors	
Heated Mirrors	
Automatic Dimming Mirror	
Reverse Tilt Mirrors	30

Interior Mirrors	
Interior Rearview Mirrors	30
Manual Rearview Mirror	31
Automatic Dimming Rearview Mirror	31
Rear Camera Mirror	31
Windows	
Windows	33
Power Windows	33
Sun Visors	34

# Keys and Locks Keys

## **⚠** Warning

Leaving children in a vehicle with a remote key is dangerous and children or others could be seriously injured or killed. They could operate the power windows or other controls or make the vehicle move. The windows will function with the remote key in the vehicle, and children or others could be caught in the path of a closing window. Do not leave children in a vehicle with a remote key.





The mechanical key inside the remote key is used for the driver door and glove box.

To remove the mechanical key, press the button on the side of the remote key near the bottom, and pull the mechanical key out. Never pull the mechanical key out without pressing the button.

The mechanical key may have a bar-coded key tag that the dealer or qualified locksmith can use to make new keys. Store this information in a safe place, not in the vehicle.

See your dealer if a replacement key or additional key is needed.

If it becomes difficult to turn a key, inspect the key blade for debris. Periodically clean with a brush or pick.

With an active OnStar or connected service plan, an OnStar Advisor may remotely unlock the vehicle. See *OnStar Overview* ▷ 366.

## **Remote Key**

If there is a decrease in the remote key operating range:

• Check the distance. The remote key may be too far from the vehicle.

- Check the location. Other vehicles or objects may be blocking the signal.
- Check the remote key's battery. See "Battery Replacement" under Remote Key Operation 

  7.
- If the remote key is still not working correctly, see your dealer or a qualified technician for service.

## **Remote Key Operation**

The Keyless Access system allows for vehicle entry when the remote key is within 1 m (3 ft). See "Keyless Access Operation" later in this section

The remote key functions may work up to 60 m (197 ft) away from the vehicle.

Other conditions can affect the performance of the remote key. See *Remote Key* ▷ 7.



: Press to lock all doors.

8

If enabled, the turn signal lights flash once on the second press to indicate locking has occurred. If enabled, the horn chirps when is pressed again within three seconds. To view available settings from the infotainment screen, touch Settings > Vehicle > Remote Lock, Unlock, Start.

Pressing arms the alarm system. See Vehicle Alarm System 

→ 27.

If equipped and enabled with auto folding mirrors, press to fold the mirrors. Press to unfold the mirrors. To view available settings

from the infotainment screen, touch Settings > Vehicle > Comfort and Convenience. See Folding Mirrors ▷ 29.

: Press once to unlock only the driver door. If is pressed again within three seconds, all remaining doors unlock. The interior lights may come on and stay on for 20 seconds or until the vehicle is started.

If enabled, the turn signal lights flash twice to indicate unlocking has occurred. If enabled, the exterior lights may turn on. To view available settings from the infotainment screen, touch Settings > Vehicle > Remote Lock, Unlock, Start.

Pressing on the remote key disarms the alarm system. See *Vehicle Alarm System* 

27.

If equipped and enabled with remote window operation, press twice and hold until the windows fully open. To view available settings from the infotainment screen, touch Settings > Vehicle > Remote Lock, Unlock, Start. See Power Windows ♀ 33.

Press twice to open the tailgate. The vehicle must be in P (Park). See Tailgate  $\Rightarrow$  23.

ress twice to open the hood. To close the power hood, press twice and hold the second time until the hood closes. Releasing the button will stop the hood motion. The vehicle must be in P (Park). See Hood ▷ 15.

## **Keyless Access Operation**

The Keyless Access system allows for doors, tailgate, and hood to be accessed without removing the remote key from your pocket, purse, briefcase, etc. The remote key must be within 1 m (3 ft) of the tailgate, hood, or door being opened. If the vehicle has this feature, there will be a button on the outside door handles.

Keyless Access can be programmed to unlock all doors on the first lock/unlock press from the driver door. To view available settings from the infotainment screen, touch Settings > Vehicle > Remote Lock, Unlock, Start.

Remote keys 1 and 2 are linked to seating positions of memory 1 or 2. See *Memory Seats* 

⇒ 39.

### Keyless Unlocking/Locking from the Driver Door

When the doors are locked and the remote key is within 1 m (3 ft) of the door handle, pressing the lock/unlock button on the driver door handle will unlock the driver door. If the lock/unlock button is pressed again within five seconds, the doors, tailgate, and hood will unlock.



**Driver Side Shown, Passenger Side Similar** 

Pressing the lock/unlock button will cause all doors to lock if any of the following occur:

- It has been more than five seconds since the first lock/unlock button press.
- Two lock/unlock button presses were used to unlock all doors.
- Any vehicle door has been opened and all doors are now closed.

## Keyless Unlocking/Locking from the Passenger Doors

When the doors are locked and the remote key is within 1 m (3 ft) of the door handle, pressing the lock/unlock button on a passenger door handle will unlock all doors. Pressing the lock/unlock button will cause all doors to lock if any of the following occur:

- The lock/unlock button was used to unlock all doors.
- Any vehicle door has been opened and all doors are now closed.

### **Passive Locking**

The Keyless Access system will lock the vehicle several seconds after all doors are closed, if the vehicle is off and at least one remote key has been removed from the interior, or none remain in the interior.

If other electronic devices interfere with the remote key signal, the vehicle may not detect the remote key inside the vehicle. If passive locking is enabled, the doors may lock with the remote key inside the vehicle. Do not leave the remote key in an unattended vehicle.

To view available settings from the infotainment screen, touch Settings > Vehicle > Remote Lock, Unlock, Start.

### Temporary Disable of Passive Locking

Temporarily disable passive locking by pressing and holding and on the interior door switch with a door open for at least four seconds, or until three chimes are heard. Passive locking will then remain disabled until on the interior door is pressed, or until the vehicle is turned on

### Remote Left In Vehicle Alert

When the vehicle is turned off and a remote key is left in the vehicle, the horn will chirp three times after all doors are closed. To view available settings from the infotainment screen, touch Settings > Vehicle > Remote Lock, Unlock, Start.

### Remote Removed From Vehicle Alert

If the vehicle is on with a door open, and then all doors are closed, the vehicle will check for remote keys inside. If a remote key is not detected, the Driver Information Center will display NO KEY FOUND and the horn will chirp three times. This occurs only once each time the vehicle is driven. To view available settings from the infotainment screen, touch Settings > Vehicle > Remote Lock, Unlock, Start.

## **Keyless Tailgate Opening**

Press the touchpad on the tailgate to open the tailgate when all doors are unlocked, or when the remote keu is within 1 m (3 ft).

See Tailgate \$\dip 23.

## **Keyless Hood Opening**

Press the touchpad in the center of the front fascia once to open the hood when all doors are unlocked, or when the remote key is within 1 m (3 ft).

See Hood \$\sime\$ 15.

### **Key Access**

To access a vehicle with a weak remote key battery, see *Door Locks* \$\simes\$ 13.

## **Programming Remote Keys to the Vehicle**

Only remote keys programmed to the vehicle will work. If a remote key is lost or stolen, a replacement can be purchased and programmed through your dealer. The vehicle can be reprogrammed so that lost or stolen remote keys no longer work. Each vehicle can have up to eight remote keys programmed to it.

## Starting the Vehicle with a Low Remote Key Battery

For improved vehicle security, the remote key is equipped with a motion sensor. When starting the vehicle, if the remote key has been idle for an extended period of time, the Driver

Information Center may display KEY IN SLEEP MODE, MOVE KEY, THEN START. Move the remote key slightly and try starting the vehicle.

If the remote key battery is weak or if there is interference with the signal, the Driver Information Center may display NO KEY FOUND, REPLACE BATTERY IN KEY OR NO REMOTE KEY WAS DETECTED PLACE KEY IN KEY POCKET THEN START YOUR VEHICLE when starting the vehicle.

### To start the vehicle:



- 1. Place the remote key in the left cupholder.
- With the vehicle in P (Park) or N (Neutral) press the brake pedal or close the door. See Power Modes 

  186.

Replace the remote key battery as soon as possible.

## **Battery Replacement**

## **⚠** Warning

Never allow children to play with the remote key. The remote key contains a small battery, which can be a choking hazard. If swallowed, internal burns can occur, resulting in severe injury or death. Seek medical attention immediately if a battery is swallowed.

## 

To avoid personal injury, do not touch metal surfaces on the remote key when it has been exposed to extreme heat. These surfaces can be hot to the touch at temperatures above 59 °C (138 °F).

### Caution

When replacing the battery, do not touch any of the circuitry on the remote key. Static from your body could damage the remote key.

## **Caution**

Always replace the battery with the correct type. Replacing the battery with an incorrect type could potentially create a risk of battery explosion. Dispose of used batteries according to instructions and local laws. Do not attempt to burn, crush, or cut the used battery, and avoid exposing the battery to environments with extremely low air pressures or high temperatures.

### Caution

If the remote key is not reassembled properly, liquids could enter the housing and damage the circuitry, resulting in a remote key malfunction and/or failure. To

(Continued)

## Caution (Continued)

prevent damage, always follow the steps for remote key reassembly in this manual to ensure the remote key is sealed properly whenever the remote key is opened.

Replace the battery in the remote key soon if the Driver Information Center displays REPLACE RATTERY IN REMOTE KEY

To replace the battery:



 Press the button on the side of the remote key and pull the mechanical key out.
 Never pull the mechanical key out without pressing the button.

12



2. Use the mechanical key blade in the slot to remove the battery cover by hand.



3. Remove the battery cover.

- 4. Pull the seal by pulling on the tab to access the battery.
- 5. Remove the old battery. Do not use a metal object.
- Insert the new battery, positive side facing up. Replace with a CR2450 Lithium or equivalent battery.
- Place the seal back into the groove around the battery compartment.
- 8. Replace the battery cover by snapping it back into the remote key.
- 9. Reinsert the mechanical key.

### **Remote Start**

This feature starts the heating or air conditioning systems and the rear window defogger from outside the vehicle.

Use remote start to heat or cool the interior when the vehicle is plugged in to maximize electric range by utilizing electricity from the electrical outlet. Normal system operation will return after the vehicle has been turned on.

(x2): This button is on the remote key.

The climate control system will use the previous settings during a remote start. The rear defog may come on during a remote start based on cold ambient conditions. The rear defog indicator light will not come on during a remote start.

Laws in some local communities may restrict the use of remote starters. For example, some laws require a person using remote start to have the vehicle in view. Check local regulations for any requirements.

The vehicle cannot be remote started if:

- The remote key is in the vehicle
- 60 minutes of remote start time has been used
- The hazard flashers are on
- The vehicle is not in P (Park)
- The vehicle is already turned on

If the battery level is low, do not use the remote start feature. The battery may fully deplete.

The remote key range may be less while the vehicle is running.

Other conditions may affect the range and performance of the remote key. See *Remote Key*  $\triangleright$  7.

## Starting the Vehicle Using Remote Start

Press (x2) twice on the remote key. The turn signal lights will flash to confirm the remote start request was received. During the remote start, the parking lights will remain on as long as the vehicle is on.

The vehicle will turn off after 60 minutes, unless you stop the remote start before remote start cycle has completed or the vehicle is turned on.

Press the brake pedal or close the door to drive the vehicle. See Power Modes \$\sime\$ 186.

### **Extending Remote Start Time**

Remote start can be used for up to 60 minutes of total remote start time.

After a remote start of 60 minutes, or multiple shorter time starts totaling 60 minutes have been used, the vehicle must be started and then turned off before the remote start can be used again.

## **Canceling a Remote Start**

To cancel a remote start, do one of the following:

• Press (x2). The parking lights will turn off.

- Turn on the hazard warning flashers.
- Turn the vehicle on and then off.

## **Door Locks**

## 

Unlocked doors can be dangerous.

- Passengers, especially children, can easily open the doors and fall out of a moving vehicle. The doors can be unlocked and opened while the vehicle is moving. The chance of being thrown out of the vehicle in a crash is increased if the doors are not locked. So, all passengers should wear seat belts properly and the doors should be locked whenever the vehicle is driven.
- Do not pull the door handles while the vehicle is in motion. The door may open with only a single pull. Always use safety locks when children are in the rear seats. See Safety Locks \$\sime\$ 15.

(Continued)

## Warning (Continued)

- Young children who get into unlocked vehicles may be unable to get out. A child can be overcome by extreme heat and can suffer permanent injuries or even death from heat stroke. Always lock the vehicle whenever leaving it.
- Outsiders can easily enter through an unlocked door when you slow down or stop the vehicle. Locking the doors can help prevent this from happening.

To lock or unlock the doors from outside the vehicle.

- Press or or on the remote key. See Remote Key Operation \$\sim\$ 7.
- Use the mechanical key in the driver door.

To lock or unlock the doors from inside the vehicle:

- Press or or on the power door lock switch.
- Pulling an interior door handle will unlock the door. Pulling the door handle again unlatches it.

## **Keyless Access**



The remote key must be within 1 m (3 ft) of the eTrunk or door being opened or locked. Press the button on the door handle to open. See "Keyless Access Operation" in Remote Key Operation ▷ 7.

### **Free-Turning Locks**

The door key lock cylinder turns freely when either the wrong key is used, or the correct key is not fully inserted. The free-turning door lock feature prevents the lock cylinder from being forced open. To reset the lock cylinder, ensure the correct key is fully inserted into the lock cylinder. Rotate the key until you feel the

lock cylinder click back into place. Remove the key and reinsert fully, rotate the key to unlock the vehicle.

## **Power Door Locks**



: Press to lock the doors. The indicator light in the switch will illuminate when locked.

: Press to unlock the doors.

## **Delayed Locking**

This feature delays the locking of the doors until five seconds after all doors are closed.

When a is pressed on the power door lock switch while the door is open, a chime will sound three times indicating delayed locking is active.

The doors will lock automatically five seconds after all doors are closed. If a door is reopened before that time, the five-second timer will reset when all doors are closed again.

Press on the door lock switch again or press on the remote key to lock the doors immediately.

This feature can be programmed. To view available settings from the infotainment screen, touch Settings > Vehicle > Power Door Locks

## **Automatic Door Locks**

The vehicle is programmed to lock the doors automatically when all doors are closed, the vehicle is on, and the vehicle is shifted out of P (Park).

If a vehicle door is unlocked, and then opened and closed, the doors will lock either when your foot is removed from the brake or the vehicle speed becomes faster than 13 km/h (8 mph).

To unlock the doors:

- Press on the power door lock switch.
- Shift the vehicle into P (Park).

Automatic door locking can be programmed. To view available settings from the infotainment screen, touch Settings > Vehicle > Power Door Locks.

### **Lockout Protection**

This feature protects you from locking remote keys in the vehicle.


When the lock button is pressed, the driver door is open, and the vehicle is on, all of the doors will lock and then the driver door will unlock.

If the vehicle is off and locking is requested while a door is open, when all doors are closed the vehicle will check for remote keys inside. If a remote key is detected and the number of remote keys inside has not reduced, the driver door will unlock and the horn will sound three times.

This can be manually overridden by pressing and holding on the power door lock switch.

## Safety Locks

The rear door safety locks prevent passengers from opening the rear doors from inside the vehicle.

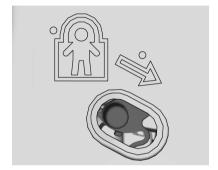

The safety locks are on the inside edge of the rear doors. To engage a safety lock:

- 1. Move the lever down to the lock position.
- 2. Close the door.
- Repeat Steps 1 and 2 on the other door, if desired.

To open a rear door when the safety lock is on:

 Unlock the door by pulling the inside handle, by pressing the power door unlock switch, or by using the remote key. 2. Open the door from the outside.

To disengage a safety lock:

- 1. Unlock the door and open it from the outside.
- 2. Move the lever up to unlock.
- Repeat Steps 1 and 2 on the other door, if desired.

## Doors Hood

## 

Do not drive the vehicle if the hood is not latched completely. The hood could open fully, block your vision, and cause a crash. You or others could be injured. Always close the hood completely before driving. When the hood is not closed, the vehicle will not exceed 42 km/h (26 mph). Close the hood to drive faster than 42 km/h (26 mph).

The hood can be opened in several ways to access the underhood compartment.

Ensure the hood is clear of any objects before opening.

If the hood is not closed, the electronic drive unit lockout prevents the vehicle from shifting out of P (Park). Close the hood to shift out of P (Park). Confirm the hood is closed by checking that the hood is flush with the surrounding components.

If the hood is closed but the ajar message is present, the electronic drive unit lockout can be overridden. Hold the brake for 20 seconds and then shift into D (Drive). The vehicle will not exceed 42 km/h (26 mph). See your dealer for service.

### **Power Hood Operation**


## 

You or others could be injured if caught in the path of the power hood. Always supervise the operation of the power hood until it is fully opened or closed and keep hands and other body parts away from the hood when in use.

Ensure the hood is clear of any objects before opening.

The vehicle must be in P (Park), doors unlocked, or the remote key in range of the vehicle to operate the power hood.

To open or close the power hood, do one of the following:

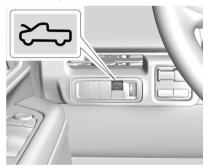

To open the hood, press the hood button on the instrument panel to the left of the steering wheel.

To close the hood, press and hold the hood button until the hood closes.



- If equipped, to open or close the hood, press the touchpad on the front fascia once, when the vehicle is unlocked, or the remote key is within 1 m (3 ft) of the vehicle.
- On the remote key, press 12 twice to open the power hood. To close the power hood, press 12 twice and hold the second time until the hood closes. Releasing the button will stop the hood motion. The vehicle must be in P (Park). See Remote Key Operation 7.

## **Pull to Close**

### **Caution**

Manually operating the hood during a power open or close can damage the hood system. Always wait for the power operation to complete before manually operating the hood.

To close the hood without using the switches, pull down on the hood until the power assist engages to close the rest of the way. A chime will sound to indicate power assist activation. The power assist will only activate when the hood is above a minimum open position.

Manually forcing the hood to open or close can damage the vehicle. Always allow the automatic operation to complete before using the hood again.

### **Open Settings**

To view available settings from the infotainment screen, touch Settings > Vehicle > Comfort and Convenience > Power Hood Opening.

### Maximum

The hood opens to the full open position. Use caution in this mode to avoid hitting overhead obstructions.

### Custom

To adjust the hood open angle, press the exterior switch or press the remote key button twice. When the hood reaches the desired position where the height is to be programmed, press the remote key button or the exterior switch one time. The hood will stop.

The hood can be manually moved up or down. Pulling the hood too quickly may cause power assist to engage and close the hood. Press the hood open button until the exterior lights flash and a chime sounds. The hood cannot be set below the preset minimum programmable height. If no exterior lights flash or sound, then the height adjustment may be too low.

The hood is restricted to only open to a default height when the vehicle is on a steep downhill grade.

## Off (Manual Operation)

Press and release the touch pad on the front grille. Lift the hood to open to a desired height.

Pull down on the hood until the power assist engages to close. A chime will sound to indicate power activation. The power assist will only activate when the hood is above a minimum open position.

To prevent damage to the vehicle, do not move the hood too quickly or use excessive force.

### Obstacle Detection Features

If the hood encounters an obstacle during a power open or close cycle, the hood will automatically reverse direction and move away from the obstacle. After removing the obstruction, the power hood operation can be used again.

If the vehicle is locked while the hood is closing and an obstacle is encountered that prevents the hood from completely closing, the horn will sound an alert that the hood did not close.

### **Falling Hood Detection**

If the power hood encounters excess weight or a possible mechanical failure, a repetitive chime will sound and the hood will automatically lower to a stable position. If the hood stops before fulling closing, carefully push the hood closed while keeping hands away from the edges of the hood.

If the hood continues to automatically close after opening, see your dealer for service before using the power hood.

Interfering with the power hood motion or manually closing the hood too quickly may activate the falling hood detection feature. Allow the hood to complete its operation and wait a few seconds before manually closing the hood.

## Operating the Hood When There is No Electrical Power

## **⚠** Warning

Do not drive the vehicle if the hood is not latched completely. The hood could open fully, block your vision, and cause a crash. You or others could be injured. Always close the hood completely before driving.

The manual release cable should only be used for service and/or emergency use, such as loss of vehicle electrical power. Do not store any cargo in the area near the hood release cable.



### To open the hood:

- Firmly pull the hood release cable twice to release the hood. It is on the lower left side of the instrument panel.
- 2. Go to the front of the vehicle and lift the hood to the desired height.

### To close the hood:

- Before closing the hood, make sure all cargo is properly stowed and does not go above or across the hood seal.
- 2. Pull the hood down until it is secured in the latch.

 Check to make sure the hood is latched completely. Push down on the hood to latch if it does not latch completely. Repeat this step with additional force if necessary.

When the hood is not latched, a message will display on the Driver Information Center (DIC) and the vehicle will not be able to shift out of P (Park). To override this function, press and hold the shift button and brake pedal until the DIC message shifter unlock complete is displayed. The vehicle's speed will be limited to 42 km/h (26 mph) when the hood is not completely closed.

If the vehicle has lost power, and the hood is open when the power is restored, the power hood and power closing latch will not operate. To allow powered hood operation again, the hood must be manually closed and fully latched.

## **Emergency Hood Release Button**

## ⚠ Warning

The emergency hood release button inside the underhood compartment will not function when the battery is disconnected or depleted. To avoid personal injury or death, always keep the hood fully closed and latched when storing the vehicle. If the hood is not latched, a person could climb into the underhood compartment and inadvertently close the hood. People should never climb inside the underhood compartment. Never shut the hood when a person is inside.




The underhood compartment is equipped with a glow-in-the-dark emergency hood release button. This button will glow following exposure to light. Press the button to open the hood from inside the underhood compartment.

## Midgate

## Midgate Operation

This vehicle may be equipped with a midgate and a removable rear glass panel. The midgate allows you to extend the length of the vehicle cargo area.

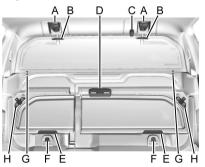

The following are the main components of the midgate system:

A. Glass Latch Levers

- B. Glass Grab Handles
- C. Glass Catch Release Button
- D. Glass Stow Retainer
- E. Glass Retaining Tabs
- F. Switch Buttons
- G. Glass Alignment Arrows
- H. Corner Secures

Water may flow between the doors and around the base of the midgate while being directed into a gutter system. There are water symbols located on the midgate switch buttons (F) to indicate that the midgate surface may be wet. Water drippings may be visible inside the vehicle when the full midgate or passthrough doors are opened.

## **Rear Glass Removal and Storage**

## **Marning**

If the removable rear glass is not stored properly, it could be thrown about the vehicle in a crash or sudden maneuver. People in the vehicle could be injured.

(Continued)

## Warning (Continued)

Whenever you store the rear glass in the vehicle, always be sure that it is stored securely in the Midgate® storage pocket.


Do not remove the rear glass when the rear defroster is on. If you do, you may see a discharge spark coming from the glass latch area.

To remove the rear glass:


- Make sure that the midgate defroster is turned off.
- Fold the rear seats. See Rear Seats 

  42.
   The front seats may have to be moved forward slightly to allow the rear seats to fold completely.


Although the rear glass can be removed without folding the rear seats, you will not be able to access the rear glass storage pocket. Be sure to fold the seats before removing the rear glass.

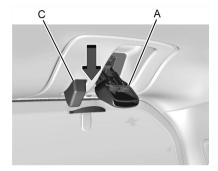


 Squeeze and pull down the glass latch levers (A), located near the upper corners of the rear glass, to unlatch. Once unlatched, the glass-catch release button (C) will catch the rear glass and prevent it from falling forward.

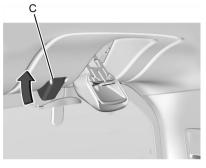


4. While holding the rear glass in place, press the glass-catch release button (C) and pull the top of the rear glass toward you using the grab handles (B) located at the top of the rear glass.

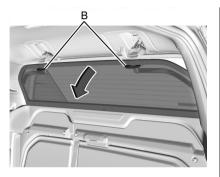

5. With the rear glass tilted toward you, lift it out from the lower window frame channel. Use the grab handles (B) to assist you in removing the rear glass.

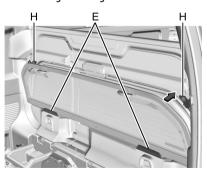

6. Open Corner Secures (H). Load the rear glass into the storage pocket in the midgate, quiding the lower edge of the rear glass behind the two rear glass retaining tabs (E). Hold the rear glass flat against the storage pocket, with grab handles facing you, until the next step.

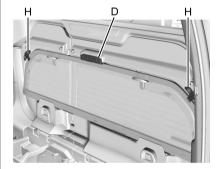

7. Push the glass against the glass stow retainer (D), located on the interior side of the door. Push until the glass handle slides down to lock the glass in place. Close corner secures (H).



Once the glass stow retainer handle is in the locked position with the corner secures closed, the rear glass is securely stored.

8. Push both glass latch levers (A) up to the locked position. You should hear a click when each latch lever locks correctly. The rear seats can be returned to the normal position when the rear glass is out and stored properly in the storage pocket. To reinstall the rear glass, follow steps 1–2,

then reverse steps 3–8.

# Lowering the Midgate with the Rear Glass in Place

The midgate can be lowered to allow the cargo area of your vehicle to extend into the cab. The rear glass can be either installed in its normal position, or it can be removed and stored in the rear glass storage pocket.

### To lower the midgate:

- Fold the rear seats. The front seats might have to be moved forward slightly to allow the rear seats to fold. See Rear Seats 

  42.
- Standing outside of the vehicle, hold the midgate securely so it does not fall forward. Press and hold the switch button depending on configuration below:

### Glass and Crossbar in, Pass Through Doors Only

- A short press on either switch button, of less than two seconds opens the larger door of the midgate.
- A long press on either switch button, of three or more seconds opens both doors of the midgate.
- A quick press and release is needed to open the smaller gate if the larger door is already open.

## Glass Stowed in Midgate, Full Open Cab

A long press of three or more seconds is required to open the midgate doors if the Rear Defogger is active.

A short press is required to open the midgate doors if the Rear Defogger is not active.

# Lowering the Midgate with the Rear Glass in the Storage Pocket



**Rear Glass Stored in Glass Storage Pocket** 



Midgate Lowered with Crossbar Attached

This procedure works the same as the procedure described previously, but when you lower the midgate with the rear glass in the stored position, you will notice that the entire crossbar will lower with the midgate. This is completely normal; however, since the crossbar lowers with the midgate, it will be heavier. As you lower the midgate be ready for the extra weight and do not let the midgate fall as you lower it.

## **Raising the Midgate**

To return the midgate to its normal position:



- Temporarily secure the seatbelt buckle to the opening slot in the door trim to move it out of the path of the midgate.
- Raise the midgate up with a firm swinging motion until it latches into place securely. This will help to ensure that the midgate closes with enough force to engage the latches.
- 3. Once the midgate is securely latched, release the seatbelt buckle from the slot in the door trim.

If the rear glass is removed and you would like to put it back, do so using the instructions given previously.

# Tailgate Manual Tailgate

## 

It is extremely dangerous to ride on the tailgate, even when the vehicle is operated at low speeds. People riding on the tailgate can easily lose their balance and fall in response to vehicle maneuvers. Falling from a moving vehicle may result in serious injuries or death. Do not allow people to ride on the tailgate. Be sure everyone in your vehicle is in a seat and using a seat belt properly.

Use the remote key to unlock the tailgate. Open the tailgate by lifting up on its handle while pulling the tailgate down.

To shut the tailgate, firmly push it upward until it latches.

After closing the tailgate, pull it back to be sure it is latched securely.

Some tailgates electronically control if the tailgate is locked or unlocked. If the battery is disconnected or has low voltage, and the tailgate is locked, the tailgate will not open. The tailgate will resume operation when the battery is reconnected or recharged.

## MultiPro Tailgate

## 

Make sure there is no one in the way of the power tailgate as it is opening and closing, and keep hands away from the tailgate hinges when in use. You or others could be injured if caught in the path of the power tailgate or tailgate hinges.

### Caution

To avoid damage to the tailgate, make sure the area behind the tailgate is clear before opening it.

### Caution

To avoid vehicle damage, do not open the inner tailgate when the primary tailgate is open if there is not enough distance to the attached hitch ball or trailer.

In the case of a dead battery, the tailgate cannot be opened manually. Contact your dealer or Roadside Assistance.

Use the remote key to lock or unlock the tailgate. See *Remote Key Operation*  $\Rightarrow$  7.

The vehicle must be in P (Park).

Switches in the inner tailgate prevent the primary tailgate from being opened when the inner tailgate is not fully closed. When the primary or inner tailgate are open, a message may display on the Driver Information Center (DIC).




To open the primary tailgate, use one of the following methods:



Press x
 x
 it wice quickly on the remote key until the tailgate moves. See Remote Key
 Operation ⇒ 7. The tailgate can be opened if the remote key is within 1 m (3 ft).



• If equipped, press on the instrument panel to the left of the steering wheel.

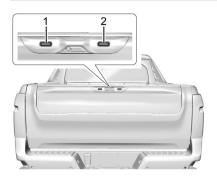

Press Button1 to open the primary tailgate.
Use the top of the tailgate to pull against
if additional force is required. A locked
tailgate can be opened if the remote key is
within 1 m (3 ft).

To close the primary tailgate, firmly push it upward until it latches. Pull it back to be sure it is latched securely.



To open the inner tailgate:

Press Button 2 on the tailgate handle after unlocking all doors. Pull the top of the tailgate to open.

The inner tailgate may be equipped with an enable/disable feature to prevent the inner tailgate from being opened when a hitch or other equipment is installed that could damage the inner tailgate. To disable the inner tailgate from opening, ensure that the remote key is within 1 m (3 ft) of the rear bumper and then hold Button 2 on the tailgate handle for seven seconds. The tail lights will flash to alert you that the inner gate has been disabled. The inner

and outer tailgate can still be operated like a traditional tailgate, but the inner gate will not be able to be opened alone.

To enable the inner tailgate function, hold Button 2 on the tailgate handle for seven seconds while the remote key is within 1 m (3 feet) until the tail lights flash. The inner tailgate can now be opened separately from the outer tailgate.



To close the inner tailgate with the primary tailgate closed, firmly push or pull it upward until it latches. Pull or push it back to be sure it is latched securely.

To close the inner tailgate with the primary tailgate open:

- Hold the primary tailgate and firmly close the inner tailgate.
- Raise the inner tailgate so it meets the primary tailgate and close together at the same time.

When using the tailgate step as a load stop, the load must be secured as the load could shift. See *Cargo Tie-Downs* ♀ 91.

## Tailgate Step (Step Mode)

## **⚠** Warning

To avoid personal injury, keep hands away from the hinges when operating the tailgate step.

With the primary and inner tailgates open, the tailgate step can be lowered to access the pickup bed.

## **Using the Step**

## Caution

When using the tailgate as a step, the load rating is 170 kg (375 lb), which includes a person and cargo. Overloading the tailgate step can cause damage to the tailgate system.



- To lower the tailgate step, press the button at the center of the step. Make sure it lowers to the fully open position.
- To close the tailgate step, lift it firmly. Make sure that both side latches are engaged.




Do not place a load on top of the step when using it as a load stop.

## **Applying Loads to Tailgates**

## Caution

Do not put ramp loads on the inner tailgate alone. Damage to the inner tailgate may occur.

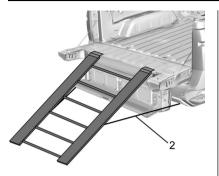

Preferred Method



Alternate Method


When applying any load to the tailgate, distribute the weight evenly across the width of the tailgate. This applies to all tailgate types.

- Use a load-distributing item (1).
- Secure the ramp to the bumper (2).

## **Vehicle Security**

This vehicle has theft-deterrent features, but is not theft-proof.

## **Vehicle Alarm System**

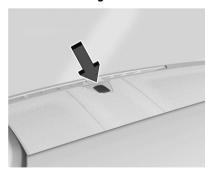

The indicator light, on the instrument panel near the windshield, indicates the status of the system.

## **Arming the Alarm System**

- Turn off the vehicle.
- 2. Lock the vehicle in one of three ways:
  - Use the remote key.
  - Use the Keyless Access system.
  - With a door open, press on the interior of the door.
- After 30 seconds the alarm system will arm, and the indicator light will begin to slowly flash. Press on the remote key a second time to bypass the 30-second delay and immediately arm the alarm system.

The vehicle alarm system will not arm if the doors are locked with the mechanical key.

If equipped, if the driver door is opened without first unlocking with the remote key, the horn will chirp and the lights will flash to indicate pre-alarm. If the vehicle is not started, or if the door is not unlocked by pressing on the remote key during the 10-second pre-alarm, the alarm will be activated.

The alarm will also be activated if a passenger door, the tailgate, or the hood is opened without first disarming the system. When the alarm is activated, the turn signals flash and the

horn sounds for about 30 seconds. The alarm system will then re-arm to monitor for the next unauthorized event.

## **Disarming the Alarm System**

To disarm the alarm system or turn off the alarm if it has been activated:

- Press on the remote key.
- Unlock the vehicle using the Keyless Access system.
- Start the vehicle.

To avoid setting off the alarm by accident:

- Lock the vehicle after all occupants have exited.
- Always unlock a door with the remote key, or use the Keyless Access system.
   Unlocking the driver door with the mechanical key will not disarm the system or turn off the alarm

## **How to Detect a Tamper Condition**

If is pressed on the remote key and the horn chirps three times, an alarm occurred previously while the alarm system was armed.

If the alarm has been activated, a message will appear on the Driver Information Center (DIC).

## **Immobilizer Operation**

This vehicle has a passive theft-deterrent system.

The system does not have to be manually armed or disarmed

The vehicle is automatically immobilized when the vehicle is turned off.

The immobilization system is disarmed when the vehicle is turned on and a valid remote key is present in the vehicle.



The security light in the instrument cluster comes on if there is a problem with arming or disarming the theft-deterrent system.

The system has one or more remote keys matched to an immobilizer control unit in the vehicle. Only a correctly matched remote key

will start the vehicle. If the remote key is ever damaged, you may not be able to start your vehicle.

When trying to start the vehicle, the security light may come on briefly.

If the vehicle does not start and the security light stays on, there is a problem with the system. Turn the vehicle off and try again.


If the vehicle will not turn on or off, and the remote key appears to be undamaged, try another remote key. You may also try placing the remote key in the backup location. See Remote Key Operation ♥ 7.

If the vehicle will not turn on or off with the other remote key or in the backup location, the vehicle needs service. If the vehicle does turn on or off, the first remote key may be faulty. See your dealer.

It is possible for the immobilizer system to learn new or replacement remote keys. Up to eight remote keys can be programmed for the vehicle. To program additional remote keys, see "Programming Remote Keys to the Vehicle" under Remote Key Operation ▷ 7.

Do not leave the remote key or device that disarms or deactivates the theft-deterrent system in the vehicle.

# Exterior Mirrors Power Mirrors

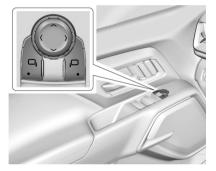

**Uplevel Truck Shown, Base Truck Similar** 

## To adjust the mirrors:

- Press ☐ or I☐ to select the driver or passenger side mirror. The indicator light comes on.
- 2. Press the arrows on the control pad to move the mirror up, down, right, or left.
- 3. Adjust the outside mirror so that the side of the vehicle and the area behind are seen.

Press either ☐ or ☐ again to deselect the mirror. The indicator light goes off.

## **Puddle Lights**

Puddle lights project light to the area of ground below the front and rear doors, on both the driver and passenger side. See Entry Lighting 


⇒ 136 and Exit Lighting ⇒ 137.

## **Memory Mirrors**

## Lane Change Alert (LCA)

The vehicle may have LCA. See Lane Change Alert (LCA)  $\Rightarrow$  250.

## **Folding Mirrors**

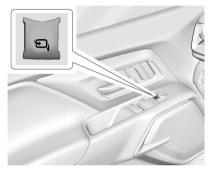

To adjust auto folding mirrors:

- 1. Press to fold the mirrors inward.
- 2. Press □ again to return the mirrors to the driving position.

The outside mirrors may automatically unfold when the vehicle is driven above 20 km/h (12 mph), but may be folded with the auto folding mirror switch. If the vehicle speed is driven above 40 km/h (25 mph), they may automatically unfold and may not be refolded with the auto folding mirror switch.

## **Resetting the Auto Folding Mirrors**

Reset the auto folding mirrors if:

30

- The mirrors are accidentally obstructed while folding.
- They are accidentally manually folded/unfolded.
- The mirrors do not stay in the unfolded position.
- The mirrors vibrate at normal driving speeds.

Fold and unfold the mirrors one time using the mirror controls to reset them to their normal position. A noise may be heard during the resetting of the auto folding mirrors. This sound is normal after a manual folding operation.

## **Remote Mirror Folding**

If the mirrors have been folded with the auto folding mirror switch, they may not be unfolded by use of remote key.

If the mirrors have not been folded with the auto folding mirror switch and the vehicle is in P (Park), they may be automatically folded/unfolded as follows:

- If doors are locked by pressing 
   ☐ on the remote key, the mirrors will fold. If doors are unlocked by pressing 
   ☐ on the remote key, the mirrors will unfold. See Remote Key Operation 
   ☐ 7.
- If doors are locked by pressing the door handle button, the mirrors will fold. If doors are unlocked by pressing the door handle button, the mirrors will unfold. See "Keyless Unlocking/Locking from the Driver Door" in Remote Key Operation 

  7.
- If passive locking is enabled and doors are locked by that feature, the mirrors will fold. See "Passive Locking" in Remote Key Operation 

  7.

## **Heated Mirrors**

To heat the mirrors, press REAR on the infotainment display.

See "Rear Window Defogger" under *Dual* Automatic Climate Control System 

→ 164.

## **Automatic Dimming Mirror**

The driver outside mirror automatically adjusts for the glare of the headlights from behind. This feature comes on when the vehicle is started.

## **Reverse Tilt Mirrors**

If equipped with reverse tilt mirrors and memory seats, the passenger and/or driver mirror tilts to a preselected position when the vehicle is in R (Reverse). This allows the curb to be seen when parallel parking.

The mirror(s) may move from their tilted position when:

- The vehicle is shifted out of R (Reverse) or remains in R (Reverse) for about 30 seconds.
- The vehicle is turned off.
- The vehicle is driven in R (Reverse) above a set speed.

To view available settings from the infotainment screen, touch Settings > Vehicle > Comfort and Convenience

# Interior Mirrors Interior Rearview Mirrors

Adjust the rearview mirror for a clear view of the area behind the vehicle.

Do not spray glass cleaner directly on the mirror. Use a soft towel dampened with water.

## **Manual Rearview Mirror**

If equipped, push the tab forward for daytime use and pull it rearward for nighttime use to avoid glare from headlights of other vehicles.


# Automatic Dimming Rearview Mirror

If equipped, automatic dimming reduces the glare of headlights from behind. The dimming feature comes on when the vehicle is started.


## **Rear Camera Mirror**

## **⚠** Warning


The Rear Camera Mirror (RCM) has a limited view. Portions of the road, vehicles, and other objects may not be seen. Do not drive or park the vehicle using only this camera. Objects may appear closer than they are. Check the outside mirrors or glance over your shoulder when making lane changes or merging. Failure to use proper care may result in injury, death, or vehicle damage.

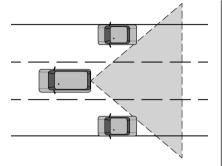

The rear camera mirror provides a wide angle camera view of the area behind the vehicle.

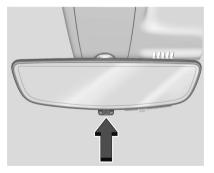

Pull the tab back to turn on the display. Push the tab to turn it off. When off the mirror automatically dims. Adjust the mirror for a clear view of the area behind the vehicle while the display is off.

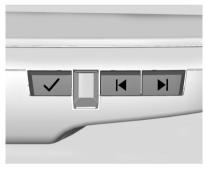

Press  $\checkmark$  to scroll through the adjustment options.

Press and to adjust the settings using the indicators on the mirror. The indicators will remain visible for five seconds after the last button activation, and the settings will remain saved.


The adjustment options are:



• Brightness




Zoom

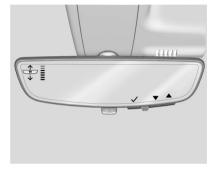

• Tilt

Troubleshooting

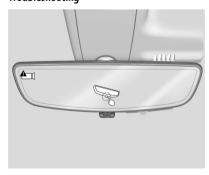

See your dealer for service if a blue screen and are displayed in the mirror, and the display shuts off. Also, push the tab forward to return to the automatic dimming mode.

The Rear Camera Mirror may not work properly or display a clear image if:

- There is glare from the sun or headlights.
  This may obstruct objects from view. If needed, push the tab to turn off the display.
- Dirt, snow, or other debris blocks the camera lens. Clean the lens with a soft damp cloth.
- The camera mounting on the vehicle has been damaged, and/or the position or the mounting angle of the camera has changed.



## Windows

## **⚠** Warning

Never leave a child, a helpless adult, or a pet alone in a vehicle, especially with the windows closed in warm or hot weather. They can be overcome by the extreme heat and suffer permanent injuries or even death from heat stroke.



The vehicle aerodynamics are designed to improve electric range performance. This may result in a pulsing sound when either rear

window is down and the front windows are up. To reduce the sound, open either a front window or the sunroof, if equipped.

## **Power Windows**

## **⚠** Warning

Children could be seriously injured or killed if caught in the path of a closing window. Never leave the remote key in a vehicle with children. When there are children in the rear seat, use the window lockout switch to prevent operation of the windows. See  $Keys \Leftrightarrow 6$ .



The power windows work when the vehicle is on.

Using the window switch, press to open or pull to close the window.

The windows may be temporarily disabled if they are used repeatedly within a short time.

### Window Lockout

If equipped, this feature prevents rear seat passengers from opening the rear windows.

To enable or disable this feature from the infotainment home screen, select Controls App > Power Window Lockout quick control.

## **Window Express Movement**

This feature allows you to open all windows fully without holding the switches down. Press the switch down fully, then release to express open the window.

If equipped, pull the window switch up fully and quickly release to express close the window.

Briefly press or pull the window switch in the same direction to stop that window's express movement.

## **Window Automatic Reversal System**

If equipped, the window automatic reversal system reverses and stops window movement if it detects an object in its path. Extreme cold or ice may cause the window to auto-reverse. The window will operate normally after the object or condition is removed.

## **Automatic Reversal System Override**

## ⚠ Warning

If automatic reversal system override is active, the window will not reverse automatically. You or others could be injured and the window could be damaged. Before using automatic reversal system override, make sure that all people and obstructions are clear of the window path.

When the vehicle is on, override the automatic reversal system by pulling and holding the window switch if conditions prevent the window from closing.

## **Programming the Power Windows**

Programming may be necessary if the vehicle battery is disconnected or discharged. To program any express-close window:

- 1. Close all doors.
- 2. Turn the vehicle on.
- Partially open the window you want to program, then close it and continue to pull the switch briefly after the window has fully closed.
- Open the window and continue to press the switch briefly after the window has fully opened.

### **Remote Window Operation**


If equipped and enabled, this feature allows you to open all the windows remotely.

To view available settings and enable Remote Window Operation, from the infotainment homescreen, touch Settings > Vehicle > Remote Lock. Unlock. Start.

If enabled, double-press and hold and on the remote key.

If equipped, to express close the driver and passenger windows, use the window switches.

## **Sun Visors**

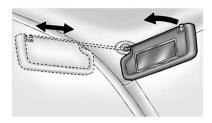

The driver and passenger sun visors can be pulled down to block windshield glare. If equipped, you can detach the visor from the center mount and pivot it from the windshield to the window or to extend it along the rod.

The vehicle may have vanity mirrors and card holders on the back of the sun visors. If equipped, swing down the sun visor to expose the vanity mirror.

## **Seats and Restraints**

Head Restraints Head Restraints35
Front Seats
Power Seat Adjustment37
Reclining Seatbacks38
Lumbar Adjustment38
Memory Seats39
Heated and Ventilated Front Seats41
Rear Seats
Rear Seat Reminder42
Rear Seats42
Heated Rear Seats45
Seat Belts
Seat Belts45
Buckle To Drive46
How to Wear Seat Belts Properly47
Lap-Shoulder Belt49
Seat Belt Use During Pregnancy51
Safety System Check51
Seat Belt Care52
Replacing Seat Belt System Parts After
a Crash52
a Crash52

When Should an Airbag Inflate?	
What Makes an Airbag Inflate?	56
How Does an Airbag Restrain?	56
What Will You See After an Airbag	
Inflates?	56
Rollover Detection Disable Button	57
Passenger Sensing System	59
Servicing the Airbag-Equipped Vehicle	62
Adding Equipment to the Airbag-	
Equipped Vehicle	62
Airbag System Check	63
Replacing Airbag System Parts After	
a Crash	63
Child Restraints	
Older Children	63
Infants and Young Children	
Child Restraint Systems	67
Where to Put the Restraint	69
Lower Anchors and Tethers for Children	
(LATCH System)	70
Replacing LATCH System Parts After	
a Crash	80
a Crash	80
Replacing LATCH System Parts After a Crash Securing Child Restraints (With the Seat Belt in the Rear Seat)	
a CrashSecuring Child Restraints (With the Seat Belt in the Rear Seat)	
a Crash Securing Child Restraints (With the	80

## **Head Restraints**

## **△** Warning

With head restraints that are not installed and adjusted properly, there is a greater chance that occupants will suffer a neck/spinal injury in a crash. Do not drive until the head restraints for all occupants are installed and adjusted properly.


### Front Seats

The front seats have adjustable head restraints in the outboard seating positions.



### 36 Seats and Restraints

Adjust the head restraint so that the top of the restraint is at the same height as the top of the occupant's head. This position reduces the chance of a neck injury in a crash.

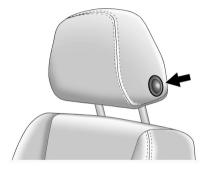


The height of the head restraint can be adjusted.

To raise or lower the head restraint, press the button on the side of the head restraint and pull up or push the head restraint down and release the button. After releasing the button, ensure the head restraint locks in place and is unable to move up or down.

The front seat outboard head restraints are not removable

### **Rear Head Restraints**

The rear seat has head restraints in the outboard seating positions that cannot be adjusted.

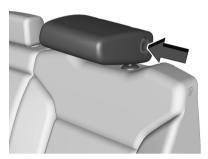

The rear seat outboard head restraints are designed to be folded.

The head restraint can be folded forward to allow for better visibility when the rear seat is unoccupied. To fold, press the button on the side of the head restraint.

When an occupant or child seat is in the seat, always return the head restraint to the upright position. Pull the head restraint up and push

it rearward until it locks into place. Push and pull on the head restraint to make sure that it is locked.

If you are installing a child restraint in the rear seat, see Lower Anchors and Tethers for Children (LATCH System) ⇒ 70.

Store the removed head restraints in a secure place. Reinstall the head restraints before the seating position is occupied.

### **Center Headrest**



The rear seat has adjustable headrest in the center seating position. The headrest can be fully lowered to allow for better visibility when the rear seat is unoccupied. When an occupant is in the seat, always return the head restraint

to the upright position. Pull the head restraint up and push it rearward until it locks into place. Push and pull on the head restraint to make sure that it is locked.

Always adjust the headrest so that the top of the headrest is at the same height as the top of the occupant's head.

To lower the headrest, press the button located on the top of the seatback and push the headrest down. After releasing the button, ensure the headrest locks in place and is unable to move up or down.

If you are installing a child restraint in the rear seat, see Lower Anchors and Tethers for Children (LATCH Sustem) \$\sip\$ 70.

Store the removed headrests in a secure place. Reinstall the headrests before the seating position is occupied.

## **Front Seats Power Seat Adjustment**



## 

You can lose control of the vehicle if you try to adjust a driver seat while the vehicle is moving. Adjust the driver seat only when the vehicle is not moving.



The power seats will work with the vehicle off. Children could operate the power seats and be injured. Never leave children alone in the vehicle.



To adjust a power seat, if equipped:

- Move the seat forward or rearward bu sliding the control forward or rearward.
- Raise or lower the front part of the seat cushion by moving the front of the control up or down.
- Raise or lower the seat by moving the rear of the control up or down.

To adjust the seatback, see Reclining Seatbacks \$ 38.

To adjust the lumbar support, see Lumbar Adjustment \$\sigma 38.

Some vehicles are equipped with a feature that activates a vibrating pulse alert in the driver seat to help the driver avoid crashes. See *Driver Attention Assist* ⇔ 252.

### **Reclining Seatbacks**

## ⚠ Warning

Sitting in a reclined position when the vehicle is in motion can be dangerous. Even when buckled up, the seat belts cannot do their job.

The shoulder belt will not be against your body. Instead, it will be in front of you. In a crash, you could go into it, receiving neck or other injuries.

The lap belt could go up over your abdomen. The belt forces would be there, not at your pelvic bones. This could cause serious internal injuries.

For proper protection when the vehicle is in motion, have the seatback upright. Then sit well back in the seat and wear the seat belt properly.



Do not have a seatback reclined if the vehicle is moving.



To recline a power seatback, if equipped:

- Tilt the top of the control rearward to recline
- Tilt the top of the control forward to raise.

### **Lumbar Adjustment**



To adjust the lumbar support, if equipped:

- Press and hold the front or rear of the control to increase or decrease lumbar support.
- If equipped, press and hold the top or bottom of the control to raise or lower lumbar support.

## **Memory Seats**



If equipped, the memory seat feature allows drivers to save their unique driving positions and a shared exit position. Other feature positions, such as power mirrors, may also be saved.

### **Identifying Driver Number**

The vehicle identifies the current driver by their remote key number 1–8. The current remote key number may be identified by a Driver Information Center welcome message, "You are driver x for memory recalls." This message is displayed the first few times the vehicle is turned on when a different remote key is used. For Seat Entry Memory to work

properly, save positions to the 1 or 2 memory button matching the driver number of this welcome message. To aid in identifying remote key IDs, it is recommended to only carry one remote key when entering the vehicle. Perform the following if the welcome message is not displayed:

- 1. Move all keys and remote keys away from the vehicle.
- Start the vehicle with another remote key. A Driver Information Center welcome message should display indicating the driver number of the other remote key. Turn the vehicle off and remove the other key or remote key from the vehicle.
- Start the vehicle with the initial key or remote key. The Driver Information Center welcome message should display the driver number of the initial remote key.

### **Saving Seating Positions**

Read these instructions completely before saving memory positions.

To save preferred driving positions to 1 and 2:

- Turn the vehicle on. A Driver Information Center welcome message may indicate the driver number of the current remote key.
   See "Identifying Driver Number" previously in this section.
- 2. Adjust all available memory features to the desired driving position.
- 3. Press and release SET; an audible alert will sound.
- 4. Immediately upon releasing SET, press and hold memory button 1 or 2 matching the current remote key number until two audible alerts sound. If too much time passes between releasing SET and pressing 1 or 2, the two audible alerts will not sound indicating memory position were not saved. Repeat Steps 3 and 4 to try again.
- 5. Repeat Steps 1–4 for the other remote key 1 or 2 using the other 1 or 2 memory button.

It is recommended to save the preferred driving positions to both 1 and 2 if you are the only driver.

To save the common exit seating position to that is used by all drivers for Manually Recalling Seating Positions and Auto Seat Exit Memory Recall features, repeat Steps 1–4 using the exit button.

### **Manually Recalling Seating Positions**

Press and hold 1, 2, or Do button until the recall is complete, to recall the positions previously saved to that button.

Manual Memory recall movement for 1, 2 or to buttons may be initiated and will complete to the saved memory position if the vehicle is in or out of P (Park).

### **Enabling Automatic Recalls**

- Seat Entry Memory moves the driver seat to the selected 1 or 2 position when the vehicle is started. Select Settings > Vehicle > Seating Position > Seat Entry Memory > ON or OFF. See "Auto Seat Entry Memory Recall" later in this section.
- Seat Exit Memory moves the driver seat to the preferred exit position of the to button when the vehicle is turned off and the door is opened. Select Settings > Vehicle

> Seating Position > Seat Exit Memory > Select ON or OFF. See "Auto Seat Exit Memory Recall" later in this section.

### **Auto Seat Entry Memory Recall**

Seat Entry Memory will automatically begin movement to the seating positions of the 1 or 2 button corresponding to remote key number 1 or 2 detected by the vehicle when:

- The vehicle is turned ON.
- Seating positions have been previously saved to the same 1 or 2 button. See "Saving Seating Positions" previously in this section.
- Seat Entry Memory is enabled. See "Enabling Automatic Recalls" previously in this section.
- The vehicle is in P (Park).

Seat Entry Memory Recall will continue if the vehicle is shifted out of P (Park) prior to reaching the saved memory position.

If the saved memory seat position does not automatically recall, verify the recall is enabled. See "Enabling Automatic Recalls" previously in this section. If the memory seat recalls to the wrong position, remote key number 1 or 2 may not match the memory button number positions they were saved to. Try the other remote key or try saving the positions to the other 1 or 2 memory button. See "Saving Seating Positions" previously in this section.

Automatic Seat Entry Memory recalls are only available for remote key numbers 1 and 2. Remote keys 3–8 will not provide Seat Entry Memory recalls.

### **Auto Seat Exit Memory Recall**

Seat Exit Memory will begin movement to the seating position of the button when:

- The vehicle is turned off and the driver door is open or opened within a short time.
- A seating position has been previously been saved to the ran memory button. See "Saving Seating Positions" previously in this section.
- Seat Exit Memory is enabled. See "Enabling Automatic Recalls" previously in this section.
- The vehicle is in P (Park).

Seat Exit Memory recall will continue if the vehicle is shifted out of P (Park) prior to reaching the saved memory position.

Seat Exit Memory is not linked to a remote key. The seating position saved to () is used for all drivers.

### **Cancel Memory Seating Recalls**

- During any memory recall:
   Press a power seat control
   Press SET memory button
- During Manual memory recall:

  Release 1, 2, or nemory button
- During Auto Seat Entry Memory Recall:
   Turn vehicle off
   Press SET, 1, 2, or memory buttons
- During Auto Seat Exit Memory Recall: Press SET, 1, 2, or (1) memory buttons


### Obstructions

If something has blocked the seat while recalling a memory position, the recall may stop. Remove the obstruction and try the recall again. If the memory position still does not recall, see your dealer.

### **Heated and Ventilated Front Seats**

## **⚠** Warning

If temperature change or pain to the skin cannot be felt, the seat heater may cause burns. To reduce the risk of burns, use care when using the seat heater, especially for long periods of time. Do not place anything on the seat that insulates against heat, such as a blanket, cushion, cover, or similar item. This may cause the seat heater to overheat. An overheated seat heater may cause a burn or may damage the seat.

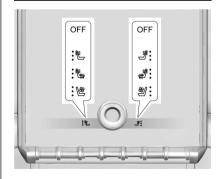

To operate, select the heated and ventilated seats launch icon. The panel will remain open for approximately five seconds.

Select **to** or **to** heat the driver or passenger seatback.

Select to heat the driver or passenger seatback and cushion.

Select so, if available, to ventilate the driver or passenger seat. A ventilated seat has a fan that circulates air through the seat. The air is not cooled. When this feature is off, the heated and ventilated seat symbols are white. When a heated seat is on, the symbol is red. When a ventilated seat is on, the symbol is blue.

Select the icon once for the highest setting. With each press of the icon, the seat will change to the next lower setting, and then to off. The indicator lights next to the icons indicate three for the highest setting and one for the lowest. If the heated seats are on high, the level may automatically be lowered after approximately 45 minutes.

The passenger seat may take longer to heat up.

#### **Auto Heated and Ventilated Seats**

When the vehicle is on, this feature will automatically activate the heated or ventilated seats at the level required by the vehicle's interior temperature.

The active high, medium, low, or off heated or ventilated seat level will be indicated by the manual heated or ventilated seat buttons on the door panel. Use the manual heated or ventilated seat buttons on the door panel to turn auto heated or ventilated seats off. If the passenger seat is unoccupied, the auto heated or ventilated seats feature will not activate that seat. To enable or disable auto heated or ventilated seats, select Settings > Vehicle > Climate and Air Quality > Auto Cooled or Auto Heated Seats > ON or OFF.

### **Remote Start Heated and Ventilated Seats**

During a remote start, the heated or ventilated seats, if equipped, can be turned on automatically. When it is cold outside, the heated seats turn on, and when it is hot outside the ventilated seats turn on. If the auto heated or ventilated seats feature is not on when then vehicle is turned on, the heated or ventilated seats may be canceled. If necessary, press the

heated or ventilated seat button to use the heated or ventilated seats after the vehicle is started.

The heated or ventilated seat indicator lights may turn on during a remote start.

The temperature performance of an unoccupied seat may be reduced. This is normal.

To enable or disable remote start heated or ventilated seats, select Settings > Vehicle > Remote Lock, Unlock, and Start > Remote Start Auto Heat Seats or Remote Start Auto Cool Seats > ON or OFF. See Remote Start ❖ 12.

### **Rear Seats**

### **Rear Seat Reminder**

If equipped, the message REAR SEAT REMINDER LOOK IN REAR SEAT displays in the Driver Information Center under certain conditions indicating there may be an item or passenger in the rear seat. Check the rear seat before exiting the vehicle.

This feature will activate when a second row door is opened while the vehicle is on or up to 10 minutes before the vehicle is turned on. There will be the Driver Information Center

message and an audible alert activated when the vehicle is turned off. The alert does not directly detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed, indicating that there may be something in the rear seat.

The feature is active only once each time the vehicle is turned on and off, and will require reactivation by opening and closing the second row doors. There may be an alert even when there is nothing in the rear seat; for example, if a child entered the vehicle through the rear door and left the vehicle without the vehicle being shut off.

The feature can be turned on or off. Select Settings > Vehicle > Rear Seat Reminder > ON or OFF.

### Rear Seats

# Folding the Rear Seat Cushion (Uplevel Models)

Either side of the rear seat cushion can be folded down for added cargo space.

## **⚠** Warning

Folding a rear seat with the seat belts still fastened may cause damage to the seat or the seat belts. Always unbuckle the seat belts and return them to their normal stowed position before folding a rear seat.

## ⚠ Warning

Do not operate the vehicle with the rear seat cushion(s) folded down and the rear seatbacks in the upright position. The folded seat cushion is not locked. It can move when the vehicle is in motion. People in the vehicle could be injured in a sudden stop or crash. Be sure to return the seat cushion to the seating position or fold the adjoining seatback down before driving the vehicle. Push and pull on the seat cushion to make sure it is locked into place.

Make sure that nothing is on the seat cushion and the floor area in front of the rear seats is clear.



Pull the strap on the rear edge of the rear seat cushion to release the cushion. Tilt the seat cushion forward toward the front of the vehicle.

# Raising the Rear Seat Cushion (Uplevel Models)

Return the seat cushion to its original position and push down on the rear part of the seat cushion until it latches. Make sure the seat belts and seat belt buckles are not trapped under the seat cushion and are properly positioned for use.

# Folding the Rear Seatback (Uplevel Models)

## 

Folding a rear seatback with the head restraint in the upright position may cause damage to the seat or the head restraint. Always fold the head restraint before folding the seatback. See *Head Restraints* 

⇒ 35.

### Caution

Folding the rear seatback prior to tilting the seat cushion forward may damage the rear seat. Always tilt the rear seat cushion forward before folding the seatback.

Either side of the seatback can be folded down for more cargo space. Fold a seatback only when the vehicle is not moving.

The seat cushion must be tilted forward before the folding seatback is folded down. Otherwise, the seatback will not fold down properly.



Pull the release strap located below the seat cushion to unlock the seatback. Fold the seatback forward and down.

### Raising the Seatback (Uplevel Models)

## ⚠ Warning

A seat belt that is improperly routed, not properly attached, or twisted will not provide the protection needed in a crash. The person wearing the belt could be seriously injured. After restoring the seat to the normal seating position, always check to be sure that the seat belts are properly routed and attached, and are not twisted.

- Lift the seatback and push it rearward to lock it in place.
  - Make sure the seat belts are not pinched by the seatback locking mechanism.
- 2. Push and pull the top of the seatback to be sure it is locked into position.

If additional cargo space is not needed, the seatbacks should be kept in the upright, locked position.

# Folding the Rear Seat Cushion (Base Models)

## **⚠** Warning

Folding a rear seat with the seat belts still fastened may cause damage to the seat or the seat belts. Always unbuckle the seat belts and return them to their normal stowed position before folding a rear seat.

## ⚠ Warning

A seat belt that is improperly routed, not properly attached, or twisted will not provide the protection needed in a crash. The person wearing the belt could be seriously injured. After restoring the seat to the normal seating position, always check to be sure that the seat belts are properly routed and attached, and are not twisted.

Either side of the rear seat cushion can be folded up for added cargo space.

Make sure that nothing is on the seat cushion and the floor area in front of the rear seats is clear.



To fold the seat, slowly pull the seat cushion up.
To return the seat to the normal seating position, slowly pull the seat cushion down.

### **Heated Rear Seats**

## **⚠** Warning

If you cannot feel temperature change or pain to the skin, the seat heater may cause burns. See the Warning under Heated and Ventilated Front Seats \$ 41.

If available, the buttons are on the rear of the center console. To operate, the vehicle must be on

Press ## or ## to heat the left or right outboard seat cushion. An indicator on the climate control display appears when this feature is on.

This feature turns on at the highest setting. With each press of the button, the heated seat changes to the next lower setting, and then off. Three lights indicate the highest setting, and one light indicates the lowest. If the heated seats are on high, the level may automatically be lowered after approximately 45 minutes.

### **Remote Start Heated Seats**

If equipped, the heated seats will turn on automatically during a remote start if it is cold outside. The heated seat indicators may come on during this operation. The heated seats may cancel when the vehicle is turned on. These features can be manually selected with the heated seat buttons after the vehicle is turned on.

The temperature performance of an unoccupied seat may be reduced. This is normal.

To enable or disable remote start heated seats, select Settings > Vehicle > Remote Lock, Unlock, and Start > Remote Start Auto Heat Seats > ON or OFF. See *Remote Start* ▷ 12.

### **Seat Belts**

This section describes how to use seat belts properly, and some things not to do.

## **⚠** Warning

Do not let anyone ride where a seat belt cannot be worn properly. In a crash, if you or your passenger(s) are not wearing seat belts, injuries can be much worse than if you are wearing seat belts. You can be seriously injured or killed by hitting things inside the vehicle harder or by being ejected from the vehicle. In addition, anyone who is not buckled up can strike other passengers in the vehicle.


It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, passengers riding in these areas are more likely to be seriously injured or killed. Do not allow passengers to ride in any area of the vehicle that is not equipped with seats and seat belts.

Always wear a seat belt, and check that all passenger(s) are restrained properly too.

This vehicle has indicators as a reminder to buckle the seat belts. See *Seat Belt Reminders* 

⇒ 106.

### Why Seat Belts Work

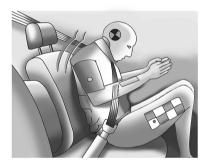

When riding in a vehicle, you travel as fast as the vehicle does. If the vehicle stops suddenly, you keep going until something stops you. It could be the windshield, the instrument panel, or the seat belts!

When you wear a seat belt, you and the vehicle slow down together. There is more time to stop because you stop over a longer distance, and when worn properly, your strongest bones take the forces from the seat belts. That is why wearing seat belts makes such good sense.

### **Questions and Answers About Seat Belts**

- Q: Will I be trapped in the vehicle after a crash if I am wearing a seat belt?
- A: You could be whether you are wearing a seat belt or not. Your chance of being conscious during and after a crash, so you can unbuckle and get out, is much greater if you are belted.
- Q: If my vehicle has airbags, why should I have to wear seat helts?
- A: Airbags are supplemental systems only. They work with seat belts not instead of them. Whether or not an airbag is provided, all occupants still have to buckle up to get the most protection.

Also, in nearly all regions, the law requires wearing seat belts.

### **Buckle To Drive**

If equipped, and Teen Driver is active, this feature delays the vehicle from being shifted out of P (Park) when the driver seat belt is not buckled. The Buckle to Drive feature must be

turned ON in the Teen Driver Personalization menu in the infotainment system to work. See *Teen Driver* ♀ 159.

If the vehicle is on and the brake pedal is pressed with the vehicle in P (Park) but the driver seat belt is not buckled, a message displays in the Driver Information Center (DIC) and the vehicle will be delayed from shifting out of P (Park). Buckle the driver seat belt to clear the message and shift out of P (Park). Shifting from P (Park) will be delayed once for each time the vehicle is started.

On some models, Buckle to Drive may also delay shifting out of P (Park) if a front passenger seat belt is unbuckled. A message displays in the DIC. Buckle the front passenger seat belt to shift out of P (Park). This feature may delay the vehicle from shifting out of P (Park) if an object, such as a briefcase, handbag, grocery bag, laptop, or other electronic device, is on the front passenger seat. If this happens, remove the object from the seat or buckle the seat belt to shift out of P (Park).

If the driver, or on some vehicles, the present front passenger remain unbuckled, the DIC message will turn off after several seconds and the vehicle can be shifted out of P (Park). See "Seat Belts" and "Child Restraints" in the Index for information about the importance of proper restraint use.

If the driver seat belt or the front passenger seat belt is unbuckled when driving, the seat belt reminder chime and light(s) will come on. See Seat Belt Reminders > 106. This feature may not function properly if the airbag readiness light is on. See Airbag Readiness Light > 107.


### **How to Wear Seat Belts Properly**

Follow these rules for everyone's protection.

There are additional things to know about seat belts and children, including smaller children and infants. If a child will be riding in the vehicle, see *Older Children* ⇔ *63* or *Infants and Young Children* ⇔ *65*. Review and follow the rules for children in addition to the following rules.

It is very important for all occupants to buckle up. Statistics show that unbelted people are hurt more often in crashes than those who are wearing seat belts.


There are important things to know about wearing a seat belt properly.

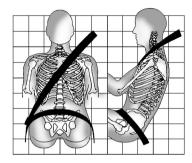


- Sit up straight and always keep your feet on the floor in front of you (if possible).
- Wear the lap part of the belt low and snug on the hips, just touching the thighs. In a crash, this applies force to the strong pelvic bones and you would be less likely to slide under the lap belt. If you slid under it, the belt would apply force on your abdomen. This could cause serious or even fatal injuries.
- Wear the shoulder belt over the shoulder and across the chest. These parts of the body are best able to take belt restraining forces. The shoulder belt locks if there is a sudden stop or crash.


## ⚠ Warning


You can be seriously injured, or even killed, by not wearing your seat belt properly.

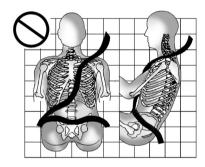

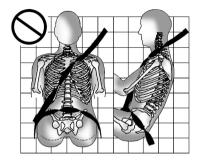


Never allow the lap or shoulder belt to become loose or twisted.

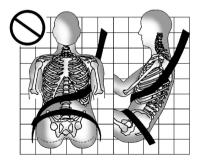


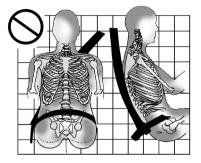

Never wear the shoulder belt under both arms or behind your back.

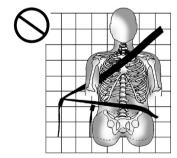

Always use the correct buckle for your seating position.

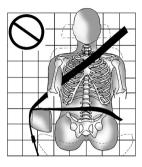

Never route the lap or shoulder belt over an armrest.

## **⚠** Warning

The seat belt can be pinched if it is routed under plastic trim on the seat, such as trim around the rear seatback folding handle or side airbag. In a crash, pinched seat belts might not provide adequate protection. Never allow seat belts to be routed under plastic trim pieces.

## **⚠** Warning


You can be seriously injured or killed if the shoulder belt is worn behind your back, under your legs, or wrapped around your neck. The shoulder belt can tighten but cannot be loosened if it is locked. The shoulder belt locks when it is pulled all the way out of the retractor. It unlocks when the shoulder belt is allowed to go all the way back into the retractor, but it cannot do this if it is wrapped around you. You may have to cut the seat belt if it is locked and tightened around you.

### **Lap-Shoulder Belt**

All seating positions in the vehicle have a lapshoulder belt.

The following instructions explain how to wear a lap-shoulder belt properly.

 Adjust the seat, if the seat is adjustable, so you can sit up straight. To see how, see "Seats" in the Index.

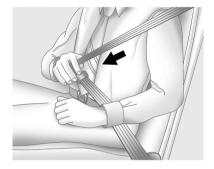

2. Pick up the latch plate and pull the belt across you. Do not let it get twisted.


The lap-shoulder belt may lock if you pull the belt across you very quickly. If this happens, let the belt go back slightly to unlock it. Then pull the belt across you more slowly.

If the shoulder portion of a passenger belt is pulled out all the way, the child restraint locking feature may be engaged. See *Child Restraint Systems* ⇔ 67. If this occurs, let the belt go back all the way and start again. If the locking feature stays engaged after letting the belt go back to stowed position

on the seat, move the seat rearward or recline the seat until the shoulder belt retractor lock releases.



If the webbing locks in the latch plate before it reaches the buckle, tilt the latch plate flat to unlock.

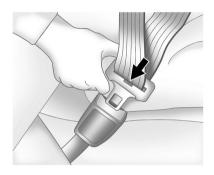


3. Push the latch plate into the buckle until it clicks.


Pull up on the latch plate to make sure it is secure.

Position the release pushbutton on the buckle so that the seat belt could be quickly unbuckled if necessary.

If equipped with a shoulder belt height adjuster, move it to the height that is right for you. See "Shoulder Belt Height Adjuster" later in this section for instructions on use and important safety information.

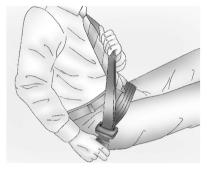

4. To make the lap part tight, pull up on the shoulder belt.

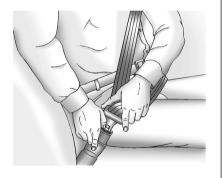

To unlatch the belt, push the release pushbutton on the buckle. The belt should return to its stowed position.

Always stow the seat belt slowly. If the seat belt webbing returns quickly to the stowed position, the retractor may lock and cannot be pulled out. If this happens, pull the seat belt straight out firmly to unlock the webbing, and then release it. If the webbing is still locked in the retractor, see your dealer.

Before a door is closed, be sure the seat belt is out of the way. If a door is slammed against a seat belt, damage can occur to both the seat belt and the vehicle.

### Shoulder Belt Height Adjuster

The vehicle may have a shoulder belt height adjuster for the driver and front outboard passenger positions.

Adjust the height so the shoulder portion of the belt is on the shoulder and not falling off of it. The belt should be close to, but not contacting, the neck. Improper shoulder belt height adjustment could reduce the effectiveness of the seat belt in a crash. See How to Wear Seat Belts Properly \$\triangle\$ 47.



Push the release button to move the height adjuster to the desired position.

After the adjuster is set to the desired position, try to move it down without pushing the release button to make sure it has locked into position.

### **Seat Belt Pretensioners**

This vehicle has seat belt pretensioners for the front outboard occupants. Although the seat belt pretensioners cannot be seen, they are part of the seat belt assembly. They can help tighten the seat belts during the early stages of a moderate to severe frontal, near frontal, or rear crash if the threshold conditions for pretensioner activation are met. Seat belt pretensioners can also help tighten the seat belts in a side crash or rollover event.

Pretensioners work only once. If the pretensioners activate in a crash, the pretensioners and probably other parts of the vehicle seat belt system will need to be replaced. See *Replacing Seat Belt System Parts After a Crash* ⇔ 52.

Do not sit on the outboard seat belt while entering or exiting the vehicle or at any time while sitting in the seat. Sitting on the seat belt can damage the webbing and hardware.

## Seat Belt Use During Pregnancy

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear seat belts.



A pregnant woman should wear a lap-shoulder belt, and the lap portion should be worn as low as possible, below the rounding, throughout the pregnancy.

The best way to protect the fetus is to protect the mother. When a seat belt is worn properly, it is more likely that the fetus will not be hurt in a crash. For pregnant women, as for anyone, the key to making seat belts effective is wearing them properly.

## Safety System Check

Periodically check the seat belt reminder, seat belts, buckles, latch plates, retractors, shoulder belt height adjusters (if equipped), and seat belt anchorages to make sure they are all in

working order. Look for any other loose or damaged seat belt system parts that might keep a seat belt system from performing properly. See your dealer to have it repaired. Torn, frayed, or twisted seat belts may not protect you in a crash. Torn or frayed seat belts can rip apart under impact forces. If a belt is torn or frayed, have it replaced immediately. If a belt is twisted, it may be possible to untwist by reversing the latch plate on the webbing. If the twist cannot be corrected, ask your dealer to fix it.

Make sure the seat belt reminder light is working. See *Seat Belt Reminders* ♀ 106.
Keep seat belts clean and dry. See *Seat Belt Care* 

### **Seat Belt Care**

\$ 52.

Keep belts clean and dry.

Seat belts should be properly cared for and maintained

Seat belt hardware should be kept dry and free of dust or debris. As necessary exterior hard surfaces and seat belt webbing may be lightly cleaned with mild soap and water. Ensure there is not excessive dust or debris in the mechanism. If dust or debris exists in the

system after proper cleaning please see the dealer. Parts may need to be replaced to ensure proper functionality of the system.

## ⚠ Warning

Do not bleach or dye seat belt webbing. It may severely weaken the webbing. In a crash, they might not be able to provide adequate protection. Clean and rinse seat belt webbing only with mild soap and lukewarm water. Allow the webbing to dry.

## Replacing Seat Belt System Parts After a Crash

### **⚠** Warning

A crash can damage the seat belt system in the vehicle. A damaged seat belt system may not properly protect the person using it, resulting in serious injury or even death in a crash. To help make sure the seat belt systems are working properly after a crash, have them inspected and any necessary replacements made as soon as possible.

After a minor crash, replacement of seat belts may not be necessary. But the seat belt assemblies that were used during any crash may have been stressed or damaged. See your dealer to have the seat belt assemblies inspected or replaced.

New parts and repairs may be necessary even if the seat belt system was not being used at the time of the crash

Have the seat belt pretensioners checked if the vehicle has been in a crash, or if the airbag readiness light stays on after you start the vehicle or while you are driving. See *Airbag Readiness Light* 

→ 107.

## **Airbag System**

The vehicle has the following airbags:

- A frontal airbag for the driver
- A frontal airbag for the front outboard passenger
- A seat-mounted side impact airbag for the driver
- A seat-mounted side impact airbag for the front outboard passenger
- A roof-rail airbag for the driver and the passenger seated directly behind the driver

 A roof-rail airbag for the front outboard passenger and the passenger seated directly behind the front outboard passenger

All vehicle airbags have the word AIRBAG on the trim or on a label near the deployment opening.

For frontal airbags, the word AIRBAG is on the center of the steering wheel for the driver and on the instrument panel for the front outboard passenger.

For seat-mounted side impact airbags, the word AIRBAG is on the side of the seatback or side of the seat closest to the door.

For roof-rail airbags, the word AIRBAG is on the ceiling or trim.

Airbags are designed to supplement the protection provided by seat belts. Even though today's airbags are also designed to help reduce the risk of injury from the force of an inflating bag, all airbags must inflate very quickly to do their job.

Here are the most important things to know about the airbag system:

## **⚠** Warning

You can be severely injured or killed in a crash if you are not wearing your seat belt, even with airbags. Airbags are designed to work with seat belts, not replace them. Also, airbags are not designed to inflate in every crash. In some crashes seat belts are the only restraint. See When Should an Airbag Inflate? ▷ 55.

Wearing your seat belt during a crash helps reduce your chance of hitting things inside the vehicle or being ejected from it. Airbags are "supplemental restraints" to the seat belts. Everyone in the vehicle should wear a seat belt properly, whether or not there is an airbag for that person.

## **⚠** Warning

Because airbags inflate with great force and faster than the blink of an eye, anyone who is up against, or very close to, any airbag when it inflates can be seriously injured or killed. Do not sit unnecessarily close to any

(Continued)

### Warning (Continued)

airbag, as you would be if sitting on the edge of the seat or leaning forward. Seat belts help keep you in position before and during a crash. Always wear a seat belt, even with airbags. The driver should sit as far back as possible while still maintaining control of the vehicle. The seat belts and the front outboard passenger airbags are most effective when you are sitting well back and upright in the seat with both feet on the floor.

Occupants should not lean on or sleep against the door or side windows in seating positions with seat-mounted side impact airbags and/or roof-rail airbags.

## 

Children who are up against, or very close to, any airbag when it inflates can be seriously injured or killed. Always secure children properly in the vehicle. To read how, see Older Children 

63 or Infants and Young Children 

65.



There is an airbag readiness light on the instrument cluster, which shows the airbag symbol.

The system checks the airbag electrical system for malfunctions. The light tells you if there is an electrical problem. See *Airbag Readiness Light* ▷ 107.

## Where Are the Airbags?



The driver frontal airbag is in the center of the steering wheel.



The front outboard passenger frontal airbag is in the passenger side instrument panel.



**Driver Side Shown, Passenger Side Similar** 

The driver and front outboard passenger seatmounted side impact airbags are in the side of the seatbacks closest to the door.



**Driver Side Shown, Passenger Side Similar** 

The roof-rail airbags for the driver, front outboard passenger, and second row outboard passengers are in the ceiling above the side windows.

## **⚠** Warning

If something is between an occupant and an airbag, the airbag might not inflate properly or it might force the object into that person causing severe injury or even death. The path of an inflating airbag must be kept clear. Do not put anything

(Continued)

### Warning (Continued)

between an occupant and an airbag, and do not attach or put anything on the steering wheel hub or on or near any other airbag covering.

Do not use seat accessories that block the inflation path of a seat-mounted side impact airbag.

Never secure anything to the roof of a vehicle with roof-rail airbags by routing a rope or tie-down through any door or window opening. If you do, the path of an inflating roof-rail airbag will be blocked.

### When Should an Airbag Inflate?

This vehicle is equipped with airbags. See Airbag System ▷ 52. Airbags are designed to inflate if the impact exceeds the specific airbag system's deployment threshold. Deployment thresholds are used to predict how severe a crash is likely to be in time for the airbags to inflate and help restrain the occupants. The vehicle has electronic sensors that help the airbag system determine the severity of the impact. Deployment thresholds can vary with specific vehicle design.

Frontal airbags are designed to inflate in moderate to severe frontal crashes to help reduce the potential for severe injuries, mainly to the driver's or front outboard passenger's head and chest.

Whether the frontal airbags will or should inflate is not based primarily on how fast the vehicle is traveling. It depends on what is hit, the direction of the impact, and how quickly the vehicle slows down.

Frontal airbags may inflate at different crash speeds depending on whether the vehicle hits an object straight on or at an angle, and whether the object is fixed or moving, rigid or deformable, narrow or wide.

Frontal airbags are not intended to inflate during vehicle rollovers, rear impacts, or many side impacts.

In addition, the vehicle has advanced technology frontal airbags. Advanced technology frontal airbags adjust the restraint according to either crash severity or occupant interaction.

Seat-mounted side impact airbags are designed to inflate in moderate to severe side crashes depending on the location of the impact. These airbags may also inflate

in some moderate to severe frontal impacts. Seat-mounted side impact airbags are not designed to inflate in rollovers or rear impacts. A seat-mounted side impact airbag is designed to inflate on the side of the vehicle that is struck.

Roof-rail airbags are designed to inflate in moderate to severe side crashes depending on the location of the impact. In addition, these roof-rail airbags may inflate during a rollover or in a severe frontal impact. Roof-rail airbags are not designed to inflate in rear impacts. Both roof-rail airbags may inflate when either side of the vehicle is struck or if the sensing system predicts that the vehicle is about to roll over on its side. or in a severe frontal impact.

In any particular crash, no one can say whether an airbag should have inflated simply because of the vehicle damage or repair costs.

## What Makes an Airbag Inflate?

In a deployment event, the sensing system sends an electrical signal triggering a release of gas from the inflator. Gas from the inflator fills the airbag causing the bag to break out of the cover. The inflator, the airbag, and related hardware are all part of the airbag module.

## How Does an Airbag Restrain?

In moderate to severe frontal collisions, even belted occupants can contact the steering wheel or the instrument panel. In moderate to severe side collisions, even belted occupants can contact the inside of the vehicle.

Airbags supplement the protection provided by seat belts by distributing the force of the impact more evenly over the occupant's body.

Rollover capable roof-rail airbags are designed to help contain the head and chest of occupants in the outboard seating positions in the first and second rows. The rollover capable roof-rail airbags are designed to help reduce the risk of full or partial ejection in rollover events, although no system can prevent all such ejections.

But airbags would not help in many types of collisions, primarily because the occupant's motion is not toward those airbags. See When Should an Airbag Inflate? 

55.

Airbags should never be regarded as anything more than a supplement to seat belts.

# What Will You See After an Airbag Inflates?

After frontal and seat-mounted side impact airbags inflate, they quickly deflate, so quickly that some people may not even realize the airbags inflated. Roof-rail airbags may still be at least partially inflated for some time after they inflate. Some components of the airbag module may be hot for several minutes. For location of the airbags, see *Where Are the Airbags*? ▷ 54.

The parts of the airbag that come into contact with you may be warm, but not too hot to touch. There may be some smoke and dust coming from the vents in the deflated airbags. Airbag inflation does not prevent people from leaving the vehicle.

## **⚠** Warning

When an airbag inflates, there may be dust in the air. This dust could cause breathing problems for people with a history of asthma or other breathing trouble. To avoid this, everyone in the vehicle should get out as soon as it is safe to do so. If you

(Continued)

## Warning (Continued)

have breathing problems but cannot get out of the vehicle after an airbag inflates, then get fresh air by opening a window or a door. If you experience breathing problems following an airbag deployment, you should seek medical attention.

The vehicle has a feature that may automatically unlock the doors, turn on the interior lights and hazard warning flashers after the airbags inflate. The feature may also activate, without airbag inflation, after an event that exceeds a predetermined threshold. After turning the vehicle off and then on again, the doors can be locked, the interior lights can be turned off, and the hazard warning flashers can be turned off using the controls for those features. If any of these systems are damaged in the crash they may not operate as normal.

## **⚠** Warning

A crash severe enough to inflate the airbags may have also damaged important functions in the vehicle, such as the brake and steering systems, etc. Even if the vehicle appears to be drivable after a moderate crash, there may be concealed damagethat could make it difficult to safely operate the vehicle.

Use caution if attempting to restart the vehicle after a crash has occurred.

Plug-in vehicles have a high voltage battery and a standard 12-volt battery.

If an airbag inflates or the vehicle has been in a crash, the sensing system may shut down the high voltage system. When this occurs, the high voltage battery is disconnected and the vehicle will not start. Before the vehicle can be operated again, it must be serviced at your dealer.

In many crashes severe enough to inflate the airbag, windshields are broken by vehicle deformation. Additional windshield breakage may also occur from the front outboard passenger airbag.

- Airbags are designed to inflate only once.
   After an airbag inflates, you will need
   some new parts for the airbag system. If
   you do not get them, the airbag system
   will not be there to help protect you in
   another crash. A new system will include
   airbag modules and possibly other parts.
   The service manual for the vehicle covers
   the need to replace other parts.
- The vehicle has a crash sensing and diagnostic module which records information after a crash. See Vehicle Data Recording and Privacy ⇒ 363 and Event Data Recorders ⇒ 364.
- Let only qualified technicians work on the airbag system. Improper service can mean that an airbag system will not work properly. See your dealer for service.

### **Rollover Detection Disable Button**

Some extreme off-road driving activities, such as rock climbing and driving on sand dunes, may place the vehicle at an extreme angle. Depending on other driving conditions, operating the vehicle on extreme angles may deploy the rollover roof-rail airbags, even if the vehicle does not roll over. If equipped, the

rollover detection disable button can be used to temporarily turn off the rollover detection system that deploys the roof-rail airbags and seat belt pretensioners when the vehicle is about to roll over on its side.



If equipped, the rollover detection disable button will be on the instrument panel.

## ⚠ Warning

The rollover detection disable button will disable deployment of the roof-rail airbags and seat belt pretensioners in the event of a vehicle rollover.

(Continued)

### Warning (Continued)

You can be seriously injured or killed in a rollover event if deployment of the roof-rail airbags and seat belt pretensioners is disabled. See *Airbag System* ♀ 52.

When the vehicle is first started, all vehicle airbags and the seat belt pretensioners are automatically enabled. To manually turn off the rollover detection system so that the roof-rail airbags and the seat belt pretensioners will not inflate during a rollover event:

- 1. Turn the ignition on.
- Press and hold the rollover detection disable button until a beep sounds. The rollover detection system status indicator in the overhead console will come on and stay on when the rollover detection system is turned off. See Rollover Detection System Status Indicator \$\infty\$ 108.

When the rollover detection system is turned off, the roof-rail airbags and seat belt pretensioners will not deploy in a rollover event. The roof-rail airbags and seat belt pretensioners will still deploy in moderate

to severe side and frontal impacts, and the seat belt pretensioners will still deploy in a moderate to severe rear impact.

To turn the rollover detection system back on, turn the ignition off or press and hold the rollover detection disable button until a beep sounds. When the rollover detection system is turned back on, the rollover detection system status indicator in the overhead console will turn off. See Rollover Detection System Status Indicator ⇒ 108.

## **⚠** Warning

If the airbag readiness light ever comes on and stays on, it means that something may be wrong with the airbag system. For example, the roof-rail airbags could inflate even though the rollover detection system is turned off.

If the airbag readiness light stays on, have the vehicle serviced right away. See Rollover Detection System Status Indicator 

→ 108 for more information, including important safety information.

### **Passenger Sensing System**

The vehicle has a passenger sensing system for the front outboard passenger position. The passenger airbag status indicator will light on the overhead console when the vehicle is started.



The symbols for on and off, will be visible during the system check. When the system check is complete, either the symbol for on or off, will be visible. See Passenger Airbag Status Indicator 

□ 108

The passenger sensing system turns off the front outboard passenger frontal airbag under certain conditions. No other airbag is affected by the passenger sensing system.

The passenger sensing system works with sensors that are part of the front outboard passenger seat and seat belt. The sensors are designed to detect the presence of a properly

seated occupant and determine if the front outboard passenger frontal airbag should be allowed to inflate or not.

According to accident statistics, children are safer when properly secured in a rear seat in the correct child restraint for their weight and size.

Whenever possible, children aged 12 and under should be secured in a rear seating position.

Never put a rear-facing child seat in the front. This is because the risk to the rear-facing child is so great, if the airbag inflates.

## **⚠** Warning

A child in a rear-facing child restraint can be seriously injured or killed if the passenger frontal airbag inflates. This is because the back of the rear-facing child restraint would be very close to the inflating airbag. A child in a forward-facing child restraint can be seriously injured or killed if the passenger frontal airbag inflates and the passenger seat is in a forward position.

Even if the passenger sensing system has turned off the passenger frontal airbag, no system is fail-safe. No one can guarantee

(Continued)

### Warning (Continued)

that an airbag will not deploy under some unusual circumstance, even though the airbag is turned off.

Never put a rear-facing child restraint in the front seat, even if the airbag is off. If securing a forward-facing child restraint in the front outboard passenger seat, always move the seat as far back as it will go. It is better to secure child restraints in the rear seat. Consider using another vehicle to transport the child when a rear seat is not available.

The passenger sensing system is designed to turn off the front outboard passenger frontal airbag if:

- The front outboard passenger seat is unoccupied.
- The system determines an infant is present in a child restraint.
- A front outboard passenger takes his/her weight off of the seat for a period of time.
- There is a critical problem with the airbag system or the passenger sensing system.

When the passenger sensing system has turned off the front outboard passenger frontal airbag, the off indicator will light and stay lit as a reminder that the airbag is off. See Passenger Airbag Status Indicator 

108.

The passenger sensing system is designed to turn on the front outboard passenger frontal airbag anytime the system senses that a person of adult size is sitting properly in the front outboard passenger seat.

When the passenger sensing system has allowed the airbag to be enabled, the on indicator will light and stay lit as a reminder that the airbag is active.

For some children, including children in child restraints, and for very small adults, the passenger sensing system may or may not turn off the front outboard passenger frontal airbag, depending upon the person's seating posture and body build. Everyone in the vehicle who has outgrown child restraints should wear a seat belt properly — whether or not there is an airbag for that person.

## ⚠ Warning

If the airbag readiness light ever comes on and stays on, it means that something may be wrong with the airbag system. To help avoid injury to yourself or others, have the vehicle serviced right away.

See Airbag Readiness Light 

107 for more information, including important safety information.

### If the On Indicator Is Lit for a Child Restraint

The passenger sensing system is designed to turn off the front outboard passenger frontal airbag if the system determines that an infant is present in a child restraint. If a child restraint has been installed and the on indicator is lit:

- 1. Turn the vehicle off.
- 2. Remove the child restraint from the vehicle.
- Remove any additional items from the seat such as blankets, cushions, seat covers, seat heaters, or seat massagers.
- Reinstall the child restraint following the directions provided by the child restraint manufacturer and refer to Securing Child Restraints (With the Seat Belt in the Rear

Seat) 

80 Securing Child Restraints (With the Seat Belt in the Front Passenger Seat) 84.

Make sure the seat belt retractor is locked by pulling the shoulder belt all the way out of the retractor when installing the child restraint, even if the child restraint is equipped with a seat belt lock off. When the retractor lock is set, the belt can be tightened but not pulled out of the retractor.

5. If, after reinstalling the child restraint and restarting the vehicle, the on indicator is still lit, turn the vehicle off. Then slightly recline the vehicle seatback and adjust the seat cushion, if adjustable, to make sure that the vehicle seatback is not pushing the child restraint into the seat cushion.

Also make sure the child restraint is not trapped under the vehicle head restraint. If this happens, adjust the head restraint. See Head Restraints ⇔ 35.

6. Restart the vehicle.

The passenger sensing system may or may not turn off the airbag for a child in a child restraint depending upon the child's size. It is better to

secure the child restraint in a rear seat. Never put a rear-facing child restraint in the front seat, even if the on indicator is not lit.

### If the Off Indicator Is Lit for an Adult-Sized Occupant



If a person of adult size is sitting in the front outboard passenger seat, but the off indicator is lit, it could be because that person is not sitting properly in the seat or that the child restraint locking feature is engaged. Use the following steps to allow the system to detect that person and enable the front outboard passenger frontal airbag:

1. Turn the vehicle off.

- Remove any additional material from the seat, such as blankets, cushions, seat covers, seat heaters, or seat massagers.
- 3. Place the seatback in the fully upright position.
- Have the person sit upright in the seat, centered on the seat cushion, with legs comfortably extended.
- 5. If the shoulder portion of the belt is pulled out all the way, the child restraint locking feature will be engaged. This may unintentionally cause the passenger sensing system to turn the airbag off for some adult-sized occupants. If this happens, unbuckle the belt, let the belt go back all the way, and then buckle the belt again without pulling the belt out all the way.
- Restart the vehicle and have the person remain in this position for two to three minutes after the on indicator is lit.

## **⚠** Warning

If the front outboard passenger airbag is turned off for an adult-sized occupant, the airbag will not be able to inflate and help protect that person in a crash, resulting in an increased risk of serious injury or even death. An adult-sized occupant should not ride in the front outboard passenger seat, if the passenger airbag off indicator is lit.

### Additional Factors Affecting System Operation

Seat belts help keep the passenger in position on the seat during vehicle maneuvers and braking, which helps the passenger sensing system maintain the passenger airbag status. See "Seat Belts" and "Child Restraints" in the Index for additional information about the importance of proper restraint use.

A thick layer of additional material, such as a blanket or cushion, or aftermarket equipment such as seat covers, seat heaters, and seat massagers can affect how well the passenger sensing system operates. We recommend that you not use seat covers or other aftermarket equipment except when approved by GM for

your specific vehicle. See Adding Equipment to the Airbag-Equipped Vehicle ♀ 62 for more information about modifications that can affect how the system operates.

The on indicator may be lit if an object, such as a briefcase, handbag, grocery bag, laptop, or other electronic device, is put on an unoccupied seat. If this is not desired, remove the object from the seat.

## **⚠** Warning

Stowing articles under the passenger seat or between the passenger seat cushion and seatback may interfere with the proper operation of the passenger sensing system.

# Servicing the Airbag-Equipped Vehicle

Airbags affect how the vehicle should be serviced. There are parts of the airbag system in several places around the vehicle. Your dealer and the service manual have information about servicing the vehicle and the airbag system.

## ⚠ Warning

For up to 10 seconds after the vehicle is turned off and the battery is disconnected, an airbag can still inflate during improper service. You can be injured if you are close to an airbag when it inflates. Avoid yellow connectors. They are probably part of the airbag system. Be sure to follow proper service procedures, and make sure the person performing work for you is qualified to do so.

## Adding Equipment to the Airbag-Equipped Vehicle

Adding accessories that change the vehicle's frame, bumper system, height, front end, or side sheet metal may keep the airbag system from working properly.

The operation of the airbag system can also be affected by changing, including improperly repairing or replacing, any parts of the following:

 Airbag system, including airbag modules, front or side impact sensors, sensing and diagnostic module, or airbag wiring

- Front seats, including stitching, seams or zippers
- Seat belts
- Steering wheel, instrument panel, overhead console, ceiling trim, or pillar garnish trim
- Inner door seals, including speakers

Your dealer and the service manual have information about the location of the airbag modules and sensors, sensing and diagnostic module, and airbag wiring along with the proper replacement procedures.

In addition, the vehicle has a passenger sensing system for the front outboard passenger position, which includes sensors that are part of the passenger seat. The passenger sensing system may not operate properly if the original seat trim is replaced with non-GM covers, upholstery, or trim; or with GM covers, upholstery, or trim designed for a different vehicle. Any object, such as an aftermarket seat heater or a comfort-enhancing pad or device, installed under or on top of the seat fabric, could also interfere with the operation of the passenger sensing system. This could either prevent proper deployment of the passenger airbag(s) or prevent the passenger

sensing system from properly turning off the passenger airbag(s). See Passenger Sensing System 

59.

If the vehicle must be modified because you have a disability and have questions about whether the modifications will affect the vehicle's airbag system, or if you have questions about whether the airbag system will be affected if the vehicle is modified for any other reason, see your dealer.

### **Airbag System Check**

The airbag system does not need regularly scheduled maintenance or replacement. Make sure the airbag readiness light is working. See Airbag Readiness Light ▷ 107.

### Caution

If an airbag covering is damaged, opened, or broken, the airbag may not work properly. Do not open or break the airbag coverings.

(Continued)

### **Caution (Continued)**

If there are any opened or broken airbag coverings, have the airbag covering and/or airbag module replaced. For the location of the airbags, see *Where Are the Airbags?* 

⇒ 54. See your dealer for service.

## Replacing Airbag System Parts After a Crash

## **⚠** Warning

A crash can damage the airbag systems in the vehicle. A damaged airbag system may not properly protect you and your passenger(s) in a crash, resulting in serious injury or even death. To help make sure the airbag systems are working properly after a crash, have them inspected and any necessary replacements made as soon as possible.

If an airbag inflates, you will need to replace airbag system parts. See your dealer for service.

If the airbag readiness light stays on after the vehicle is started or comes on when you are driving, the airbag system may not work properly. Have the vehicle serviced right away. See Airbag Readiness Light ♀ 107.

## Child Restraints Older Children



Older children who have outgrown booster seats should wear the vehicle seat belts. See How to Wear Seat Belts Properly \$ 47.

The manufacturer instructions that come with the booster seat state the weight and height limitations for that booster. Use a booster seat with a lap-shoulder belt until the child passes the fit test below:

- Sit all the way back on the seat. Do the knees bend at the seat edge? If yes, continue. If no, return to the booster seat.
- Buckle the lap-shoulder belt. Does the shoulder belt rest on the shoulder? If yes, continue. If no, then return to the booster seat.
- Does the lap belt fit low and snug on the hips, touching the thighs? If yes, continue. If no. return to the booster seat.
- Can proper seat belt fit be maintained for the length of the trip? If yes, continue. If no, return to the booster seat.

## Q: What is the proper way to wear seat helts?

A: An older child should wear a lapshoulder belt and get the additional restraint a shoulder belt can provide. The shoulder belt should not cross the face or neck. The lap belt should fit snugly below the hips, just touching the top of the thighs. This applies belt force to the child's pelvic bones in a crash. It should never be worn over the abdomen, which could cause severe or even fatal internal injuries in a crash.

According to accident statistics, children are safer when properly restrained in a rear seating position.

In a crash, children who are not buckled up can strike other people who are buckled up, or can be thrown out of the vehicle. Older children need to use seat belts properly.

## **⚠** Warning

Never allow more than one child to wear the same seat belt. The seat belt cannot properly spread the impact forces. In

(Continued)

### Warning (Continued)

a crash, they can be crushed together and seriously injured. A seat belt must be used by only one person at a time.



## **⚠** Warning

Never allow a child to wear the seat belt shoulder belt under both arms or behind their back. A child can be seriously injured by not wearing the lap-shoulder belt properly. In a crash, the child would not

(Continued)

## Warning (Continued)

be restrained by the shoulder belt. The child could move too far forward increasing the chance of head and neck injury. The child might also slide under the lap belt. The belt force would then be applied right on the abdomen. That could cause serious or fatal injuries. The shoulder belt should go over the shoulder and across the chest.



## **⚠** Warning

Children can be seriously injured or killed if the shoulder belt is worn behind their back, under their legs, or wrapped around their neck. The shoulder belt can tighten but cannot be loosened if it is locked. The shoulder belt locks when it is pulled all the way out of the retractor. It unlocks when the shoulder belt is allowed to go all the way back into the retractor, but it cannot do this if it is wrapped around the child. Never leave children unattended in a vehicle and never allow children to improperly wear, or play with, the seat belts.

### **Infants and Young Children**

Everyone in a vehicle needs protection! This includes infants and all other children. Neither the distance traveled nor the age and size of the traveler changes the need, for everyone, to use safety restraints.

## ⚠ Warning

Children can be seriously injured or killed if the shoulder belt is worn behind their back, under their legs, or wrapped around their neck. The shoulder belt can tighten but cannot be loosened if it is locked. The shoulder belt locks when it is pulled all the way out of the retractor. It unlocks when the shoulder belt is allowed to go all the way back into the retractor, but it cannot do this if it is wrapped around the child. Never leave children unattended in a vehicle and never allow children to improperly wear, or play with, the seat belts.

Every time infants and young children ride in vehicles, they should have the protection provided by appropriate child restraints. Neither the vehicle seat belt system nor its airbag system is designed for them.

Children who are not restrained properly can strike other people, or can be thrown out of the vehicle.

## **⚠** Warning

Never hold an infant or a child while riding in a vehicle. Due to crash forces, an infant or a child will become so heavy it is not possible to hold it during a crash. For example, in a crash at only 40 km/h (25 mph), a 5.5 kg (12 lb) infant will suddenly become a 110 kg (240 lb) force on a person's arms. An infant or child should be secured in an appropriate child restraint.



## **⚠** Warning

Children who are up against, or very close to, any airbag when it inflates can be seriously injured or killed. Never put a rearfacing child restraint in the front outboard seat. Secure a rear-facing child restraint in a rear seat. It is also better to secure a forward-facing child restraint in a rear seat. If you must secure a forward-facing child restraint in the front outboard seat, always move the front passenger seat as far back as it will go.



Child restraints are devices used to restrain, seat, or position children in the vehicle and are sometimes called child seats or car seats.

### There are three basic types of child restraints:

- Forward-facing child restraints
- Rear-facing child restraints
- Belt-positioning booster seats

The proper child restraint for your child depends on their size, weight, and age, and also on whether the child restraint is compatible with the vehicle in which it will be used

For each type of child restraint, there are many different models available. When purchasing a child restraint, be sure it is designed to be used in a motor vehicle and is designed by a genuine child restraint manufacturer.

The instruction manual that is provided with the child restraint states the weight and height limitations for that particular child restraint. In addition, there are many kinds of child restraints available for children with special needs.


## **⚠** Warning

To reduce the risk of neck and head injury in a crash, infants and toddlers should be secured in a rear-facing child restraint until age two, or until they reach the maximum height and weight limits of their child restraint.

## 

A young child's hip bones are still so small that the vehicle seat belt may not remain low on the hip bones, as it should. Instead, it may settle up around the child's abdomen. In a crash, the belt would apply force on a body area that is unprotected by any bony structure. This alone could cause serious or fatal injuries. To reduce the risk of serious or fatal injuries during a crash, young children should always be secured in an appropriate child restraint.

## **Child Restraint Systems**

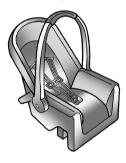

**Rear-Facing Infant Restraint** 


A rear-facing child restraint provides restraint with the seating surface against the back of the infant

The harness system holds the infant in place and, in a crash, acts to keep the infant positioned in the restraint.



**Forward-Facing Child Restraint** 

A forward-facing child restraint provides restraint for the child's body with the harness.

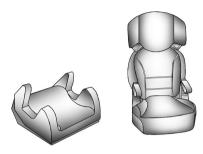

### **Booster Seats**

A belt-positioning booster seat is used for children who have outgrown their forward-facing child restraint. Boosters are designed to improve the fit of the vehicle seat belt system until the child is large enough for the vehicle seat belts to fit properly without a booster seat. See the seat belt fit test in Older Children \$\infty\$ 63.



### **Backless Booster**

Backless booster fitment requirement:

Some backless booster seats are not suitable for rear seats that have oversized side seat bolsters, as they can push the backless booster forward from the seat back

To use a backless booster:

- 1. Center the booster on the seat cushion.
- 2. Ensure the backless booster seat contacts the seat back

If the backless booster does not meet the fit test described in Steps 1–2, select another booster seat.

## Securing an Add-On Child Restraint in the Vehicle

## **⚠** Warning

Each top-tether anchor is designed to anchor only one child restraint. Do not attach more than one child restraint to a single top-tether anchor. The anchor may come loose or break, potentially causing personal injury, property damage, or death.

## **⚠** Warning

A child can be seriously injured or killed in a crash if the child restraint is not properly secured in the vehicle. Secure the child restraint properly in the vehicle using the vehicle seat belt or LATCH system, following the instructions that came with that child restraint and the instructions in this manual.

To help reduce the chance of injury, the child restraint must be secured in the vehicle. Child restraints must be secured in vehicle seats by the lap belt portion of a lap-shoulder belt, or by the LATCH system. See Lower Anchors and

Tethers for Children (LATCH System) 

70 for more information. Children can be endangered in a crash if the child restraint is not properly secured in the vehicle.

When securing an add-on child restraint, see the following:

- Instruction labels provided on the child restraint
- Instruction manual provided with the child restraint
- This vehicle owner's manual

The child restraint instructions are important, so if they are not available, obtain a replacement copy from the manufacturer.

Keep in mind that an unsecured child restraint can move around in a collision or sudden stop and injure people in the vehicle. Be sure to properly secure any child restraint in the vehicle — even when no child is in it.

# Securing the Child Within the Child Restraint

## **⚠** Warning

A child can be seriously injured or killed in a crash if the child is not properly secured in the child restraint. Secure the child properly following the instructions that came with that child restraint.

### Where to Put the Restraint

According to accident statistics, children and infants are safer when properly restrained in an appropriate child restraint secured in a rear seating position.

Whenever possible, children aged 12 and under should be secured in a rear seating position.

Never put a rear-facing child restraint in the front. This is because the risk to the rear-facing child is so great if the airbag deploys.

## **⚠** Warning

A child in a rear-facing child restraint can be seriously injured or killed if the front passenger airbag inflates. This is because the back of the rear-facing child restraint would be very close to the inflating airbag. A child in a forward-facing child restraint can be seriously injured or killed if the front passenger airbag inflates and the passenger seat is in a forward position. Even if the passenger sensing system has turned off the front passenger frontal.

Even if the passenger sensing system has turned off the front passenger frontal airbag, no system is fail-safe. No one can guarantee that an airbag will not deploy under some unusual circumstance, even though it is turned off.

Secure rear-facing child restraints in a rear seat, even if the airbag is off. If you secure a forward-facing child restraint in the front seat, always move the front passenger seat as far back as it will go. It is better to secure the child restraint in a rear seat.

When securing a child restraint with the seat belts in a rear seat position, study the instructions that came with the child restraint to make sure it is compatible with this vehicle.

Child restraints and booster seats vary considerably in size, and some may fit in certain seating positions better than others. Do not install a child restraint in any rear seating position where it cannot be installed securely.

Depending on where you place the child restraint and the size of the child restraint, you may not be able to access adjacent seat belts or LATCH anchors for additional passengers or child restraints. Adjacent seating positions should not be used if the child restraint prevents access to or interferes with the routing of the seat belt.

Adjust the seat in front of a child restraint to ensure proper installation according to the child restraint manual. Move the front seat forward to avoid contact between the child restraint and the seat or any accessories mounted to the seat.

Wherever a child restraint is installed, be sure to follow the instructions that came with the child restraint and secure the child restraint properly.

Keep in mind that an unsecured child restraint can move around in a collision or sudden stop and injure people in the vehicle. Be sure to properly secure any child restraint in the vehicle — even when no child is in it.

## Lower Anchors and Tethers for Children (LATCH System)

The LATCH system secures a child restraint during driving or in a crash. LATCH attachments on the child restraint are used to attach the child restraint to the anchors in the vehicle. This system is designed to make installation of a child restraint easier.

In order to use the LATCH system in your vehicle, you need a child restraint that has LATCH attachments. LATCH-compatible rearfacing and forward-facing child seats can be properly installed using either the LATCH anchors or the vehicle's seat belts. Do not use both the seat belts and the LATCH anchorage system to secure a rear-facing or forward-facing child restraint.

Booster seats use the vehicle's seat belts to secure the child and the booster seat. If the manufacturer recommends that the booster seat be secured with the LATCH system, this

can be done as long as the booster seat can be positioned properly and there is no interference with the proper positioning of the lap-shoulder belt on the child.

Make sure to follow the instructions that came with the child restraint, and also the instructions in this manual

When installing a child restraint with a top tether, you must also use either the lower anchors or the seat belts to properly secure the child restraint. A child restraint must never be installed using only the top tether.

For a forward-facing five-point harness child restraint where the combined weight of the child and restraint are up to 29.5 kg (65 lb), use either the lower LATCH anchorages with the top tether anchorage, or the seat belt with the top tether anchorage. Where the combined weight of the child and restraint are greater than 29.5 kg (65 lb), use the seat belt with the top tether anchorage only.

### **Recommended Methods for Attaching Child Restraints**

Restraint Type	Combined Weight of the Child + Child Restraint	Use Only Approved Attachment Methods Shown with an X			
		LATCH – Lower Anchors Only	Seat Belt Only	LATCH – Lower Anchors and Top Tether Anchor	Seat Belt and Top Tether Anchor
Rear-Facing Child Restraint	Up to 29.5 kg (65 lb)	Х	Х		
Rear-Facing Child Restraint	Greater than 29.5 kg (65 lb)		Х		
Forward-Facing Child Restraint	Up to 29.5 kg (65 lb)			х	х
Forward-Facing Child Restraint	Greater than 29.5 kg (65 lb)				х


See Securing Child Restraints (With the Seat Belt in the Rear Seat) ⇒ 80 Securing Child Restraints (With the Seat Belt in the Front Passenger Seat) ⇒ 84

Child restraints built after March 2014 are labeled with the maximum child weight, with which the LATCH system can be used for installing the child restraint.

The following explains how to attach a child restraint with these attachments in the vehicle.


Not all vehicle seating positions have lower anchors. In this case, the seat belt must be used (with top tether where available) to secure the child restraint. See Securing Child

### **Lower Anchors**

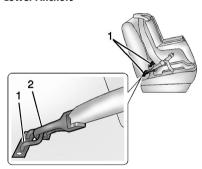

Lower anchors (1) are metal bars built into the vehicle. There are two lower anchors for each LATCH seating position that will accommodate a child restraint with lower attachments (2).

### **Top Tether Anchor**

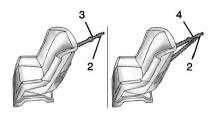 


A top tether (3, 4) is used to secure the top of the child restraint to the vehicle. A top tether anchor is built into the vehicle. The top tether attachment hook (2) on the child restraint connects to the top tether anchor in the vehicle in order to reduce the forward movement and rotation of the child restraint during driving or in the event of a crash.

The child restraint may have a single tether (3) or a dual tether (4). Either will have a single attachment hook (2) to secure the top tether to the anchor.

Some child restraints with a top tether are designed for use with or without the top tether being attached. Others require the top tether always to be attached.

### Lower Anchor and Top Tether Anchor Locations

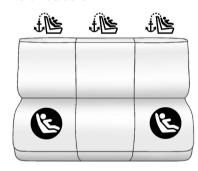

Seating positions with top tether anchors.

Seating positions with two lower anchors.




To assist in locating the lower anchors, each seating position with lower anchors has two labels with the lower anchor symbol on them, near the crease between the seatback and the seat cushion.

Do not install a child restraint that requires lower anchors in the center rear seating position. See Securing Child Restraints (With the Seat Belt in the Rear Seat) ⇔ 80 Securing Child Restraints (With the Seat Belt in the Front Passenger Seat) ⇔ 84 for more information.




For uplevel models, there are top tether anchor symbols to assist you in locating the top tether anchors.

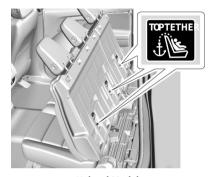


**Uplevel Models** 


For uplevel models, the top tether anchors for each rear seating position are on the back of the rear seatback. Release the seatback and rotate the seatback forward to access the anchors. See *Rear Seats* \$\dip 42\$. Be sure to use an anchor located directly behind the seating position where the child restraint will be placed.

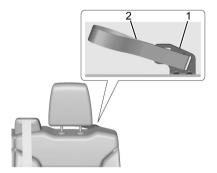

Driver Side Anchor and Loop (Base Model)

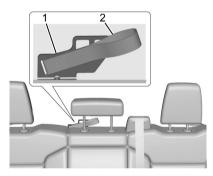

Center Anchor and Loop (Base Model)

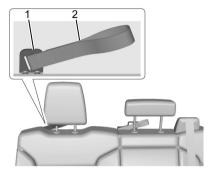

Passenger Side Loop (Base Model)

Do not attach a top tether attachment hook to the loop near the top of the seatback of the seating position in which the child restraint is installed.

For base models, the top tether is routed through loops (2) to the top tether anchors (1). Be sure to use the correct anchor for the seating position where the child restraint will be placed.

Be sure to read the following instructions to properly install a child restraint using these loops and anchors.

Do not secure a child restraint in a position without a top tether anchor if a national or local law requires that the top tether be attached, or if the instructions that come with the child restraint say that the top tether must be attached

According to accident statistics, children and infants are safer when properly restrained in a child restraint system or infant restraint system secured in a rear seating position. See Where to Put the Restraint ▷ 69 for additional information.

## Securing a Child Restraint Designed for the LATCH System

## **⚠** Warning

A child could be seriously injured or killed in a crash if the child restraint is not properly attached to the vehicle using either the LATCH anchors or the vehicle seat belt. Follow the instructions that came with the child restraint and the instructions in this manual.

## ⚠ Warning

Do not attach more than one child restraint to a single anchor, except for the center top tether anchors in the crew cab models. Attaching more than one child restraint to a single anchor could cause the anchor or attachment to come loose or even break during a crash. A child or others could be injured. To reduce the risk of serious or fatal injuries during a crash, attach only one child restraint per anchor.

## **⚠** Warning

Children can be seriously injured or strangled if a shoulder belt is wrapped around their neck. The shoulder belt can tighten but cannot be loosened if it is locked. The shoulder belt locks when it is pulled all the way out of the retractor. It unlocks when the shoulder belt is allowed to go all the way back into the retractor, but it cannot do this if it is wrapped around

(Continued)

# Warning (Continued) a child's neck. If the shoulder belt is locked.

and tightened around a child's neck, the only way to loosen the belt is to cut it.

Buckle any unused seat belts behind the child restraint so children cannot reach them. Pull the shoulder belt all the way out of the retractor to set the lock, and tighten the belt behind the child restraint after the child restraint has been installed.

#### Caution

Do not let the LATCH attachments rub against the vehicle's seat belts. This may damage these parts. If necessary, move buckled seat belts to avoid rubbing the LATCH attachments.

Do not fold the rear seat cushion when the seat is occupied. Do not fold the empty rear seat with a seat belt buckled. This could damage the seat belt or the seat. Unbuckle and return the seat belt to its stowed position, before folding the seat.

If you need to secure more than one child restraint in the rear seat, see Where to Put the Restraint \$\phi\$ 69.

#### **Uplevel Models**

- For forward-facing child restraints, attach and tighten the top tether to the top tether anchor, if your vehicle has one. Follow the child restraint instructions and the vehicle LATCH anchor weight limits described at the beginning of this section, and the following steps:
  - Set/Place the child restraint on the seat cushion.
  - Rotate the seatback forward. See Rear Seats \$\display 42\$.
  - 1.3 Route and attach the top tether according to your child restraint instructions and the following instructions:



If the position you are using has an adjustable headrest or head restraint, adjust it accordingly to allow proper fitment. If you are using a dual tether, route the tether around the headrest or head restraint posts.

If the child restraint is installed next to a center seat, make sure the top tether does not interfere with the center seating position shoulder belt/retractor. If it does, find another suitable seating position to install the child restraint.



If the position you are using has an adjustable headrest or head restraint, adjust it accordingly to allow proper fitment. If you are using a single tether, route the tether. Make sure the top tether does not interfere with the center seating position shoulder belt/retractor.

Make sure the child restraint top tether hook is completely closed and secured to the top tether anchor.


- 2.1 While pulling on the top tether strap to remove the slack, and keeping the child restraint in contact with the seat cushion and seatback, rotate the seatback to the latched position.
- 2.2 All slack needs to be removed from the top tether before securing the seatback to the latches
- 3. Raise the seatback. See *Rear Seats* \$\sim 42\$.
  - 3.1 Confirm the seatback is secure on the latches.
  - 3.2 Confirm the child restraint is contacting the seat cushion and seathack
- 4. Attach and tighten the lower attachments to the lower anchors. If the child restraint does not have lower attachments or the desired seating position does not have lower anchors, secure the child restraint with the top tether and the seat belt. Refer to the child restraint manufacturer instructions and the instructions in this manual
  - 4.1 Find the lower anchors for the desired seating position.

- 4.2 Attach and tighten the lower attachments on the child restraint to the lower anchors
- 5. Tighten the top tether.
- Before placing a child in the child restraint, make sure it is securely held in place. To check, firmly grip the child restraint at the LATCH path and attempt to move it side to side and back and forth. There should be no more than 2.5 cm (1 in) of movement for proper installation.


#### **Base Models**

- Attach and tighten the lower attachments to the lower anchors. If the child restraint does not have lower attachments or the desired seating position does not have lower anchors, secure the child restraint with the top tether and the seat belt. Refer to the child restraint manufacturer instructions and the instructions in this manual.
  - 1.1 Find the lower anchors for the desired seating position.
  - .2 Put the child restraint on the seat.

- Attach and tighten the lower attachments on the child restraint to the lower anchors.
- For forward-facing child restraints, attach and tighten the top tether to the top tether anchor, if your vehicle has one. Follow the child restraint instructions and the vehicle LATCH anchor weight limits described at the beginning of this section, and the following steps:

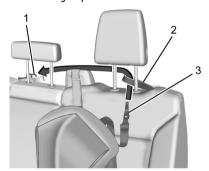


**Rear Driver Side Position** 

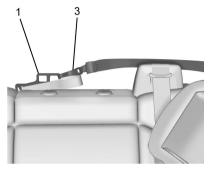


#### **Rear Driver Side Position**


- 2.1 For a top tether in the rear driver side position:
  - 2.1.1 Remove the driver side head restraint and center headrest.
    See "Head Restraint or Headrest Removal and Reinstallation" later in this section.

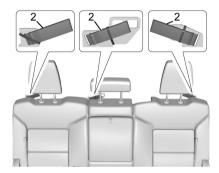

- 2.1.2 For first time use, remove and discard the rubber band from the top tether loop (2).
- 2.1.3 Route the top tether (3) through the loop (2).
- 2.1.4 Attach the top tether (3) to the driver side of the center top tether metal anchor (1).
- 2.1.5 Make sure the child restraint top tether hook is completely closed and secured to the top tether anchor.

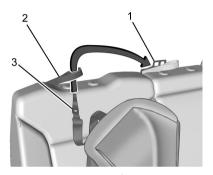

**Rear Passenger Side Position** 

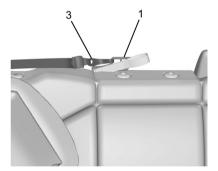


**Rear Passenger Side Position** 

- 2.2 For a top tether in the rear passenger side position:
  - 2.2.1 Remove the passenger side head restraint and center headrest.

    See "Head Restraint or Headrest Removal and Reinstallation" later in this section.
  - 2.2.2 Route the top tether (3) through the loop (2).
  - 2.2.3 Attach the top tether (3) to the passenger side of the center top tether metal anchor (1).
  - 2.2.4 Make sure the child restraint top tether hook is completely closed and secured to the top tether anchor.



**Rear Center Position** 

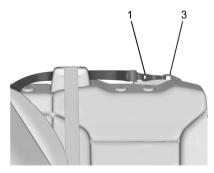

**Rear Center Position** 

- 2.3 For a top tether in the rear center position:
  - 2.3.1 Remove the driver side head restraint and center headrest. See "Head Restraint or Headrest Removal and Reinstallation" later in this section.
  - 2.3.2 Route the top tether (1) through the center loop (2).
  - 2.3.3 Attach the top tether (1) to the driver side top tether metal anchor (3).
  - 2.3.4 Make sure the child restraint top tether hook is completely closed and secured to the top tether anchor.
- 3. Tighten the top tether per the child restraint manufacturer's instructions.

When the top tether is properly tightened, the loop may bend. This is normal and will not damage the vehicle.

If child restraints are installed in both outboard positions, both top tethers can be attached to the center anchor. Top tethers can be attached for child restraints

- in all three rear seating positions at the same time, following the routing instructions above.
- 4. Before placing a child in the child restraint, make sure it is securely held in place. To check, firmly grip the child restraint at the LATCH path and attempt to move it side to side and back and forth. There should be no more than 2.5 cm (1 in) of movement for proper installation.

## Head Restraint or Headrest Removal and Reinstallation

For base models, the second row outboard head restraints or center headrest can be removed if they interfere with the proper installation of the child restraint.

To remove the second row head restraints or center headrest:



- Press both buttons on the head restraint or headrest posts at the same time, and pull up on the head restraint or headrest.
- 2. Store the head restraint or headrest in a secure place.
- When the child restraint is removed, reinstall the head restraint or headrest before the seating position is used.

## **⚠** Warning

With head restraints that are not installed and adjusted properly, there is a greater chance that occupants will suffer a neck/spinal injury in a crash. Do not drive until the head restraints for all occupants are installed and adjusted properly.

To reinstall the head restraint or headrest:



- Insert the head restraint or headrest posts into the holes in the top of the seatback. The notches on the posts must face the driver side of the vehicle.
- 2. Push the head restraint or headrest down.

3. Try to move the head restraint or headrest to make sure that it is locked in place.

## Replacing LATCH System Parts After a Crash

## **⚠** Warning

A crash can damage the LATCH system in the vehicle. A damaged LATCH system may not properly secure the child restraint, resulting in serious injury or even death in a crash. To help make sure the LATCH system is working properly after a crash, see your dealer to have the system inspected and any necessary replacements made as soon as possible.

If the vehicle has the LATCH system and it was being used during a crash, new LATCH system parts may be needed.

New parts and repairs may be necessary even if the LATCH system was not being used at the time of the crash.

# Securing Child Restraints (With the Seat Belt in the Rear Seat)

When securing a child restraint with the seat belts in a rear seat position, study the instructions that came with the child restraint to make sure it is compatible with this vehicle.

If the child restraint has the LATCH system, see Lower Anchors and Tethers for Children (LATCH System) 

70 for how and where to install the child restraint using LATCH. If a child restraint is secured in the vehicle using a seat belt and it uses a top tether, see Lower Anchors and Tethers for Children (LATCH System) 

70 for top tether anchor locations.

Do not secure a child seat in a position without a top tether anchor if a national or local law requires that the top tether be anchored, or if the instructions that come with the child restraint say that the top strap must be anchored. Refer to the instructions that came with the child restraint and see Lower Anchors and Tethers for Children (LATCH System) ▷ 70.

If the child restraint or vehicle seat position does not have the LATCH system, you will be using the seat belt to secure the child restraint. Be sure to follow the instructions that came with the child restraint.

If more than one child restraint needs to be installed in the rear seat, be sure to read Where to Put the Restraint \$\dip\$ 69.

#### **Uplevel Models**

- For forward-facing child restraints, attach and tighten the top tether to the top tether anchor, if your vehicle has one.
  - 1.1 Place the child restraint on the seat cushion.
  - 1.2 Rotate the seatback forward. See Rear Seats \$\display 42\$
  - I.3 If the child restraint has a top tether, follow the child restraint manufacturer's instructions regarding the use of the top tether. See Lower Anchors and Tethers for Children (LATCH System) 

    ⇒ 70 for more information on using the top tether anchors.

 Pick up the latch plate and run the lap and shoulder portions of the vehicle seat belt through or around the child restraint. Ensure the seat belt webbing is routed as directly as possible and is not caught on seat handles or plastic trim. The child restraint instructions will show you how.




Push the latch plate into the buckle until it clicks.

Position the release pushbutton on the buckle, away from the child restraint, so that the seat belt could be quickly unbuckled if necessary.



 Pull the shoulder belt all the way out of the retractor to set the lock. When the retractor lock is set, the belt can be tightened but not pulled out of the retractor.

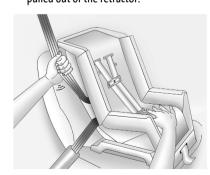

5. To tighten the belt, push down on the child restraint, pull the shoulder portion of the belt to tighten the lap portion of the belt, and feed the shoulder belt back into the retractor. When installing a forward-facing child restraint, it may be helpful to use your knee to push down on the child restraint as you tighten the belt.

There must not be direct contact of the child restraint to the buckle release pushbutton. If there is contact, reposition the child restraint using the instructions that came with the child restraint. If there is still contact, use another seating position or child restraint.

Try to pull the belt out of the retractor to make sure the retractor is locked. If the retractor is not locked, repeat Steps 4 and 5.

6. Before placing a child in the child restraint, make sure it is securely held in place. To check, firmly grip the child restraint at the seat belt path and attempt to move it side to side and back and forth. When the child restraint is properly installed, there should be no more than 2.5 cm (1 in) of movement. To remove the child restraint, unbuckle the vehicle seat belt and let it return to the stowed position. If the top tether is attached to a top tether anchor, disconnect it.

If the head restraint was removed, reinstall it before the seating position is used. See "Head Restraint Removal and Reinstallation" under Lower Anchors and Tethers for Children (LATCH System) 

70 for additional information on installing the head restraint properly.

Many child restraints are too wide to be correctly secured in the center rear seat, although some will fit there. If the center seat position is too narrow for the child restraint, secure it in a rear outboard seat position.

If a rear-facing child restraint is installed in the rear center seat, ensure that the second-row arm rest remains in the stowed (closed) position. If the arm rest cannot be stowed, install the child restraint in another seating position.

#### **Base Models**

- 1. Put the child restraint on the seat.
- If the head restraint interferes with the proper installation of the child restraint, the head restraint may be removed. See "Head

- Restraint Removal and Reinstallation" under Lower Anchors and Tethers for Children (LATCH System) 

  70.
- Pick up the latch plate and run the lap and shoulder portions of the vehicle seat belt through or around the child restraint. Ensure the seat belt webbing is routed as directly as possible and is not caught on seat handles or plastic trim. The child restraint instructions will show you how.




4. Push the latch plate into the buckle until it clicks.

Position the release pushbutton on the buckle, away from the child restraint, so that the seat belt could be quickly unbuckled if necessary.



Pull the shoulder belt all the way out of the retractor to set the lock. When the retractor lock is set, the belt can be tightened but not pulled out of the retractor.

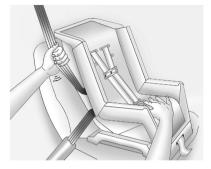

6. To tighten the belt, push down on the child restraint, pull the shoulder portion of the belt to tighten the lap portion of the belt, and feed the shoulder belt back into the retractor. When installing a forward-facing child restraint, it may be helpful to use your knee to push down on the child restraint as you tighten the belt.

There must not be direct contact of the child restraint to the buckle release pushbutton. If there is contact, reposition the child restraint using the instructions that came with the child restraint. If there is still contact, use another seating position or child restraint

Try to pull the belt out of the retractor to make sure the retractor is locked. If the retractor is not locked, repeat Steps 5 and 6.

- Tighten the top tether. See Lower Anchors and Tethers for Children (LATCH System)
   ⇒ 70.
- If the child restraint has a top tether, follow the child restraint manufacturer's instructions regarding the use of the top tether. See Lower Anchors and Tethers for Children (LATCH System) → 70 for more information on using the top tether anchors.
- Before placing a child in the child restraint, make sure it is securely held in place. To check, firmly grip the child restraint at the seat belt path and attempt to move it side to side and back and forth. When the child restraint is properly installed, there should be no more than 2.5 cm (1 in) of movement.

To remove the child restraint, unbuckle the vehicle seat belt and let it return to the stowed position. If the top tether is attached to a top tether anchor, disconnect it.

If the head restraint was removed, reinstall it before the seating position is used. See "Head Restraint Removal and Reinstallation" under

Lower Anchors and Tethers for Children (LATCH System) 

70 for additional information on installing the head restraint properly.

Many child restraints are too wide to be correctly secured in the center rear seat, although some will fit there. If the center seat position is too narrow for the child restraint, secure it in a rear outboard seat position.

If a rear-facing child restraint is installed in the rear center seat, ensure that the second-row arm rest remains in the stowed (closed) position. If the arm rest cannot be stowed, install the child restraint in another seating position.

## Securing Child Restraints (With the Seat Belt in the Front Passenger Seat)

This vehicle has airbags.

A rear seat is a safer place to secure a forwardfacing child restraint. See Where to Put the Restraint \$\sigma 69\$.

In addition, the vehicle has a passenger sensing system which is designed to turn off the front outboard passenger frontal airbag under certain conditions. See *Passenger Sensing* 

System 

59 and Passenger Airbag Status
Indicator 

108 for more information, including important safety information.

Never put a rear-facing child restraint in the front. This is because the risk to the rear-facing child is so great, if the airbag deploys.

## **⚠** Warning

A child in a rear-facing child restraint can be seriously injured or killed if the front outboard passenger frontal airbag inflates. This is because the back of the rear-facing child restraint would be very close to the inflating airbag. A child in a forward-facing child restraint can be seriously injured or killed if the front outboard passenger frontal airbag inflates and the passenger seat is in a forward position.

Even if the passenger sensing system has turned off the front outboard passenger frontal airbag, no system is fail-safe. No one can guarantee that an airbag will not deploy under some unusual circumstance, even though it is turned off.

(Continued)

#### Warning (Continued)

Secure rear-facing child restraints in a rear seat, even if the airbag is off. If you secure a forward-facing child restraint in the front outboard passenger seat, always move the seat as far back as it will go. It is better to secure the child restraint in a rear seat.


If the child restraint uses a top tether, see Lower Anchors and Tethers for Children (LATCH Sustem) ▷ 70 for top tether anchor locations.

Do not secure a child seat in a position without a top tether anchor if a national or local law requires that the top tether be anchored, or if the instructions that come with the child restraint say that the top tether must be anchored.

When using the lap-shoulder belt to secure the child restraint in this position, follow the instructions that came with the child restraint and the following instructions:

- Move the seat as far back as it will go before securing the forward-facing child restraint. Move the seat upward or the seatback to an upright position, if needed, to get a tight installation of the child restraint.
  - When the passenger sensing system has turned off the front outboard passenger frontal airbag, the OFF indicator on the passenger airbag status indicator should light and stay lit when you start the vehicle. See Passenger Airbag Status Indicator 

    → 108.
- 2. Put the child restraint on the seat.
- Pick up the latch plate and run the lap and shoulder portions of the vehicle seat belt through or around the restraint. Ensure the seat belt webbing is routed as direct as possible and is not caught on seat handles or plastic trim. The child restraint instructions will show you how.

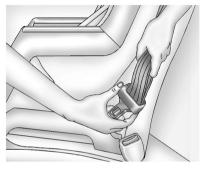

Tilt the latch plate to adjust the belt if needed.




4. Push the latch plate into the buckle until it clicks.

Position the release pushbutton on the buckle, away from the child restraint, so that the seat belt could be quickly unbuckled if necessary.



Pull the shoulder belt all the way out of the retractor to set the lock. When the retractor lock is set, the belt can be tightened but not pulled out of the retractor.

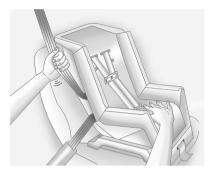

 To tighten the belt, push down on the child restraint, pull the shoulder portion of the belt to tighten the lap portion of the belt, and feed the shoulder belt back into the retractor.

When installing a forward-facing child restraint, it may be helpful to use your knee to push down on the child restraint as you tighten the belt.

There must not be direct contact of the child restraint to the buckle release pushbutton. If there is contact, move the seat upward and repeat prior installation steps. If there is still contact, reposition the child restraint

using the instructions that came with the child restraint. If there is still contact, use another seating position or child restraint. Try to pull the belt out of the retractor to make sure the retractor is locked. If the retractor is not locked, repeat Steps 5 and 6.

 Before placing a child in the child restraint, make sure it is securely held in place. To check, firmly grip the child restraint at the seat belt path and attempt to move it side to side and back and forth. When the child restraint is properly installed, there should be no more than 2.5 cm (1 in) of movement.

If the airbag is off, the off indicator in the passenger airbag status indicator will come on and stay on when the vehicle is started.

If a child restraint has been installed and the on indicator is lit, see "If the On Indicator Is Lit for a Child Restraint" under Passenger Sensing System ▷ 59.

To remove the child restraint, unbuckle the vehicle seat belt and let it return to the stowed position.

#### Storage

87

## Storage

Storage Compartments	
Storage Compartments	87
Glove Box	87
Cupholders	87
Underhood Storage (eTrunk)	
Underseat Storage	88
Floor Console Storage	
.uggage/Load Locations Cargo Area	90
Additional Storage Features	
Cargo Tie-Downs	91

Safety Kit ......92

## **Storage Compartments**

## **⚠** Warning

Do not store heavy or sharp objects in storage compartments. In a crash, these objects may cause the cover to open and could result in injury.

#### **Glove Box**



To open the glove box, pull the handle to the left. Use the mechanical key to lock or unlock. See  $Keys \Rightarrow 6$ .

## **Cupholders**

The front cupholders are in the center console.

#### **Rear Seat Cupholders**



If equipped, lower the rear seat armrest to access the cupholders.

## Underhood Storage (eTrunk)

There is storage in the front, under the hood. To access the eTrunk, open the hood. See *Hood* 

⇒ 15.

#### 88 Storage

## ⚠ Warning

The emergency hood release button inside the underhood compartment will not function when the battery is disconnected or depleted. To avoid personal injury or death, always keep the hood fully closed and latched when storing the vehicle. If the hood is not latched, a person could climb into the underhood compartment and inadvertently close the hood. People should never climb inside the underhood compartment. Never shut the hood when a person is inside.

#### **Caution**

When cleaning the eTrunk, do not get the exposed electrical components wet. This may damage the vehicle.




There are four hooks (1) for use with the convenience net, if equipped. The maximum load per hook is 30 kg (66 lbs).

There are also four cargo tie-downs (2) in the eTrunk. These can be used to strap cargo down and keep it from moving inside the vehicle. The maximum load per corner is 50 kg (110 lbs).

## **Underseat Storage**

There may be storage under the rear passenger seat.

#### **Base Level Underseat Storage**

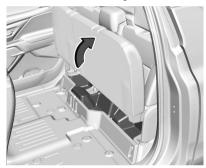


Lift up on the seat bench to access. Push the seat bench down to close.

#### **Uplevel Underseat Storage**



Pull the strap on the rear edge of the seat cushion to release. Tilt the seat cushion forward to access the storage. Rotate the seat bench rearward and push down to close.

## **Floor Console Storage**

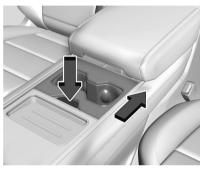

To access the floor console storage, press the cupholder button and slide the cupholders rearward.

To close, press the cupholder button and slide the cupholders forward.



To access additional floor console storage, the USB port, and the auxiliary power outlet, slide the wireless charger forward until it stops, then release to lock it in place.

To close, slide the wireless charger forward again and release. The door will automatically close.

To access additional storage, remove the tray when the sliding wireless charger and cupholders are open.

#### 90 Storage


## Luggage/Load Locations Cargo Area

## ⚠ Warning

Rain and snow can cause the cargo box to become very slippery. Therefore, always remove snow and ice from your shoes and the cargo box, and be careful not to slip when getting in and out of the cargo box.

#### **All-Weather Cargo Area**

The vehicle's cargo area can be used in many different configurations — cargo panels on or off, midgate up or down, rear glass in or out. It has features that resist the elements and protect cargo. It is designed to quickly direct water out of the cargo box. The top drain grates and midgate drain help do this.

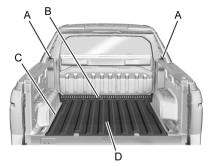

Even when all of these things are working properly and the cover system is on, there may be some instances (heavy rains, automated car washes, etc.) when water can collect in the following areas:

- A. Top drain grates
- B. Front drain grate (midgate drain grate)
- C. Water drainage area around both sides of the box and the tailgate side
- D. Cargo floor

#### Maintenance and Cleaning

To ensure that the water management system performs properly, be sure that the midgate, tailgate, and cover system are fully closed and


that all parts are clean and not blocked with debris. Follow the instructions given next in this section for the proper procedures on cleaning each item.

#### **Top Drain Grates Cleaning**




The top drain grates are located near the rear window on both sides of the vehicle. Clean the grates and drains if there is a blockage.

## Midgate Drain Grate Removal and Cleaning

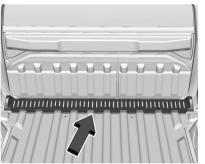

The midgate drain grate is located near the base of the midgate.

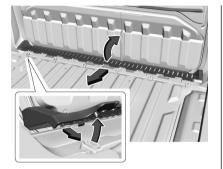

Keep the drain grate clean to avoid blocking the path of water to the gutter system. After hauling dirt, wood chips, pebbles, etc., check the midgate drain to ensure the drain path is clear. The drain grate can be removed and flushed with water if necessary.

To remove the drain grate:

- Lower the midgate. See Midgate 

  → 19 for more information.
- Pull up on the rear side of the drain grate, tilt it toward the front of the vehicle, and pull it out.

Reverse the procedure to reinstall the drain grate.

# Additional Storage Features Cargo Tie-Downs

Base Level Shown, Uplevel Similar

#### Caution

The truck bed walls will collapse if the tie-downs are overloaded.



This vehicle is equipped with eight fixed cargo tie-downs.

Any of the eight locations inside the truck bed can be used. The maximum load per corner is 227 kg (500 lb).


#### 92 Storage

## **⚠** Warning

Do not pull on the sail panel while entering the cargo area. The sail panel is decorative and will not sustain any weight. The sail panel could break, and you could be seriously injured.

#### Caution

Placing tall or oversized items near or against the spoiler, midgate, or the lights above the rear window can result in vehicle damage. To prevent vehicle damage, properly store cargo in the truck bed away from the spoiler, midgate, and cargo lights using the cargo tie-downs.

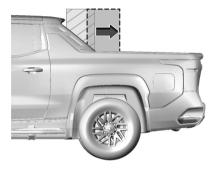

## Safety Kit

## **⚠** Warning

Perform fire extinguisher maintenance in intervals specified by its manufacturer. Periodically check:


- The internal pressure is still indicated by the green operating zone of the pressure gauge.
- The lead seal is not breached.
- The extinguisher validity is not expired.

(Continued)

#### Warning (Continued)

If the fire extinguisher is put to use or if there is an issue with its operation, replace the extinguisher with a new one that meets current country regulations.

Lack of proper maintenance may lead to injury or death if the fire extinguisher does not function properly.

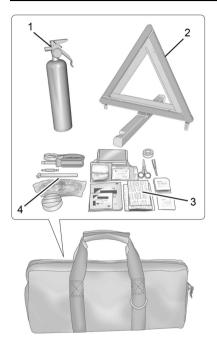

Some items of the safety kit may be stored in the glove box or the cargo area.

The items stored in the safety kit bag include:

- 1. Fire Extinguisher
- 2. Warning Triangle
- 3. First Aid Kit
- 4. Highway Safety Kit

## **Instruments and Controls**

94

Controls	
Steering Wheel Adjustment	95
Heated Steering Wheel	.95
Horn	96
Pedestrian Safety Signal	96
Windshield Wiper/Washer	
Clock	
Power Outlets	97
Onboard Generator	99
Wireless Charging	
On-Screen Controls1	
Warning Lights, Gauges, and Indicators	•
Warning Lights, Gauges, and Indicators1	
Instrument Cluster1	
Speedometer1	
Odometer1	
Trip Odometer1	
Battery Gauge (High Voltage)1	
Power Indicator Gauge1	06
Seat Belt Reminders1	06
Airbag Readiness Light1	
Rollover Detection System Status	
Indicator1	08
Passenger Airbag Status Indicator 1	08
Charging System Light (12-volt Battery)1	
Low State of Charge Light1	09

Charge Cord Connected Light	109
Battery Fault Light	
Propulsion Power is Limited Light	
Service Vehicle Soon Light (Propulsion	
System Failure)	110
Brake System Warning Light	110
Electric Parking Brake Light	
Service Electric Parking Brake Light	111
Antilock Brake System (ABS) Warning	
Light	111
Service Four-Wheel Drive Warning	
Light	112
Lane Keep Assist (LKA) Light	112
Lane Centering Assistance Light	112
Automatic Emergency Braking (AEB)	
Disabled Light	113
Vehicle Ahead Indicator	
Pedestrian Ahead Indicator	
Traction Off Light	113
Traction Control System (TCS)/	
Electronic Stability Control Light	113
Electronic Stability Control (ESC) Off	
Light	114
Driver Mode Control Light	
Four-Wheel Steering Light	115
Air Suspension Light	
Tire Pressure Light	
Security Light	
Vehicle Ready Light	116

High-Beam On Light	
Lights On Reminder	
Cruise Control Light	11/
Adaptive Cruise Control Light	
Super Cruise Light	117
Driver Attention Assist Light	117
Door Ajar Light	118
Information Displays	
Charging	118
Driver Information Center (DIC)	122
Vehicle Status	
Head-Up Display (HUD)	125
Vehicle Messages	
Vehicle Messages	127
Propulsion Power Messages	128
Vehicle Speed Messages	
· · · · · · · · · · · · · · · · · · ·	
Universal Remote System	
Universal Remote System	
Programming	
Universal Remote System Operation	130

# Controls Steering Wheel Adjustment

**Power Tilt and Telescoping Steering Wheel** 



To adjust the steering wheel, if equipped:

- Press the control up or down to tilt the steering wheel up or down.
- Press the control rearward or forward to move the steering wheel closer or away from you.

### **Manual Steering Wheel**



To adjust the steering wheel, if equipped:

- 1. Pull the lever down.
- 2. Move the steering wheel up or down.
- Pull the lever up to lock the steering wheel in place.

Do not adjust the steering wheel while driving.

## **Heated Steering Wheel**



: Press to turn the heated steering wheel on or off. An indicator is lit when the feature is turned on.

The steering wheel takes about three minutes to start heating.

#### **Automatic Heated Steering Wheel**

The heated steering wheel may turn on during a remote start along with the heated seats when it is cold outside. The heated steering wheel indicator may come on in remote start.

The heated steering wheel will turn on when the auto heated seat is activated. The heated steering wheel indicator will display the state of the steering wheel heat.

See Heated and Ventilated Front Seats ⇔ 41.

To turn this feature on or off, select Settings

> Vehicle > Comfort and Convenience > Heated
Steering Wheel > Select ON or OFF.

#### Horn

To sound the horn, press on the steering wheel.

## **Pedestrian Safety Signal**

The vehicle is equipped with automatic sound generation. The automatic sound is generated to indicate the vehicle presence to pedestrians. The sound changes if the vehicle is speeding up or slowing down. It is activated when the vehicle is driving or shifted into a forward gear, N (Neutral), or R (Reverse), up to driving speeds of 25 km/h (15 mph) or 35 km/h (22 mph), depending on region of sale.

## Windshield Wiper/Washer

## 

In freezing weather, do not use the washer until the windshield is warmed. Otherwise the washer fluid can form ice on the windshield, blocking your vision.

## ⚠ Warning

Before driving the vehicle, always clear snow and ice from the hood, windshield, washer nozzles, roof, and rear of the vehicle, including all lights and windows. Reduced visibility from snow and ice buildup could lead to a crash.



The windshield wiper/washer lever is on the left side of the steering column. With the vehicle on or in accessory mode, move the windshield wiper knob to select the wiper speed.

HI: Use for fast wipes.

LO: Use for slow wipes.



**OFF:** Use to turn the wipers off.

> \sqrt{r}: For a single wipe, push the button to the first stop position briefly and release. For several wipes, hold the button at the first stop position longer and release.

Push the button beyond the first stop position to spray windshield washer fluid and activate the wipers. The wipers will continue until the button is released or the maximum wash time is reached. When the windshield

wiper button is released, additional wipes may occur depending on how long the windshield washer has been activated. See *Washer Fluid* 

⇒ 297 for information on filling the windshield washer fluid reservoir.

Clear snow and ice from the wiper blades and windshield before using them. If frozen to the windshield, carefully loosen or thaw them. Damaged blades should be replaced. See *Wiper Blade Replacement* ⇔ 303.

Heavy snow or ice can overload the wiper motor.

#### **Wiper Parking**

If the vehicle is turned off while the wipers are on LO, HI, or INT, they will immediately stop. If the windshield wiper lever is then moved to OFF before the driver door is opened or within 10 minutes, the wipers will restart and move to the base of the windshield.

If the vehicle is turned off while the wipers are performing wipes due to windshield washing, the wipers continue to run until they reach the base of the windshield.

#### **Heated Wiper Parking**

If equipped, the heated wipers turn on when the rear window defogger is on and helps to clear frost from the wipers.

: This button is on the climate control panel.

See "Rear Window Defogger" under *Dual* Automatic Climate Control System \$\simes\$ 164.

#### **Rain Sense**

If equipped with Rain Sense and the feature is turned on, a sensor near the top center of the windshield detects the amount of water on the windshield and controls the frequency of the windshield wiper based on the current sensitivity setting.

Keep this area of the windshield clear of debris to allow for best system performance.

To turn the Rain Sense feature on or off, from the infotainment home screen, select Settings > Vehicle > Comfort and Convenience > Rain Sense > Enable/Disable.

If Rain Sense is enabled in Settings, turning the wiper lever to INT will activate Rain Sense.

#### Clock

Set the time and date using the infotainment system. See "Date/Time" under Settings ⇔ 157.

#### **Power Outlets**

#### Power Outlets 12-Volt Direct Current

#### Caution

Leaving electrical equipment plugged in for an extended period of time while the vehicle is off will drain the battery. Always unplug electrical equipment when not in use and do not plug in equipment that exceeds the maximum 15 amp rating.

#### Caution

Hanging heavy equipment from the power outlet can cause damage not covered by the vehicle warranty. The power outlets are designed for accessory power plugs only, such as cell phone charge cords.

The vehicle has one 12-volt outlet that can be used to plug in electrical equipment.

Lift the cover to access the outlet and replace when not in use.

The power outlet is located underneath the temperature controls.



Front Console 12-Volt Power Outlet

Certain accessory plugs may not be compatible with the accessory power outlet and could overload vehicle and adapter fuses. If a problem is experienced, see your dealer.

When adding electrical equipment, be sure to follow the proper installation instructions included with the equipment. See Add-On Electrical Equipment 

≥ 287.

#### Power Outlets 110/120 Volt Alternating Current

The vehicle has 110/120/240 Volt Alternating Current outlets. The 240 Volt outlet is located in the truck bed.

Lift the cover to access and replace when not in use.

The power outlets are located (400w option shown, 2.4kW similar):

- On the rear of the center console
- In the truck bed
- In the eTrunk



**Rear of Center Console Power Outlet** 



**Truck Bed Power Outlet** 

If equipped with PowerBase system, there will be three outlet covers in this location.

Underneath each cover is the following:

- 2x 120V outlets
- 2x 120V outlets
- 1x 240v outlet



eTrunk Power Outlet

When the vehicle is on, power to the outlets is enabled. Power is supplied to the outlet when electrical equipment is plugged into that outlet. One power outlet can be used with electrical equipment up to a maximum of 400 watts (if equipped with PowerBase, up to 2.4kW on 120V outlets, up to 7.2kW on 240V outlet). Ensure that all connected devices do not exceed maximum wattage.

The outlet does not operate while the vehicle is starting. If a USB powered streaming device is being used, it is suggested to use a USB Port for power, see *USB Port* 

→ 146.

If equipment is connected using more than maximum allowed wattage or a system fault is detected, a protection circuit shuts off the power supply and the indicator light will flash.

Do not use a power outlet with a missing or damaged cover.

The power outlet is not designed for the following, and may not work properly if they are plugged in:

- Equipment with high initial peak wattage, such as compressor-driven refrigerators and electric power tools
- Other equipment requiring an extremely stable power supply, such as microcomputer-controlled electric blankets and touch sensor lights
- Medical equipment

#### **Onboard Generator**



Do not connect any vehicle power outlets to a building's electrical system. This can create a back feed to utility lines. This may

(Continued)

#### Warning (Continued)

result in damages not covered by vehicle warranty such as vehicle damage, property damage, fire, electrical shock, or death.

## 

Using a damaged power outlet could result in electrical shock causing personal injury or death. Inspect the power outlet for damage before use and do not use the outlet if it is damaged.

## 

Do not use a power supply or corded equipment that has been damaged or modified. Damaged or modified products may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.

## **⚠** Warning

The power outlets contain high-voltage electrical equipment. Disassembling the power outlets may result in electrical shock causing personal injury or death. Never attempt to disassemble a power outlet.

#### Caution

Excessive water or moisture can damage the power outlet. Do not aim power washers, water hoses, or high-powered spray nozzles directly at the power outlets.

If equipped and enabled, the vehicle outlets can be used to power compatible devices up to 7.2 kW. The power outlets are located in the cabin, bed. and eTrunk. See Power Outlets \$\simp\$ 97.



Do not use the system to power a towed item while the vehicle is in motion

Close all outlet covers when not in use.

#### Status Indicator

The power outlet green indicator light displays the sustem status:

- A steady green light displays when the power outlet is working.
- No green light displays when the power outlet is off.

Make sure each device, or combination of devices, does not exceed the available power for the system.

#### Fault Mode

#### **⚠** Warning

Do not short circuit AC outputs. A shortcircuited power supply may cause fire, personal injury, and power supply damage. A power supply will short circuit if a metal object makes a connection between the line and the neutral terminals or between two energized lines of the AC outputs. Do not place a power supply near anything that could cause a short circuit.

The power outlet will turn off if the connected device exceeds the capacity for the outlet or total system. To troubleshoot fault mode, follow the steps below:

- 1. Unplug the device(s) from the outlet(s).
- 2. Check the vehicle display for information about the fault.
- 3. Check the two circuit breakers located near the power outlets in the bed of the vehicle.
- 4. If these are not tripped, press the red reset button also located near the power outlets in the bed of the vehicle.

If a fault continues to occur, the device may be exceeding the power outlet power limit, or have excessive current leakage.

#### Switching the Outlets On and Off

#### Caution

Outlets power up during remote start. Do not keep electrical devices plugged in when not in use. This could result in an electrical overload that may cause damage to the system.

The outlets will always be ready for use when the vehicle is on. Using the power outlets while the vehicle is charging can increase charge time.

To enable the power outlets when the vehicle is off, use the settings in the infotainment screen before turning the vehicle off.

### Troubleshooting



## Warning

Exceeding the power supply's listed capacity may damage the power supply and/or any connected electrical devices. Corded equipment, including those with high initial draws, may require more power than the supply is capable of providing. Check the external equipment requirements before connecting to the supply to avoid damage or personal injury. Some tools with high initial electrical power draws, such as large or older saws and air compressors, may exceed the system inverter's capability, even if the device is rated less than 20 amps.

The power outlets will be momentarily unavailable at the start and the end of a 350 kW DC Fast Charge. This is normal operation. Power availability may be limited during extreme hot or cold temperatures to optimize system performance.

If a connected device does not operate, use other devices to test system functionality. If other devices can be powered, the issue may be with the device in auestion.

For any error messages that can not be resolved by resetting fault mode as discussed earlier in this section, see your dealer.

## Wireless Charging



#### ⚠ Warning

Wireless charging may affect the operation of an implanted pacemaker or other medical devices. If you have one, it is recommended to consult with your doctor before using the wireless charging system.

## 

Remove all objects from the charger before charging your compatible smartphone. Objects, such as coins, keys, rings, paper clips, or cards, between the smartphone and charger may become very hot.

(Continued)

### Warning (Continued)

On the rare occasion that the charging system does not detect an object, and the object gets wedged between the smartphone and charger, remove the smartphone and allow the object to cool before removing it from the charger, to prevent burns.


If equipped and enabled, the vehicle has wireless charging on the floor console sliding tray. The system operates at 128 kHz and wirelessly charges one Qi compatible smartphone. The power output of the system is capable of charging at a rate up to 3 amp (15 W), as requested by the compatible smartphone.

The vehicle must be on or Retained Accessory Power (RAP) must be active. The wireless charging feature may not correctly indicate charging when the vehicle is in RAP, during a Bluetooth phone call, or when phone projection (e.g., Apple CarPlay/Android Auto) is active. See *Power Modes* ⇒ 186.

The operating temperature is -40 °C (-40 °F) to 85 °C (185 °F) for the charging system and 0 °C (32 °F) to 35 °C (95 °F) for the phone.

A charging stopped alert may be displayed on

the infotainment screen, if the wireless charger or smartphone are outside of normal operating temperature. Charging will automatically resume when a normal operating temperature is reached.

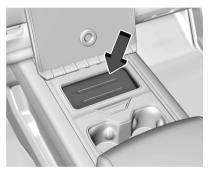

Wireless Charger

To charge a smartphone:

- 1. Confirm the smartphone is capable of wireless charging.
- Remove all objects from the charging area. The system may not charge if there are any objects between the smartphone and charger.

 Place the smartphone face up against the rear of the charging area on the two horizontal rubber strips along the rear of the bin

To maximize the charge rate, ensure the smartphone is fully seated and centered in the holder with nothing under it.

A smartphone case may prevent the charger from working, or reduce the charging performance.

 A green t appears on the infotainment display when the smartphone is detected. It will remain on while the smartphone is charging.

The smartphone may become warm during charging. This is normal. In warmer temperatures, your phone may take longer to charge.

#### **Troubleshooting Wireless Charging**

If a smartphone is placed on the charger and turns off or appears, remove the smartphone and any objects from the charging area. Turn the smartphone 180 degrees and wait a few seconds before placing/aligning it again. If persists, the phone may not be

compatible. will also display when objects other than phones are detected in the charging area.

If a smartphone is placed on the charger and appears, the charger and/or the smartphone is overheated. Remove the smartphone and any objects from the charger in order to cool the system.

Certain vehicle and smartphone accessories may not be compatible with the wireless charging system. See your dealer for additional information.

#### **On-Screen Controls**

The Controls App organizes the on-screen controls for many vehicle functions on one screen. The specific controls available in the app vary by model.


To access the Controls App, select the Controls icon from the infotainment home screen.

# Warning Lights, Gauges, and Indicators

Warning lights, gauges, and indicators can alert you to an issue with your vehicle. Some warning lights display briefly to show that they are working when you start the vehicle. However, if a warning light persists while driving, or if a gauge shows there may be a problem, be sure to refer to the sections under "Warning Lights, Gauges, and Indicators."

Paying attention to your vehicle's warning lights, gauges, and indicators and promptly addressing any issues may help you to prevent an expensive repair or personal injury. Postponing repairs can be costly and even dangerous.

#### **Instrument Cluster**

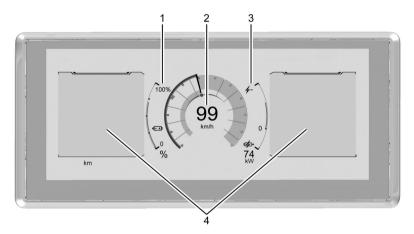

Single Gauge Layout Shown, Others Similar

- 2. Speedometer \$\triangle\$ 105
- 4. Driver Information Center (DIC) \$\sip\$ 122

#### **Reconfigurable Instrument Cluster**

The cluster display layout can be changed. Some of the selectable views may not be available for your particular vehicle.

The following are selectable views:


**Clean:** If equipped, displays no information zones.

**Single Gauge:** Displays two information zones that are located to the left and right of the speedometer.

**Dual Gauge:** If equipped, displays the battery gauge and power indicator gauge to the left and right of the information zone.

Map: Displays a navigation map.

**Driver Assistance:** If equipped, displays information for Adaptive Cruise Control, Follow Distance, Lane Keep Assist, and Forward Collision Alert. There is one information zone to the right of the display.

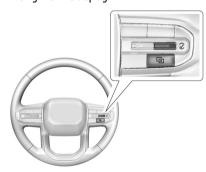

Use the right steering wheel control to open and scroll through the different items and displays.

To change the cluster configuration, press on the right steering wheel control.

If equipped, to change the gauge faces, press and hold → and use ∧ or ∨ on the right steering wheel control. Press ✓ on the right steering wheel control to select the desired option from the list.

#### **Display Settings**

The following options can be turned on or off using the infotainment display. Some may not be available for your particular vehicle. See Settings ❖ 157.

#### Speed Sign

Shows sign information from a roadway database in the onboard navigation. The sign will show "--" when there is no detected speed limit or the system is unavailable.

#### **Turn-by-Turn Graphics**

Provides Turn-by-Turn navigation graphics during an active route in your driver display.

### **Traffic Sign Recognition**

Displays the detected speed limit in your driver display. A message will display if you exceed the detected speed limit.

## Speedometer

The speedometer shows the vehicle speed in either kilometers per hour (km/h) or miles per hour (mph).

This vehicle is equipped with an overspeed warning device. When the vehicle's speed reaches 120 km/h (75 mph), an audible alert will sound. A message also displays in the Driver Information Center. See *Vehicle Speed Messages* 

⇒ 128.


#### Odometer

The odometer displays the distance the vehicle has been driven, in either kilometers or miles.

## **Trip Odometer**

The trip odometer displays the distance the vehicle was driven since the trip odometer was last reset.

## **Battery Gauge (High Voltage)**

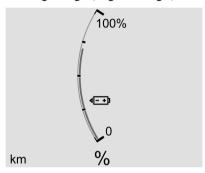

Single Battery Gauge Shown, Others Similar

This displays the high voltage battery state of charge. The value at the bottom is an estimate of how far the vehicle can be driven on the remaining charge based on recent driving habits, conditions, and HVAC usage.


The fill bars shown inside of the gauge indicate the percentage range as estimated from current vehicle conditions and climate settings. The range estimate may be affected by climate settings, current vehicle conditions,

and ambient conditions. Estimated range may increase and decrease based on climate control energy consumption.

Driving aggressively through hard acceleration and/or braking events, excessive HVAC usage, using heated or cooled seats, battery preconditioning, and performance modes can affect vehicle range estimates.

When the high voltage battery state of charge level gets low, the gauge will change color to amber. When the charge is very low, the estimated range value will change to LOW. Additional alerts may display and a sound may also be heard at low state of charge.

## **Power Indicator Gauge**

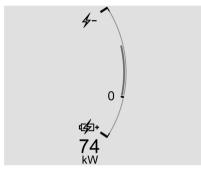

Single Power Indicator Gauge Shown, Others Similar

The power indicator gauge is in the center of the display to the right of the speedometer in the Single Gauge layout.

This gauge displays the instantaneous charge and consumption power of the high voltage battery. Maximum power consumption is available when the high voltage battery is fully charged. During normal operation, a slight reduction in consumption power may occur as the high voltage battery state of charge decreases.

#### **Regenerative Braking**

When regenerative braking is active, the regen battery icon displays and will fill the lower section of the gauge. The power indicator gauge value shows the amount of instantaneous power being regenerated.

#### **Regenerative Power Limited**

Regenerative power may be limited when the high voltage battery is near full charge or cold. This will affect the vehicle's maximum regenerative braking power.

#### **Seat Belt Reminders**

#### **Driver Seat Belt Reminder Light**

There is a driver seat belt reminder light on the instrument cluster.



When the vehicle is started, or if the driver remains or becomes unbuckled while the vehicle is moving, this light flashes and an audible alert sounds to alert the driver to fasten their seat belt. The light will then display solid until the driver seat belt is buckled. This cycle may continue several times until the driver seat belt is buckled. If the driver seat belt is buckled, the light will not display and audible alert will not sound.

#### Front Passenger Seat Belt Reminder Light

This vehicle may have a front passenger seat belt reminder light near the passenger airbag status indicator. See *Passenger Sensing System* 

⇒ 59.



When the vehicle is started and not moving, and if the passenger has not buckled their seat belt, the light flashes and then displays solid until the passenger is buckled. If the front passenger remains or becomes unbuckled while the vehicle is moving, this light flashes and an audible alert sounds to alert the front passenger to fasten their seat belt. The light will then display solid until the front passenger seat belt is buckled. This cycle may continue

several times until the front passenger seat belt is buckled. If the front passenger seat belt is buckled, the light will not display and the audible alert will not sound.

Alerts may occur if an object, such as a briefcase, handbag, grocery bag, laptop, or other electronic device, is on the front passenger seat. To turn off the reminder light and/or audible alert, remove the object from the seat or buckle the seat belt.

#### Second Row Passenger Seat Belt Reminder Lights

This vehicle may have second row passenger seat belt reminder lights. The vehicle has one of the following displays.



 A shaded or green light indicates the seat belt is buckled



- An X indicates the seat belt is not buckled.
   A ✓ indicates the seat belt is buckled.
   For information on the front seat belt reminder lights, see "Driver Seat Belt Reminder Light" and "Front Passenger Seat Belt Reminder Light" listed previously.
- When the vehicle is started and not moving, and if a rear passenger has not buckled their seat belt, the light will display solid. If a rear passenger remains or becomes unbuckled while the vehicle is moving, this light flashes and an audible alert sounds to alert the rear passengers to fasten their seat belt.

## **Airbag Readiness Light**

This light shows if there is an electrical problem with the airbag system. It is located in the instrument cluster. The system check includes the airbag sensor(s), the passenger sensing system, the pretensioners, the airbag

modules, the wiring, and the crash sensing and diagnostic module. For more information on the airbag system, see *Airbag System* ⇔ 52.



The airbag readiness light comes on for several seconds when the vehicle is started. If the light does not come on then, have it fixed immediately.

## **△** Warning

If the airbag readiness light stays on after the vehicle is started or comes on while driving, it means the airbag system might not be working properly. The airbags in the vehicle might not inflate in a crash, or they could even inflate without a crash. To help avoid injury, have the vehicle serviced right away.

If there is a problem with the airbag system, a Driver Information Center (DIC) message may also come on.

## Rollover Detection System Status Indicator



If the vehicle has a rollover detection disable button on the instrument panel, it also has a rollover detection system status indicator in the overhead console.

When the vehicle is started, the rollover detection system status indicator (and the passenger airbag status indicator lights) turn on for several seconds as a system check.

See Passenger Airbag Status Indicator ▷ 108.

Then, after several more seconds, the rollover detection system status indicator will turn off to let you know the rollover detection system is enabled.

When the rollover detection system is manually turned off using the rollover detection disable button on the instrument panel, the rollover detection system status indicator will come on and stay on as

## **⚠** Warning

If the airbag readiness light ever comes on and stays on, it means that something may be wrong with the airbag system. For example, the roof-rail airbags could inflate even though the rollover detection system is turned off

If the airbag readiness light stays on, have the vehicle serviced right away. See Rollover Detection Disable Button ▷ 57 for more information, including important safety information.

## **Passenger Airbag Status Indicator**

The vehicle has a passenger sensing system. See *Passenger Sensing System* 

59 for important safety information. The overhead console has a passenger airbag status indicator.





When the vehicle is started, the passenger airbag status indicator will light the symbols for on and off for several seconds as a system check. Then, after several more seconds, the status indicator will light either the on or off symbol to let you know the status of the front outboard passenger frontal airbag.

If the on symbol is lit on the passenger airbag status indicator, it means that the front outboard passenger frontal airbag is allowed to inflate.

If the off symbol is lit on the passenger airbag status indicator, it means that the passenger sensing system has turned off the front outboard passenger frontal airbag.

If, after several seconds, both status indicator lights remain on, or if there are no lights at all, or if the airbag readiness light is on, there may be a problem with the lights or the passenger sensing system. See your dealer for service right away.

## 

If the airbag readiness light ever comes on and stays on, it means that something may be wrong with the airbag system. To help avoid injury to yourself or others, have the vehicle serviced right away. See Airbag Readiness Light → 107 for more information, including important safety information.

## Charging System Light (12-volt Battery)



This light displays briefly when you start your vehicle. This is a normal test your vehicle runs on start up.

If the light stays on or displays while driving, there could be a problem with the electrical charging system. Have it checked by your dealer. Driving while this light is on could drain the 12-volt battery.

If you must drive a short distance with the light on, turn off all accessories, such as the radio, to save battery power. Find a safe place to stop the vehicle

## Low State of Charge Light



This light displays amber when the vehicle state of charge is low. Proceed to a charging station to charge the vehicle.

## **Charge Cord Connected Light**



This light displays when a charge cord is connected to the vehicle.

#### **Charge Cord Connected and Locked Light**



If equipped, this light displays when a charge cord is connected and locked to the vehicle.

## **Battery Fault Light**



This light displays when there is a fault with the high voltage battery. A message may also display in the Driver Information Center (DIC). See your dealer for service.

## **Propulsion Power is Limited Light**





These lights display when vehicle propulsion power is limited. The vehicle is drivable, but the ability to accelerate the vehicle may be reduced.

## Service Vehicle Soon Light (Propulsion System Failure)



This light displays to indicate there may be an issue with your vehicle. See your dealer for service as soon as possible.

### **Brake System Warning Light**



## **⚠** Warning

The brake system might not be working properly if the brake system warning light is on. Driving with the brake system warning light on can lead to a crash. If the light is still on after the vehicle has been pulled off the road and carefully stopped, have the vehicle towed for service.

This light displays briefly when you start your vehicle. This is a normal test your vehicle runs on start up. If it does not display, see your dealer for service.

If the light stays on, have the brake system inspected immediately. This light may display if the brake fluid is low. See *Brake Fluid* \$\square\$299.

If the light displays while driving, pull off the road and stop carefully. The brake system has electric brake boost. Vehicle speed may be limited when the brake system warning light displays. The brake pedal might be harder to push, or the brake pedal may go closer to the floor. It could take longer to stop. If the light is still on, have the vehicle towed for service. See *Transporting a Disabled Vehicle* ♀ 336.

## **Electric Parking Brake Light**



This light displays when the Electric Parking Brake is applied. If the light flashes after the Electric Parking Brake is released, or while driving, there is a problem with the Electric Parking Brake system. A message may also display in the Driver Information Center.

If the light does not display, or remains flashing, see your dealer.

## Service Electric Parking Brake Light



This light may display briefly when you start your vehicle. This is a normal test your vehicle runs on start up. If it does not display, see your dealer for service.

If this light stays on or displays while driving, there is a problem with the Electric Parking Brake. Take the vehicle to a dealer as soon as possible. In addition to the parking brake, other safety functions that use the Electric Parking Brake may also be affected. A message may also display in the Driver Information Center. See Electric Parking Brake ♀ 193.

## Antilock Brake System (ABS) Warning Light



This light displays briefly when you start your vehicle. This is a normal test your vehicle runs on start up. If it does not display, see your dealer for service.

When the Antilock Brake System (ABS) detects a problem, the warning light displays and stays on, and you may hear an audible alert. Your vehicle brakes will still function, but your Antilock Brake System (ABS) is not functioning as expected. See your dealer for service.

If this warning light and the brake system warning light are displayed, your Antilock Brake System (ABS) and your regular brakes are not functioning as expected. See your dealer for service.

See Brake System Warning Light ⇒ 110.

## Service Four-Wheel Drive Warning Light

#### **eAWD**

This light displays amber when the Electric Four-Wheel Drive System is limited, and will turn off when the system is working normally. If this light displays red, there may be a malfunction. See your dealer.

See Four-Wheel Drive \$\to\$ 192.

## Lane Keep Assist (LKA) Light





If equipped, the Lane Keep Assist Light may display the following colors:

- White: Displays when the vehicle starts.
   A steady white light indicates that Lane Keep Assist is unable to assist.
- Green: Displays when Lane Keep Assist is turned on and ready to assist. Lane Keep Assist will gently turn the steering wheel if the vehicle approaches a detected lane marking.
- Amber: Displays when Lane Keep Assist is active. The light flashes amber as a Lane Departure Warning alert indicating that a lane marking has been unintentionally crossed. If the system detects you are steering intentionally (to pass or change lanes), the Lane Departure Warning alert may not display.

Lane Keep Assist will not assist or alert if the turn signal is active in the direction of lane departure, or if Lane Keep Assist detects that you are accelerating, braking, or actively steering. See Lane Keep Assist (LKA) ⇒ 253.

## **Lane Centering Assistance Light**



If equipped, this light displays the Lane Centering Assistance status.



If equipped, this light displays when you need to take control.

See Super Cruise \$\sime 214.

## Automatic Emergency Braking (AEB) Disabled Light



This indicator displays when you turn off Automatic Emergency Braking or Front Pedestrian Braking.

This indicator also displays if Automatic Emergency Braking or Front Pedestrian Braking are unavailable due to malfunction, weather conditions, or a dirty windshield.

See Automatic Emergency Braking (AEB) ⇒ 244. See Front Pedestrian Braking (FPB) System ⇒ 248.

#### Vehicle Ahead Indicator



If equipped, this indicator displays green when a vehicle is detected ahead and amber if you are following a vehicle too closely.

See Forward Collision Alert (FCA) System \$\sigma 242.

#### **Pedestrian Ahead Indicator**



If equipped, this indicator displays amber when a pedestrian is detected in front of the vehicle. See Front Pedestrian Braking (FPB) System 

⇒ 248.

## **Traction Off Light**



This light displays briefly when you start your vehicle. This is a normal test your vehicle runs on start up. If it does not display, see your dealer for service.

The traction off light displays when the Traction Control System has been turned off. When StabiliTrak/Electronic Stability Control is turned off, the Traction Control System is also turned off. To turn the Traction Control System and StabiliTrak/Electronic Stability Control off and on, see *Traction Control/Electronic Stability Control* ▷ 196.

If the Traction Control System is off, wheel slip does not limit acceleration unless necessary to help protect the driveline from damage. Adjust your driving accordingly.

## Traction Control System (TCS)/ Electronic Stability Control Light



This light displays briefly when you start your vehicle. This is a normal test your vehicle runs on startup. If it does not display, see your dealer for service.

The light flashes when the Traction Control System and/or the StabiliTrak/Electronic Stability Control System is actively working. If the light is on and not flashing, the Traction Control System and StabiliTrak/Electronic Stability Control System may not be fully operational or able to assist maintaining control. The Driver Information Center may display a message. Adjust your driving accordingly. If the condition persists, see your dealer as soon as possible.

The light may also flash when Antilock Brake System is active. See *Antilock Brake System* (ABS) ▷ 193.

### **Trailer Sway Control Light**



If equipped, this light will flash when Trailer Sway Control is active. See *Trailer Sway Control* (*TSC*) ⇒ 285.

## Electronic Stability Control (ESC) Off Light



This light displays briefly when you start your vehicle. This is a normal test your vehicle runs on start up. If it does not display, see your dealer for service.

This light displays when the StabiliTrak/ Electronic Stability Control system is turned off. When StabiliTrak/Electronic Stability Control is off, the Traction Control System is also off. To turn StabiliTrak/Electronic Stability Control off and on, see *Traction Control/Electronic Stability Control* ❖ 196.

If StabiliTrak/Electronic Stability Control and the Traction Control System are off, the systems do not assist in controlling the vehicle. Adjust your driving accordingly.

## **Driver Mode Control Light**



This light displays when you select Off-Road mode.



This light displays when you select the Tow/ Haul mode.



This light displays when you select My Mode.



If equipped, this light displays when you select Max Power mode

See *Driver Mode Control* \$\square\$ 197.

## **Four-Wheel Steering Light**



This light displays amber when Rear-Wheel Steering is off.



 $This \ light \ displays \ amber \ when \ Crab Walk \ mode \\ is \ active.$ 

See Four-Wheel Steering \$\sip\$ 199.

## **Air Suspension Light**



This light displays when the vehicle is raised to maximum height.



This light displays when the vehicle is raised to increased ground clearance height.

It flashes green to indicate that the vehicle is raising the ride height.



This light flashes green to indicate that the vehicle is lowering the ride height.



This light displays when the vehicle is lowered for easy entry and exit from the vehicle.



This light displays when the vehicle is lowered to Low Rider mode.



This light displays when the vehicle is in Service mode or Alignment mode.

See Air Suspension \$\sime 201.

## **Tire Pressure Light**



If equipped with the Tire Pressure Monitor System, this light displays briefly when you start your vehicle. This is a normal test your vehicle runs on start up.

The light displays to indicate information about tire pressures and the Tire Pressure Monitor System.

#### If the Light Stays On

This indicates that one or more of the tires are significantly underinflated.

A Driver Information Center tire pressure message may also display. Stop as soon as possible and inflate the tires to the pressure value shown on the Tire and Loading Information label. See *Tire Pressure* ♀ 318.

#### If the Light Flashes and Then Remains On

If the light flashes for about a minute and then stays on, there may be a problem with the Tire Pressure Monitor System. If the problem is not corrected, the light will display every time the vehicle is started. See *Tire Pressure Monitor Operation* ♀ 320.

## **Security Light**



This light displays briefly when you start your vehicle. This is a normal test your vehicle runs on start up. If it does not display, see your dealer for service.

If the light stays on and the vehicle does not start, there could be a problem with the theft-deterrent system. See *Immobilizer Operation* ⇒ 28.

## Vehicle Ready Light



The vehicle ready light displays when the vehicle is ready to be driven.

## **High-Beam On Light**



This light displays when the high-beam headlights are in use. See *High-Beam Systems* 

⇒ 131.

#### **Automatic High-Beam Light**



If equipped, this light displays when the IntelliBeam system is enabled. See *High-Beam Systems* ♀ 131.

## **Lights On Reminder**



This light displays when the exterior lights are in use. The light will not display when only the Daytime Running Lights are active. See Headlight Controls ▷ 131.

## **Cruise Control Light**



If equipped, this light displays white when cruise control is on and ready, and turns green when set and active.

The light turns off when cruise control is turned off. See Adaptive Cruise Control (Advanced)

⇒ 204.

## **Adaptive Cruise Control Light**



If equipped, this light displays white when Adaptive Cruise Control is on and ready, and turns green when set and active.

See Adaptive Cruise Control (Advanced) \$\simeq\$ 204.

## **Super Cruise Light**



If equipped, this light displays the Super Cruise status. See Super Cruise  $\Rightarrow$  214.

### **Driver Attention Assist Light**



If equipped, this light displays amber when:

- Drowsiness assistance is not available
- Driver Attention Assist has been disabled

See Driver Attention Assist \$\simeq\$ 252.

## **Door Ajar Light**



This light displays when a door is open or not securely latched. Before driving, check that all doors are properly closed.

## Information Displays Charging

Important Information about Electric Vehicle Charging

#### ▲ Danger

Improper use of portable electric vehicle charge cords may cause a fire, electrical shock, or burns, and may result in damage to property, serious injury, or death.

(Continued)

#### Danger (Continued)

- Do not use extension cords, multi-outlet power strips, splitters, grounding adapters, surge protectors, or similar devices.
- Do not use an electrical outlet that is worn or damaged, or will not hold the plug firmly in place.
- Do not use an electrical outlet that is not properly grounded.
- Do not use an electrical outlet that is on a circuit with other electrical loads.
- Charging an electric vehicle and increased charging rates can stress a building's electrical system more than a typical household appliance.
- Before plugging the charge cord into an electrical outlet for the first time, have a qualified electrician inspect and verify the electrical system (electrical outlet, wiring, junctions, and protection devices) for heavy-duty service at a 12 amp continuous load.

- Check electrical outlets often, as they may wear out with normal use or become damaged over time, making them unsuitable for electric vehicle charging.
- Check the electrical outlet/plug while charging. If the electrical outlet/plug appears hot, discontinue using it immediately and have the electrical outlet serviced by a qualified electrician.
- When charging outdoors, use an electrical outlet that is weatherproof.
- Mount the charging cord to reduce strain on the electrical outlet/plug.
- Do not place the charge cord in a position where there is risk of it being submerged in water.

#### **Charging App**

The Charging app provides access to features which help you to review and manage charging preferences.

To launch the Charging app from the infotainment home screen, touch the Charging icon. There are three selections to choose from: Next Charge, Schedule, and Settings. When you launch Charging for the first time, these selections will display.

### **Next Charge**

To view the current charging status on the infotainment screen, touch Next Charge.

On the Next Charge screen, you can review information for the next charging session and specify if you want to Charge Now or Charge Later.

#### **Charge Now**

Charge Now is the default charging mode for your vehicle. The vehicle begins charging immediately when it is plugged in and authenticated at a charging location.

With Charge Now selected, the screen displays:

- Text indicating that the vehicle will charge immediately when plugged in.
- The estimated time at which the vehicle will reach the desired charge level.
- Target Charge Level Gauge: The percentage at which the vehicle will stop charging.
   The gauge also displays an estimate of the vehicle's range upon completing the charging session.

## **⚠** Warning

Do not charge your vehicle's battery above an 80% charge if you are going to drive down long, steep grades such as mountain passes. This provides room in the battery for regenerative braking to supplement your conventional brakes during the descent. This is especially important when towing a trailer, which puts additional stress on your vehicle's braking system.

See Hill and Mountain Roads ❖ 179 for important information about driving on grades.

The default charge level is 80% when plugged in to protect battery life. To set a different charge level, drag the marker on the Target Charge Level Gauge to the preferred value. To lower the desired charge level, drag the marker to the left, and to increase it drag the marker to the right. The range estimate updates once the desired charge level is set. To optimize battery health, the minimum allowable charge level is determined by the vehicle.

#### **Charge Later**

Instead of charging immediately to a desired charge level, you may choose to delay the charge to the vehicle and have it completed by your desired departure time. This may be a more economical choice and a more efficient use of energy when charging at home. To use this mode, touch Charge Later on the Next Charge screen.

With Charge Later selected, the screen displays:

- Text indicating that your vehicle will delay charging to be ready by the time specified.
- The ability to set the desired time at which the vehicle will finish charging and be ready for departure.
- Target Charge Level Gauge: Ability to set the percentage at which the vehicle will stop charging. The gauge also displays an estimate of the vehicle's range upon completing the charging session.
- Preconditioning: Ability to heat or cool the cabin to your desired temperature using energy from the charger. Energy from the battery is not used to condition the cabin, ensuring the vehicle gets the maximum range from the charging

session. Preconditioning happens at the end of the charge, and right before the departure time.

To set the time at which the vehicle will complete the charge and be ready for departure:

Drag each value up or down within the time selector until the preferred time is selected. If the desired charge level cannot be reached by the selected time, a message will display that one of the two preferences must be adjusted.

To adjust desired charge level in Charge Later mode, see "Charge Now" earlier in this section.

Setting the Preconditioning preference:

Touch the switch to turn on Preconditioning. The Preconditioning temperature can be adjusted by touching Preconditioning on this screen, or in Settings.

#### **Active Charging**

During an active charging session, the Charging screen displays and continuously updates the following items:

• The current charging status.

- The range the vehicle is capable of driving at the current charge level.
- The estimated time at which the vehicle will reach the desired charge level.
- If equipped, the current amount of power that is charging the high voltage battery
- If equipped, the maximum amount of power your vehicle is able to charge at
- Target Charge Level Gauge: The current charge level value represented as a percentage and a colored section of the gauge.

To update the desired charge level for the active charging session, drag the marker on the Target Charge Level Gauge.

If the charge coupler is locked, the Stop Charge button will display. Touching the Stop Charge button at any time ends the active charging session.

If equipped for Level 1 and Level 2 chargers, you can also select the appropriate charge cord limit for your location. This determines how much current will flow from an electrical outlet to the vehicle battery. It also ensures proper charge time estimates.

When the charge cord limit is changed to the highest setting on a 120-volt circuit a notification is displayed.

If no Home Location is set, the Level 1 cord limit will revert to the lowest setting every time the vehicle is shifted out of (P) Park.

Range and charge time estimates fluctuate depending on several factors such as charge cord level/limit, battery temperature, and outside temperature.

The peek-in charging screen can be used to monitor your vehicle's charge status when the vehicle is off, see *Instrument Cluster* \$\infty\$ 104. If equipped, to monitor the charging status remotely, download the myGMC app on your mobile device

#### **Fast Charging**

If equipped, the vehicle will immediately begin charging when plugged into a fast charging station. While Fast Charging, the vehicle will bypass any schedule or departure time selection. See *Plug-In Charging* ♀ 255.

#### Schedule

Navigate to Home Charge Schedule to schedule a custom charging plan for each day of the week. When the vehicle is plugged in at

121

#### Instruments and Controls

the Home Location, the Schedule feature will automatically charge to the desired charge level and pre-condition the cabin by the time set in the Schedule. This feature acts as a more customizable Charge Later setting than the one on the Next Charge screen.

#### **Creating a Schedule**

To create a schedule, touch Create Schedule. If there is no Home Location set, you will be prompted to create one.

The Charging Schedule screen displays:

- Days of the week.
- A value selector for setting the desired charge level.
- A time selector for setting the time the vehicle will reach the desired charge level.
- Preconditioning: Allows the vehicle to heat or cool the cabin to the desired temperature by using energy from the charger.
- An X allowing you to close the Charging Schedule screen.
- Save & Close button: Applies any changes made and exits the screen.

Days can be assigned to the schedule. Days of the week are represented in toggles containing their first letter. Touching each day illuminates the graphic, confirming that day is assigned that to the schedule. Touching a second time unassigns days from this schedule, dimming the toggle once again. Select all days you wish to adhere to the settings in this schedule. If there are multiple charge schedules, days must be unassigned from their current schedule before they can be assigned to a new one.

Once completed with the charging schedule, touch the Save & Close button to finish creating the schedule.

On days that are not assigned a schedule, the vehicle will begin charging to 80% as soon as it is plugged in, unless otherwise specified on the Next Charge screen.

Home Charge Schedule can be turned ON or OFF. To enable or disable all charging schedules, touch the toggle switch next to Home Charge Schedule on the Schedule screen.

#### **Modifying and Deleting Charge Schedules**

To modify a schedule, touch the card on the Schedule screen. This will open a screen. Make the desired changes and then touch the Save

& Close button when finished. To delete the schedule, touch the Delete Schedule button and confirm your decision when prompted.

#### **Charge Settings**

To view and change the Charge Settings, touch .

Use this screen to set vehicle charging preferences. Touching any item will display options for specifying their behavior.

The Settings screen displays:

#### **Home Location**

With a Home Location set, the vehicle can determine whether it is plugged in at home and will charge according to any existing schedules. The Home Location can be changed or deleted at this screen.

Wireless service and GPS satellite technologies must be available and operating for features to function properly. These systems may not operate if the battery is disconnected, or if the vehicle has been off for an extended period. If GPS is unavailable, a message displays on the infotainment screen. GPS functionality may resume after the next time you drive the vehicle.

#### **Notifications**

This section contains on/off preferences for multiple notifications triggered during the charging session.

Charge Status Feedback: When on, your vehicle will chirp to accompany changes in the charging status.

Charge Cord Unplugged Alert: If equipped, when on and your vehicle is locked and connected to a portable cord (120-volt) charger, the horn sounds and the headlights flash if the charge cord becomes unplugged.

Charge Power Loss Alert: When on, your vehicle will chirp for an extended period if charging power is cut off.

Headlight Charging Indication: If equipped and on, your vehicle's headlights show the charging status. As the battery charges, more LED bars within the headlights turn on. The headlights automatically turn off when charging is complete.

#### **Fast Charge Prep**

If equipped, adjusts the battery to the optimal temperature for quicker Fast Charging. This should be done before charging at a Fast Charger.

Depending on the outside and battery temperature, Fast Charge Prep could take longer to reach the optimal temperature.

When using Google Maps, the Fast Charge Prep feature begins automatically when a Fast

Charge station is added to your route via the  $\triangle$  on the infotainment screen.

#### **Preconditioning Temperature**

Allows you to set the preferred cabin temperature. During a planned charging session at the Home Location, the vehicle cabin is warmed or cooled to this temperature if set to ON in either the Charge Later screen, or in an active Schedule.

#### **Preferred Charge Times**

Allows you to enable preferred charge time windows for the Home Location during both weekday and weekend planned charging sessions. It does so whether the vehicle is set to Charge Later or observing a scheduled charge. This allows for charging at a lower cost by prioritizing charging during the electrical provider's off-peak period. The vehicle will use these times to reach the desired charge level by the scheduled time. If the vehicle cannot

reach the desired charge level within these times, it will charge as needed outside of this time window.

## **Driver Information Center (DIC)**

Driver information is displayed in the instrument cluster. It shows the status of many vehicle sustems.

Information is broken down into two main zones:

**Left Zone:** Displays on the instrument cluster to the left of the speedometer.

**Right Zone:** Displays on the instrument cluster to the right of the speedometer.



∧ or ∨ : Use to scroll to the previous or next selection.

✓: Press to open a menu or select a menu item. Press and hold to reset certain displays.

#### **Information Display Options**

Select which info display to view by selecting Add to Driver Display in the Vehicle Status on the infotainment display. See *Vehicle Status* 

⇒ 124.

#### **Information Displays**

The following is the list of all information displays and their locations. Some information displays may not be available for your vehicle.

#### Left Zone

**Trip Information:** The Trip 1 or 2 display shows the current distance traveled, in either kilometers (km) or miles (mi), since the trip odometer was last reset. To reset the trip, touch and hold the touchscreen display when trip odometer is displayed on the vehicle status screen.

The Average Efficiency shows the approximate average kWh per 100 kilometers (kWh/100 km), kilometers per kilowatt hour kWh (km/

kWh), or miles per kilowatt hour kWh (mi/kWh). This number is calculated based on the number of kWh/100 km, km/kWh, or mi/kWh recorded since the last time this menu item was reset. This number only reflects the approximate average electrical energy economy that the vehicle has at that moment, and changes as driving conditions change.

**Current Trip:** Displays distance driven, average efficiency, and time elapsed since vehicle startup. It resets when you turn your vehicle off.

**Time/Date:** Displays current date, time, and temperature information.

Tire Pressure: Shows the approximate pressures of all four tires. Tire pressure is displayed in either kilopascal (kPa) or in pounds per square inch (psi). If the pressure is low, the value for that tire is shown in amber. See Tire Pressure Monitor System ▷ 319 and Tire Pressure Monitor Operation ▷ 320.

If equipped, Tire Temperature is located below the tire pressure graphic. Tire Temperature shows overall temperature as either Cold, Cool, Normal, Warm, or Hot. Normal is typical for normal driving while Warm is typical for spirited driving. Unknown displays when tire temperature information is unavailable.

**Trailer Brake:** On vehicles with the Integrated Trailer Brake Control (ITBC) system, the trailer brake display appears in the Driver Information Center (DIC).

TRAILER GAIN shows the trailer gain setting.
This setting can be adjusted from 0.0 to 10.0
with either a trailer connected or disconnected

TRAILER OUTPUT shows the power output to the trailer any time a trailer with electric brakes is connected. Output is displayed as a bar graph. Dotted lines may appear in the OUTPUT display if a trailer is not connected.

Trailer Tire Pressure: If equipped, shows the approximate pressures of all trailer tires. Tire pressure is displayed in either kilopascal (kPa) or in pounds per square inch (psi). If the pressure is low, the value for that tire is shown in amber. See *General Towing Information* 

⇒ 268.

Trailer Tire Temperature is located below the tire pressure. Trailer Tire Temperature shows each trailer tire temperature in either degrees Celsius (°C) or degrees Fahrenheit (°F).

Energy Usage: Shows energy usage of the Driving, Remote Climate, and Climate and Fast Charge Prep vehicle systems as percentages of overall vehicle energy use.

**Energy Efficiency:** Shows a graph showing the energy efficiency that has been used by the vehicle over a recently driven distance.

**Off:** Allows for no information to be displayed in the cluster info display areas.

#### **Right Zone**

Auto Lane Change: Displays the status of a driver-requested lane change when Super Cruise is active. See Super Cruise 

214.

**Audio Now Playing:** Displays the actively playing audio.

**Navigation:** Displays a variety of navigation information.

Phone: Displays a variety of call information.

Off: Allows for no information to be displayed in the cluster info display areas.

#### **Vehicle Status**

To access the menu select the Vehicle Status icon from the infotainment home screen. Vehicle status content is grouped together and shown on the infotainment display.

Selecting vehicle status content on the infotainment display shows the available options. Follow any message or alerts that may display. Some options may be unavailable while driving.

Touch Add to Driver Display to send the desired content to the Driver Information Center (DIC) on the instrument cluster. Touch Remove from Display to remove the selected content from the instrument cluster. See *Driver Information Center (DIC)* ▷ 122.

#### **Options**

The following is the list of all possible vehicle status content and location. Some but not all of the content and options may be available for your particular vehicle.

#### Overview

Displays an interactive image of your vehicle that shows performance and health information.

#### **Tire Pressure**

Displays the approximate pressures of all four tires. Tire pressure is displayed in either kilopascal (kPa) or in pounds per square inch (psi). If the pressure is low, the value for that tire

is shown in amber. See *Tire Pressure Monitor* System \$\simeq\$ 319 and *Tire Pressure Monitor* Operation \$\simeq\$ 320.

If equipped, Tire Temperature is located below the tire pressure graphic. Tire Temperature shows overall temperature as either Cold, Cool, Normal, Warm, or Hot. Normal is typical for normal driving while Warm is typical for spirited driving. Unknown displays when tire temperature information is unavailable.

The following options may be chosen: Relearn Sensors, and Add to Driver Display.

#### Energy Info

Energy Usage: Displays how energy is being used for the current drive since the last time the vehicle was started. Percentages of the Driving, Remote Climate, and Climate and Fast Charge Prep vehicle systems as overall vehicle energy use are shown. When selected, distance driven, total energy, energy usage bar diagram, and selectable categories are displayed. Select a category to learn more about how your vehicle uses energy from the batteru.

Add to Driver Display may be chosen.

Energy Efficiency: Displays a graph showing the energy efficiency that has been used by the vehicle over a recently driven distance. When selected, regenerated range, and instant efficiency is shown along with average efficiency in the dialog.

Add to Driver Display may be chosen.

Battery Capacity: Displays the capacity of the high voltage battery compared to when it was new. It is normal for capacity and range to decrease with age. When the battery is new, CALCULATING will display while the capacity is determined.

The LAST UPDATED value updates automatically and may not appear right away. To attempt an update:

- Drain the battery to LOW range. To do so, try driving the vehicle or running the HVAC system on high. When the battery nears LOW range, go to a charge station. See Battery Gauge (High Voltage) \$\DDS\$ 105.
- 2. Once at LOW, shift into P (Park), turn off and exit the vehicle, removing the remote key.
- 3. Let the vehicle sit for three hours.
- 4. Plug in and charge the vehicle to 100%.

- 5. Once vehicle is complete at 100%, let the vehicle sit for another three hours.
- 6. Start the vehicle and see if the LAST UPDATED value has reset to 0 kilometers (0 miles).

The above procedure does not guarantee an update to the LAST UPDATED value. An update may not occur if battery conditioning or another event interrupts the rest period, or no changes have occurred since the last update. Frequently performing this action may reduce high voltage battery performance.

#### Trip

**Trip Information:** Trip 1 or 2 displays the current distance traveled, in either kilometers (km) or miles (mi), since the trip odometer was last reset

If equipped, Average Efficiency shows the approximate average kilometers per kilowatt hour kWh (km/kWh) or miles per kilowatt hour kWh (mi/kWh). This number is calculated based on the number of km/kWh or mi/kWh recorded since the last time this menu item was reset. This number only reflects the approximate average electrical energy economy that the vehicle has at that moment, and changes as driving conditions change.

To reset these values, touch reset on the touchscreen display when the Trip Information dialog is selected.

The following options may be chosen: Reset Trip 1, Reset Trip 2, and Add to Driver Display.

Current Trip: Displays distance driven, average efficiency, and time elapsed since vehicle startup. It resets when you turn your vehicle off.

Add to Driver Display may be chosen.

## Head-Up Display (HUD)

If equipped with HUD, certain vehicle information is projected through a lens on top of the instrument panel onto the windshield.

## **⚠** Warning

If the HUD image is too bright or too high in your field of view, it may take you more time to see things you need to see when it is dark outside. Be sure to keep the HUD image dim and placed low in your field of view.

#### Caution

If you try to use the HUD image as a parking aid, you may misjudge the distance and damage your vehicle. Do not use the HUD image as a parking aid.

Polarized sunglasses can make the HUD image harder to see

The HUD information can be displayed in various languages. The speedometer reading and other numerical values can be displayed in either English or metric units.

The language selection and the units of measurement are changed through the infotainment screen. See *Settings* ⇔ *157* under the System menu.

Depending on how the vehicle is equipped, the HUD may display some of the following vehicle information, messages, or alerts:


- Speed
- Incoming Phone Call/Outgoing OnStar Advisor Call
- Navigation
- Driver Assistance Indicators

Vehicle Messages

Some vehicle messages or alerts displayed in the HUD may be cleared by using the steering wheel controls. Critical alerts may display in the HUD, even when it is turned off.

#### **HUD Controls**

If equipped, the HUD Controls can be found in the Controls app on the infotainment screen. You can adjust brightness, height, and rotation or turn the HUD on/off. This feature may only be available in P (Park).

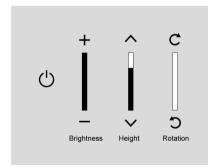

To adjust the HUD image:

Adjust the driver seat to your optimal driving position.

- 2. Start the vehicle.
- 3. On the infotainment screen navigate to Home > Controls > HUD
- Use the height and rotation icons or tap the bars to adjust the HUD to a position that is level with the ground with the entire image fully visible and clear.
- The HUD image will automatically dim and brighten to compensate for outside lighting. Adjust as needed using the brightness icons or bar.

The HUD image can temporarily light up depending on the angle and position of sunlight on the HUD image. This is normal.

#### **HUD Options**

The posted speed sign can be turned on or off from the HEAD-UP DISPLAY screen. See Settings 

⇒ 157 under the Display menu.

#### **HUD Content**

If equipped, the following content is displayed in the HUD.

**Speed:** Displays the speedometer reading in English or metric units and posted speed limit (if enabled). Select status indicators are also displayed in the HUD, see *Symbols* ⇔ 2.

**Navigation:** Displays the speed, select indicators, and Turn-by-Turn navigation information during an active route.

Navigation Turn-by-Turn alerts shown in the instrument cluster may also be displayed in the HUD.

#### Care of the HUD

Clean the inside of the windshield to remove any dirt or film that could reduce the sharpness or clarity of the HUD image.

Clean the HUD lens with a soft cloth sprayed with glass cleaner. Wipe the lens gently, then dry it.

#### **HUD Troubleshooting**

If you cannot see the HUD image when the vehicle is on, ensure that:

- Nothing is covering the HUD lens.
- The HUD brightness setting is not too dim or too bright.
- The HUD is adjusted to the proper height and rotation.
- You are not wearing polarized sunglasses.
- The windshield and HUD lens are clean.

If you continue to experience problems with the HUD, contact your dealer.

The windshield is part of the HUD system. See Windshield Replacement 

→ 303.

## **Vehicle Messages**

Messages displayed on the Driver Information Center (DIC) indicate the vehicle status or needed action to correct a condition. Multiple messages may appear together.

If equipped, vehicle status notifications are also sent to the infotainment display. Touch on the infotainment home screen to display vehicle messages. A red dot on the notification icon indicates an active issue. Depending on the message, you can schedule a service, find the nearest dealer, or find the nearest charging station.

Press ✓ to acknowledge and clear the messages that do not require immediate action. You cannot clear messages that require immediate action until that action is performed.

Address and follow all message instructions promptly; clearing a message does not correct the issue.

If a SERVICE message appears, see your dealer. The system may display messages concerning:

- Service Messages
- Fluid Levels
- Vehicle Securitu
- Brakes
- Ride Control Systems
- Advanced Driver Assistance Systems
- Cruise Control
- Lighting and Bulb Replacement
- Wiper/Washer Systems
- Doors and Windows
- Seat Belts
- Airbag Systems
- Propulsion
- Tire Pressure
- Battery
- Steering

## Propulsion Power Messages REDUCED ACCELERATION DRIVE WITH CARE

A message displays when the vehicle's propulsion power is reduced. A reduction in propulsion power can affect the vehicle's ability to accelerate. If this message is on, but there is no observed reduction in performance, proceed to your destination. Under certain conditions, the performance may be reduced the next time the vehicle is driven. The vehicle may be driven while this message is on, but maximum acceleration and speed may be reduced. Anytime this message stays on, or displays repeatedly, the vehicle should be taken to your dealer for service as soon as possible.

This message can be displayed when the high voltage battery charge level is low. This is normal behavior as the vehicle is limiting power due to reduced battery capability.

Under certain operating conditions propulsion will be disabled. Try restarting after the vehicle has been off for two minutes.

## PROPULSION POWER REDUCED DUE TO TEMPERATURE

A message displays when the vehicle is on, the battery temperature is low, and the vehicle power is limited. The duration of the limited vehicle performance depends, in part, on the high voltage battery charge level. If the high voltage battery charge level is relatively high, as the vehicle is driven, the battery temperature will increase, and the vehicle will return to normal operation. If the high voltage battery charge level is relatively low the vehicle will not return to normal operation until charged.

Keep the vehicle plugged in, even when fully charged, to keep the high voltage battery temperature ready for the next drive. This is important when outside temperatures are extremely hot or cold.

## Vehicle Speed Messages SPEED LIMITED TO XXX KM/H (MPH)

This message shows that the vehicle speed has been limited to the speed displayed. The limited speed is a protection for various

propulsion and vehicle systems, such as lubrication; thermal; brake; suspension; tire; or, if equipped. Teen Driver.

# Universal Remote System Universal Remote System Programming

The Universal Remote System can replace up to eight remote control transmitters (remote controls), such as garage door openers, security systems, and home automation devices. These instructions address garage door openers, but will work for other devices. too.

Do not use the Universal Remote System with any garage door opener that does not have the stop and reverse feature. This includes any garage door opener model manufactured before April 1, 1982.

Keep the original hand-held transmitter for use in other vehicles and future programming and erase the system if you terminate vehicle ownership. See "Erasing Universal Remotes" later in this section.

## Programming the Universal Remote System

Programming involves time-sensitive steps. You must complete these steps within the allotted time, or you will have to repeat programming.

Read these instructions completely before programming the Universal Remote System. It may help to have another person assist with the programming process.

- If your garage door opener includes a handheld transmitter, make sure it has a new battery for quick and accurate transmission of the radio-frequency signal.
- 2. Clear all people and objects away from the garage door.
- Park your vehicle outside and directly facing the garage door opener receiver. The vehicle must remain in P (Park) for the entire duration of the programming.
- 4. From the Controls menu, select Universal Remotes > Add Remote.

Depending on the vehicle, access the Controls menu from either the infotainment home screen or the front center console. If you have a hand-held transmitter, make sure to press Yes to continue to the next step.

If your garage door opener does not include a hand-held transmitter, press either D-Mode (mostly used in North America), or UR-Mode (mostly used in Europe, Mideast, and Asia), and jump to "D-Mode and UR-Mode Based Programming" later in this section.

#### **Hand-Held Transmitter Based Programming**

Once you press Yes for the hand-held transmitter, you should see a screen with Searching for Signal.

- 6. While Searching for Signal is displayed, press and hold the hand-held transmitter button about 3 to 8 cm (1 to 3 in) away from the rear-view mirror. Do not release the button until Signal Found displays. If Signal Found does not display after 45 seconds, press < and return to Step 4 to try again.</p>
  - Some garage door openers require a modification to Step 6. See "Radio Signals for Some Gate Operators" later in this section.

- Once Signal Found displays, press the Test button. You may need to press it several times, as some garage door openers require multiple valid signals when programming.
- 8. If your garage door moves, press the It Worked button to confirm programming was successful and end the process. If programming was not successful, you can return to Step 4 and try again or follow additional steps described in "D-Mode and UR-Mode Based Programming" later in this section. You can also consult with HomeLink by jumping to "Contact HomeLink" later in this section.

#### **D-Mode and UR-Mode Based Programming**

If supported, you may be able to program D or UR mode garage door receiver remotes.

 Locate the Learn or Smart button on the garage door opener receiver in the garage. The name and color may vary by manufacturer but is usually located near the antenna wire. If you have any difficulty finding the button, refer to the garage door opener manufacturer's instructions.

- 10. Press and release the Learn or Smart button on the garage door opener receiver, then complete the next step within 30 seconds of pressing the button. If it takes longer than 30 seconds, press the button again.
- 11. Return to the vehicle and press the Test button on the screen. You may need to press the Test button several times. If your garage door moves, then programming was successful. Press the It Worked button to confirm programming was successful and end the process.

If programming was not successful, you may retry steps above by pressing the It Didn't Work button or consult with HomeLink by jumping to "Contact HomeLink" later in this section.

#### **Contact HomeLink**

For questions or programming help, visit www.homelink.com/gm.

#### **Using Universal Remotes**

After successfully programming your Universal Remote, you can change the name and location of the remote as desired by selecting next to the remote on the screen.

Be sure that you are nearby your programmed garage door opener when you select Update Location.

Each successfully programmed remote creates a shortcut icon. Tap the desired shortcut icon to operate the remote. You can press and drag icons to reposition them on the screen as desired.

#### **Erasing Universal Remotes**

To erase an individual programmed Universal Remote, select next to the remote on the screen you wish to erase. Then select Delete.

To erase ALL programmed Universal Remotes, select next to any remote on the screen. Then select Delete All.

#### **Radio Signals for Some Gate Operators**

Some gate operators and radio-frequency laws require transmitter signals to time out after several seconds of transmission.

This may not be long enough for the Universal Remote system to pick up the signal during programming. If programming did not work, replace Step 6 under "Programming the Universal Remote System," previously in the section, with the following:

Press and release the hand-held transmitter button every two seconds until Signal Found appears on the screen. Continue to Step 7 to complete programming.

## Universal Remote System Operation

#### **Using the Universal Remote System**

Press the desired Universal Remote button on the infotainment screen or the front center console, depending on the vehicle.

## Reprogramming a Single Universal Remote System Button

To reprogram any of the system buttons:

- 1. Select the universal remote to be reprogrammed.
- 2. Select "Delete."
- 3. Select "Add Remote." Follow the instructions in *Universal Remote System Programming* \$\sqrt{228}.

#### Lighting

131

## Lighting

Exterior Lighting	
Headlight Controls	131
High-Beam Systems	131
Headlights Off Reminder	133
Daytime Running Lights	133
Automatic Headlight System	133
Hazard Warning Flashers	134
Turn and Lane-Change Signals	134
Cornering Lights	
Exterior Cargo Lights	
Interior Lighting	
Instrument Panel Illumination Control	135
Dome Lights	136
Reading Lights	136
Lighting Features	
Entry Lighting	136
Exit Lighting	137
Battery Load Management	137
Battery Power Protection	137
Exterior Lighting Battery Saver	138
<del>-</del>	

## **Exterior Lighting Headlight Controls**

The headlight control is located on the infotainment screen. Touch the Headlights - A-symbol, then select any of the following options.

Off: Turns off the exterior lights.

Auto: Enables the automatic headlight system, which controls the exterior lights and instrument panel lights depending on outside lighting. See Automatic Headlight System 

⇒ 133.

1005: Turns on the parking lights, taillights, and license plate lights.

: Turns on the headlights; other exterior lights such as taillights, parking lights, and license plate lights; and the instrument panel lights.

Headlights can also be activated in the Controls & Safety app. On the infotainment home screen, touch the Controls icon , then select See More Controls > Lights > Headlights.

#### Optional Reminder If Headlights Are Off

You can set a reminder for the vehicle to display a message if it is dark outside and the headlights are off. On the infotainment home screen, touch >> See More Controls > Lights > Headlights, then touch >> in the upper corner of the Headlights menu. Touch the box next to Turn Headlight Reminder On to enable or disable the option.

## **High-Beam Systems**

### **Manual High-Beam Controls**

#### High/Low-Beam Changer

To manually turn the high beams on, push the turn signal lever away from you until it stays in place. To return to low beams, push the lever again or pull it toward you and release.

The high-beam indicator light appears in the instrument cluster when the high-beam headlights are on.

#### Flash-to-Pass

To flash the high beams, pull the turn signal lever toward you and release.

#### 132 Lighting

## Automatic High-Beam System — IntelliBeam

If equipped, the IntelliBeam system turns the high-beam headlights on and off according to surrounding traffic conditions.

The system turns the high beams on when it is dark enough and there is no other traffic present.

This light appears on the instrument cluster when the IntelliBeam system is enabled.

#### Turning the IntelliBeam System On and Off

To enable the IntelliBeam system, select
Controls App > Auto High Beams > On. The
system can also be enabled at > See More
Controls > Lights > Auto High Beams > On.

The system engages only when the Headlight control -為- is set to Auto or D. See Headlight Controls ⇒ 131

To disable the system, either select > Auto High Beams > Off, or turn on the manual high beams with either the high/low-beam changer or flash-to-pass.

#### **Driving with IntelliBeam**



Using high beams in dense exhaust, smoke, fog, snow, road spray, mist, or other airborne obstructions can cause a glare, obstructing your vision. This reduction in visibility can result in a crash. Never use high beams in dense exhaust, smoke, fog, snow, road spray, mist, or other airborne obstructions.

The system only activates the high beams when driving over 40 km/h (25 mph).

The blue High-Beam On light AUTO appears in the instrument cluster when the high beams are on.

There is a sensor near the top center of the windshield that automatically detects the lights of oncoming and preceding vehicles. Keep this area of the windshield clear of debris to allow for best system performance.

The high-beam headlights remain on, under automatic control, until one of the following situations occurs:

- The vehicle speed drops below 20 km/h (12 mph).
- The outside light is bright enough that high-beam headlights are not required.
- The system detects an approaching vehicle's headlights.
- The system detects a preceding vehicle's taillights.
- The IntelliBeam system is manually disabled.
- The headlight control is set to Off or Parking 200-.

The high-beam headlights may not turn off automatically if the system cannot detect another vehicle's lights because of any of the following conditions. The IntelliBeam system may then need to be disabled.

- The other vehicle's lights are missing, damaged, obstructed from view, or otherwise undetected.
- The other vehicle's lights are covered with dirt, snow, and/or road spray.

- The other vehicle's lights cannot be detected due to dense exhaust, smoke, fog, snow, road spray, mist, or other airborne obstructions.
- The vehicle windshield is dirty, cracked, or obstructed by something that blocks the view of the light sensor.
- The vehicle is loaded such that the front end points upward, causing the light sensor to aim high and not detect headlights and taillights.
- The vehicle is being driven on winding or hilly roads.

## **Headlights Off Reminder**

A warning chime sounds if the driver door is opened when the vehicle is off and the headlights are on.

## **Dautime Running Lights**

Daytime Running Lights make it easier for others to see the front of your vehicle during the day.

The Automatic Headlight System turns the Daytime Running Lights on and off.

#### When Daytime Running Lights Turn On

The Daytime Running Lights turn on when all of the following conditions are met:

- The vehicle is on
- The headlight control is set to Auto
- The light sensor determines it is daytime

The instrument panel lights, taillights, and other exterior lights do not turn on when the Daytime Running Lights are on.

#### When Daytime Running Lights Turn Off

When it begins to get dark, the automatic headlight system turns off the Daytime Running Lights and turns on the headlights.

The Daytime Running Lights turn off when you either turn on the headlights or turn off the vehicle.

## **Automatic Headlight System**

The automatic headlight system controls the headlights, other exterior lights, and instrument panel lights depending on the outside light level.

To enable the system, set the headlight control to Auto.

- If it is dark enough outside, the system turns on the exterior lights—such as headlights, taillights, parking lights, and license plate lights—and the interior instrument panel lights.
- If it is bright enough outside, the system turns off the exterior lights and instrument panel lights, and may turn on the Daytime Running Lights (DRL).

To turn off the automatic headlight system, either set the headlight control to Off or turn the vehicle off.

#### **Low Light Conditions During Daylight Hours**

When driving through a parking garage, tunnel, or heavy overcast weather, the automatic headlight system may sense a low light level and turn on the headlights. This is normal.

If the vehicle is started in a dark garage, the headlights come on immediately. If it is light outside when the vehicle leaves the garage, there is a slight delay before the automatic headlight system switches over the headlights to DRL. During that delay, the instrument cluster may not be as bright as usual. Make sure

#### 134 Lighting

the instrument panel brightness control is in the full bright position. See *Instrument Panel Illumination Control* ⇒ 135.

#### **Location of Light Sensor**

A light sensor on top of the instrument panel measures the outside light level. See *Instrument Panel Overview* ♀ 4.

Do not cover the sensor, otherwise the exterior lights will come on when they are not needed.

#### **Lights On with Wipers**

If the windshield wipers are activated in daylight with the vehicle on and the headlight control set to Auto, the headlights, parking lights, and other exterior lights come on. The transition time for the lights coming on varies based on wiper speed. When the wipers are not operating, these lights turn off.

Set the headlight control to Off or Parking 5005 to disable this feature

## **Hazard Warning Flashers**



: Press this button on the overhead console to make the front and rear turn signal lights flash on and off. This warns others that you are having trouble. Press again to turn the flashers off.

The turn signals do not work while the hazard warning flashers are on.

The hazard warning flashers turn on automatically if the airbags deploy.

### **Turn and Lane-Change Signals**

Raise or lower the turn signal lever until the arrow on the instrument cluster starts to flash in the corresponding direction. See *Instrument Panel Overview* 

4

Changing Lanes: Hold the lever in place until you complete the lane change. Let go of the lever and it returns to its starting position.

If you raise or lower the lever quickly then release it, the turn signal flashes three times — or six times if Tow/Haul mode is active on the Driver Mode Control.

If you change lanes without using the turn signal, the Lane Keep Assist system, if equipped, may respond. See Lane Keep Assist (LKA) ⇔ 253.

Turning Corners: Move the lever all the way up or down so that it stays in place when you let go. When you complete the turn, bringing the steering wheel back to center will automatically turn off the turn signal.

If the steering wheel did not turn far enough, the turn signal will remain flashing until you move the lever back to its starting position.

#### **Turn Signal On Chime**

If the turn signal is left on for more than 1.2 km (0.75 mi), a chime sounds at each flash of the turn signal. The message TURN SIGNAL ON will also appear in the Driver Information Center (DIC). To turn off both the chime and message, move the turn signal lever back to its starting position.

#### **Turn Signal Not Working Normally**

If the indicator arrow flashes rapidly when using the turn signal, an exterior LED may have burned out. See your dealer for service.

If the exterior LED is not burned out, check the fuse. See Instrument Panel Fuse Block (Left)

⇒ 311 Instrument Panel Fuse Block (Right)

⇒ 313.

## **Cornering Lights**

If equipped, cornering lights automatically turn on when all the following conditions occur:

- The low-beam headlights are on.
- You activate the turn signals or turn the steering wheel to turn a corner.

 The vehicle speed is below 40 km/h (25 mph).

## **Exterior Cargo Lights**

The exterior cargo lights provide extra illumination in the cargo area or on the sides of the vehicle.

Become familiar with and follow all state and local laws that apply to cargo light operation.

To turn the exterior cargo lights on or off:

- Stop the vehicle safely, then shift to P (Park) or N (Neutral). See Electric Drive Unit 

  187.
- From the infotainment home screen, select Controls > Lights > Cargo Lights.
- There may be multiple types of cargo lights listed. Touch the box next to the listed area to turn that cargo light on or off.
   Activating the exterior cargo lights may

also activate the lights inside the pickup box, in the tailgate handle, and at the hitch.

# Interior Lighting Instrument Panel Illumination Control



Rotate this thumbwheel to adjust the brightness of all illuminated controls. The thumbwheel is on the instrument panel to the left of the steering wheel.

The brightness can be adjusted only at night or when the headlights or parking lights are on.

#### 136 Lighting

### **Dome Lights**

Dome lights provide overhead interior lighting and lighting in the rear cargo compartment. They may turn on automatically as part of entry lighting and exit lighting.

To turn the dome lights on or off manually, on the infotainment screen, select ♠> > ★.

#### Auto Mode

You can set an option for the dome lights to turn on automatically or to stay off when you open any door.

Select > See More Controls > Lights.

Touch > in the upper corner of the Dome Light menu.

Touch the Auto box to enable or disable this option.

## **Reading Lights**

Reading lights are located on the overhead console and over the rear seats. To turn a reading light on or off, press the light lens.


The reading lights are also used as dome lights, and may come on with entry and exit lighting. See *Dome Lights* ⇔ 136.

#### **Front Reading Lights**



The front reading lights are in the overhead console

#### **Rear Reading Lights**

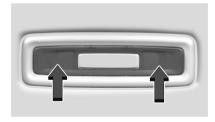

The rear reading lights are above and behind the rear seats.

## Lighting Features Entry Lighting

The entry lighting feature automatically turns on various interior and exterior lights for increased visibility in and around a vehicle.

Interior: The interior lights may turn on when you open any doors or press on the remote key.

For interior lights to turn on, you must enable the Auto option for the dome lights. See *Dome Lights* ⇒ 136.

Exterior: Some exterior lights also turn on when you press on the remote key.

Low-beam headlights will only turn on briefly at night, or in areas with limited lighting.

All interior and exterior lights turn off when you press on the remote key or start the vehicle. The lights eventually turn off automatically if you do not interact with the vehicle

To change this feature, on the infotainment home screen, select Settings > Vehicle > Lighting.

## **Approach Detection**

If equipped, entry lighting activates when the vehicle detects the remote key within approximately 2 m (6 ft).

If you do not use the remote key or keyless access for an extended period while the vehicle is parked, approach detection deactivates. To reactivate approach detection, press any button on the remote key or open and close all doors.

## **Exit Lighting**

Some exterior lights and interior lights turn on when the driver door is opened after the vehicle is turned off.

The exterior and interior lights remain on for a set amount of time, then automatically turn off.

The interior lights turn on when the vehicle is turned off

The exterior lights turn off immediately when the headlight control is set to Off.

This feature can be changed. On the infotainment home screen, select Settings > Vehicle > Lighting.

## **Battery Load Management**

Electric Power Management estimates the battery temperature and state of charge. It then adjusts the voltage for best performance and extended life of the battery.

When the battery state of charge is low, the voltage raises slightly to quickly increase the charge. When the state of charge is high, the voltage lowers slightly to prevent overcharging. As this adjustment occurs, you may see the voltage move up or down on the voltmeter gauge or voltage display, if equipped, on the instrument cluster. This is normal. If a problem occurs, an alert will display. See *Instrument Cluster* ❖ 104.

If the electrical loads are too high, the battery can be discharged when the vehicle is stationary. A high electrical load occurs when several of the following features are on: headlights, high beams, rear window defogger, climate control fan at high speed, heated seats, motor cooling fans, trailer loads, and loads plugged into accessory power outlets.

Electric Power Management prevents excessive discharge of the battery by balancing the electrical system output and the vehicle's

electrical needs. In some cases, it can temporarily reduce the power demands of some accessories.

These actions occur in steps or levels without being noticeable. In rare cases at the highest levels of corrective action, you may notice these actions and a Driver Information Center battery voltage and charging message displays. If so, reduce the electrical loads as much as possible. See *Driver Information Center (DIC)* ⇒ 122.

#### **Battery Power Protection**

This feature helps prevent the battery from being drained if you leave the interior dome lights or reading lights on. These lights automatically turn off 10 minutes after you turn the vehicle off. The lights will not turn back on again until one of the following actions occurs:

- You start the vehicle.
- You close the doors, then re-open them.

## 138 Lighting

## **Exterior Lighting Battery Saver**

If you leave the parking lights or headlights on manually, they turn off about 10 minutes after you turn the vehicle off. This protects against draining the battery.

To restart the 10-minute timer, set the headlight control to ⊖ and then select ≥00≤ or ⋑.

To keep the parking lights or headlights on for more than 10 minutes, start the vehicle.

#### **Infotainment System**

139

## **Infotainment System**

Introduction	
Introduction	139
Overview	140
Steering Wheel Controls	140
Using the System	
Software Updates	
Radio	
AM-FM Radio	143
Digital Audio Broadcast (DAB) Radio	144
Radio Reception	
Multi-Band Antenna	146
Audio Players	
Avoiding Untrusted Media Devices	146
USB Port	
Bluetooth Audio	147
Navigation	
Using the Navigation System	147
Maps	
Navigation Symbols	
Destination	
Global Positioning System (GPS)	
Vehicle Positioning	
Problems with Route Guidance	
Voice Recognition	
Voice Recognition	151

Phone
Bluetooth (Overview)152
Bluetooth (Pairing and Using a Phone) 153
Settings
Settings 157
Teen Driver159
Trademarks and License Agreements
Trademarks and License Agreements 162

#### Introduction

Read the following pages to become familiar with the features.

## **⚠** Warning

Taking your eyes off the road for too long or too often while using any infotainment feature can cause a crash. You or others could be injured or killed. Do not give extended attention to infotainment tasks while driving. Limit your glances at the vehicle displays and focus your attention on driving. Use voice commands whenever possible.

The infotainment system has built-in features intended to help avoid distraction by disabling some features when driving. These features may become disabled when they are unavailable. Many infotainment features are also available through the instrument cluster and steering wheel controls.

#### Before driving:

 Become familiar with the operation, center stack controls, steering wheel controls, and infotainment display.


#### 140 Infotainment System

- Set up the audio by presetting favorite stations, setting the tone, and adjusting the speakers.
- Set up phone numbers in advance so they can be called easily by pressing a single control or by using a single voice command.

#### Overview

#### **Infotainment System**

The infotainment system is controlled by using the infotainment display, controls on the center stack, steering wheel controls, and voice recognition, if available.

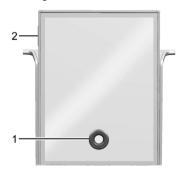

#### 1. Volume

 Turn to decrease or increase the volume.

#### 2. Ů (Power)

- Press to turn the power on.
- Press to mute/unmute the system when on.
- Press and hold to turn the power off.

#### Infotainment Home Screen

The infotainment home screen is where vehicle application icons are accessed. Some applications are disabled when the vehicle is moving.

Swipe left or right across the display to access the pages of icons.

#### **Managing Infotainment Home Screen Icons**

- 1. Touch and hold any of the infotainment home screen icons to enter edit mode.
- 2. Continue holding the icon and drag it to the desired position.
- 3. Release your finger to drop the icon in the desired position.


#### Move an Icon to Another Page

- 1. Drag the icon to the edge of the display toward the desired page.
- 2. Continue dragging and dropping application icons as desired.

#### Move an Icon to the Application Tray

To move an icon to the application tray, drag the icon to the applications tray.

### **Steering Wheel Controls**

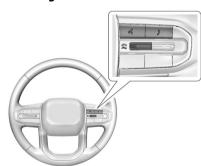

If equipped, some audio controls can be adjusted at the steering wheel.

: Press to open the audio source list.

call. Toggle down to decline an incoming call, end a current call or to mute or unmute the infotainment system when not on a call.



The favorites and volume switches are on the back of the steering wheel.

 Favorite: When on a radio source, press to select the next or previous audio broadcast favorite. When listening to a media device, press to select the next or previous track. 2. Volume: Press to increase or decrease the volume.

## **Using the System**

#### Audio

Touch the Audio icon to display the active audio source page. Examples of available sources may include AM, FM, SiriusXM (if equipped), USB, AUX, and Bluetooth.

#### **Phone**

#### Maps

If equipped, touch the Maps icon to display the navigation map. See *Using the Navigation System* 

→ 147.

#### **Google Assistant**

If equipped, touch the Google Assistant icon to open the Google Assistant app. See *Voice Recognition* ❖ 151.

#### **Google Play**

If equipped, touch to download some of your favorite apps in your vehicle. Downloading apps on Google Play requires you to sign into a Google Account and have internet connectivity in your vehicle. Some third-party apps require a separate account and, in some cases, a paid subscription for in-vehicle access.

#### Settings

Touch the Settings icon to display the Settings menu. See Settings ▷ 157.

#### **Application Tray**

The application tray is on the upper portion of the display and shows four applications by default.

#### **Infotainment Display Features**

Infotainment display features show on the display when available. When a feature is unavailable, it may be disabled. When a feature is touched, it may highlight.

#### **Infotainment Gestures**

Use the following finger gestures to control the infotainment system.


#### 142 Infotainment System

#### Touch/Tap




Touch/tap is used to select an icon or option, activate an application, or change the location inside a map.

#### **Touch and Hold**

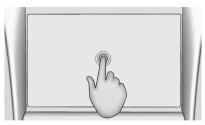

Touch and hold can be used to start another gesture, or to move or delete an application.

#### Drag

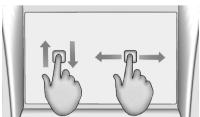 

Drag is used to move applications on the infotainment home screen, or to pan the map. To drag the item, it must be held and moved along the display to the new location. This can be done up, down, right, or left. This feature is only available when vehicle is parked and not in motion.

#### Nudge




Nudge is used to move items a short distance on a list or a map. To nudge, hold and move the selected item up or down to a new location.

#### Fling or Swipe




Fling or swipe is used to scroll through a list, pan the map, or change page views. Do this by placing a finger on the display then moving it rapidly up and down or right and left.

#### Spread

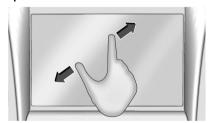

Spread is used to zoom in on a map, certain images, or a web page. Place finger and thumb together on the display, then move them apart.

#### Pinch

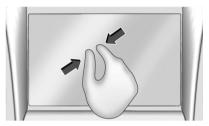

Pinch is used to zoom out on a map, certain images, or a web page. Place finger and thumb apart on the display, then move them together.

## Cleaning High Gloss Surfaces and Radio Displays

For vehicles with high gloss surfaces or vehicle displays, use a microfiber cloth to wipe surfaces. Before wiping the surface with the microfiber cloth, use a soft bristle brush to remove dirt that could scratch the surface. Then use the microfiber cloth by gently rubbing to clean. Never use window cleaners or solvents. Periodically hand wash the microfiber cloth

separately, using mild soap. Do not use bleach or fabric softener. Rinse thoroughly and air dry before next use.

## **Software Updates**

## **Over-the-Air Software Updates**

If equipped, see "Updates" under Settings 

⇒ 157 for details on software updates.

## Radio

#### **AM-FM Radio**

#### **Playing the Radio**

From the infotainment home screen, touch the Audio icon to display the now playing screen for the active audio source. Touch the source button such as FM, AM, or DAB in the left corner to change your source.

### Finding a Station

#### Seeking a Station

From the AM, FM, or DAB screen, touch the back or forward buttons to search for the previous or next strong station.

#### Tune

Touch IIIIII on the infotainment display to enter the Tune screen. Enter a frequency using the keypad.

Touch the to save the station as a favorite.

Entering a valid AM or FM frequency will automatically tune to the new station but not close the Tune screen.

Touch the Go button or frequency in the list to begin playing the station. The tune page will close and return to the now playing screen.

#### **Storing Radio Station Favorites**

Saved favorite stations will show at the bottom of the now playing screen.

AM, FM, and DAB (if applicable) favorites can be stored by pressing and holding a favorite slot.

#### **Audio Settings**

Audio settings vary by region.

From the now playing screen, touch  $\mathcal{G}$  and the following may display.

#### Sound

- Equalizer
- Fade/Balance

#### 144 Infotainment System

Sound Mode (if equipped)

#### **Bose AudioPilot**

If equipped, adjusts the volume based on the noise inside the vehicle and vehicle speed.

#### **Manage Radio Favorites**

Displays a list of audio favorites that can be moved or deleted.

#### Radio Text (RDS)

When on, radio station call letters and messages from radio stations will be shown.

#### Radio Text (RDS) Categories

When on, category information about current radio content will be shown.

#### Traffic Program Alert (TP)

When on and the radio detects a traffic alert, a notification will be shown and an audio message will be heard.

#### Region

When on, radio settings will automatically adjust to your current region.

#### **DAB Announcements**

Allows you to choose which categories you would like to receive DAB Announcements for.

#### **DAB-DAB Linking**

When on and a DAB radio station's signal becomes weak, the radio can tune to the same station on a different DAB ensemble if it's available.

#### **DAB-FM Linking**

When on and a DAB radio station's signal becomes weak, the radio will try tuning to the station's FM variant. If DAB-DAB Linking is available, the radio will try linking to the station on another DAB ensemble first

#### Radio Text - Radio Data Systems (RDS)

RDS relies on receiving specific RDS information from radio stations and only works when the information is available. It is possible that a radio station could broadcast information that causes the radio to work improperly.

In addition, RDS features are region and country of sale specific. This means specific RDS content may not be available in your listening area or in the country you operate the vehicle.

To turn RDS features on or off, see "Audio Settings" previously.

The following core and region specific RDS features may be supported by radio broadcasters in your listening area:

#### Core Radio Text (RDS) Features

- Display radio station call letters
- Display messages from radio stations
- Provide radio station category information (when available)

#### Region Specific Radio Text (RDS) Features

- Support Traffic Program (TP) Alerts
- Support Alternate Frequency (AF) Switching
- Support Region Switching

## Digital Audio Broadcast (DAB) Radio

If equipped, Digital Audio Broadcasting (DAB) Radio is a digital broadcast system that provides CD level audio quality along with supporting radio program station information (e.g., station name, artist, song) on the infotainment display. Unlike AM/FM, the

DAB signal is less likely to be impacted by interference during normal operation. However, the reception quality of DAB can be reduced if the signal is blocked by natural obstacles or buildings. If the DAB signal is unclear, reception is interrupted completely.

# **Playing the Radio**

From the Home screen, touch the Audio icon to display the Now Playing screen for the active audio source. Touch the source button such as DAB, AM, or FM to change the source.

# **Finding a Station**

# **Seeking a Station**

From the DAB screen, touch the back or forward buttons to search for the previous or next strong station.

#### Tune

Touch the tune icon on the infotainment display to enter the Tune screen. Enter a DAB station number using the alpha-numeric keypad (e.g., 5A).

Touch the to save the station as a favorite.

After entering a valid DAB station, the radio will automatically tune to the new station but not close the Tune screen. Alternatively, touch the Go button or a DAB station in the list to begin playing the station. The tune page will close and return to the Now Playing screen.

#### **DAB Now Playing Screen**

While tuned to a DAB station, your display may include relevant information such as station label, text information regarding artist and song, and a station logo. This information is provided by the DAB broadcaster and may not always be available in your listening region.

#### **Storing DAB Radio Station Favorites**

Saved favorite stations will show at the bottom of the Now Playing screen.

DAB favorites can be stored by pressing and holding a favorite slot while listening to that station.

#### DAB Linking

If equipped, your radio may support DAB to DAB Linking and DAB to FM Linking.

DAB to DAB Linking supports the automatic switching of your now playing DAB station to another DAB station with the same content.

This happens if the Now Playing DAB station reception weakens and a DAB station with the same content and better reception can be received.

DAB to FM Linking supports the automatic switching of your now playing DAB station to another station on the FM band with the same content. This happens if the Now Playing DAB station reception weakens and an alternate FM station with the same content and better reception can be received.

DAB linking settings can be turned on or off in the Settings menu.

#### **DAB Announcements**

If equipped, DAB announcements represent a grouping of broadcast announcements defined by category. Examples include news, emergency, weather, sports, finance, etc. Desired announcement types can be selected by the user through the DAB Announcement screen. Emergency announcements are always enabled and cannot be disabled.

Selected announcements will be automatically received by the radio, when available. Your radio will provide a pop-up window to notify

you that a pending announcement will begin playing. You can choose to listen to or dismiss the announcement.

DAB announcement settings can be managed in the Audio Settings menu.

# **Radio Reception**

Unplug any electronic devices from the accessory power outlets if there is static interference.

#### FM

FM signals only reach about 16 to 65 km (10 to 40 mi). Although the radio has a built-in electronic circuit that automatically works to reduce interference, some static can occur, especially around tall buildings or hills, causing the sound to fade in and out.

#### AM

The range for most AM stations is greater than FM, especially at night. The longer range may also cause station frequencies to interfere with each other. Storms and power lines may also interfere with radio reception. Try reducing the treble on the radio if static interference occurs.

# **Digital Audio Broadcasting (DAB)**

If equipped, Digital Audio Broadcasting (DAB) is a universal broadcast system that indicates stations by the radio program name on the infotainment display. The DAB signal produces a constant volume and is not affected by interference from nearby frequencies. The reception quality of DAB improves if the signal is reflected by natural obstacles or buildings. If the DAB signal is unclear, reception is interrupted completely.

# **Mobile Phone Usage**

Making or receiving calls, charging, or just having a mobile device on may cause static interference. Unplug or turn off any mobile devices if this happens.

#### **Multi-Band Antenna**

The multi-band antenna may be used for radio, navigation, and other communication systems, depending on the equipped options. To ensure clear reception, keep the antenna clear of obstructions like snow and ice. An open sunroof or roof-mounted cargo can also affect reception.

# Audio Players Avoiding Untrusted Media Devices

Avoid using untrusted mobile and USB media devices that may negatively affect system operation or performance.

#### **USB Port**

The vehicle may be equipped with multiple USB ports. Music may be played from a connected USB device. Ports may also be used for charging.

#### Caution

To avoid vehicle damage, unplug all accessories and disconnect all accessory cables from the vehicle when not in use. Accessory cables left plugged into the vehicle, unconnected to a device, could be damaged or cause an electrical short if the unconnected end comes in contact with liquids or another power source such as the accessory power outlet.

#### **USB Audio**

To play music via USB:

- 1. On the audio now playing screen, touch source and select USB.
- 2. If there is no device connected, follow the screen prompts to connect the device.
- 3. Supported media content will appear on the display.

#### **Bluetooth Audio**

Music may be played from a connected Bluetooth mobile device.

Volume and song selection may be controlled by using the infotainment controls. If Bluetooth is selected and no volume is present, check the volume setting on the infotainment system or the connected mobile device.

To play music via Bluetooth:

- On the audio now playing screen, select source and select the desired Bluetooth mobile device.
- If there is no mobile device connected, follow the screen prompts to pair the device.

3. Supported media content will appear on the display.

#### **Manage Bluetooth Devices**

Managing Bluetooth devices allows you to add, delete, or select another paired mobile device.

Only one mobile device can be active at a time.

Some mobile devices support sending Bluetooth music information to be displayed on the radio.

# Navigation Using the Navigation System

The Navigation software is provided by Google Maps. The information provided in this section is a general overview and is subject to change. For the latest functional information, see q.co/mapsincar.

Accept the Terms and Conditions to use.

#### Internet Connectivity

Google Maps relies on a subscription data plan for full functionality, including availability of offline maps. With an applicable connected services plan, Google Maps can be used offline when driving through connectivity dead zones by auto-downloading offline maps prior to going offline.

#### **Profiles**

Sign in to a Google Account for personalized service. Information available in the Google Account will be shown.

To log into a profile, see Accounts under *Settings* ❖ 157.

#### Voice Assistant

If equipped, Google Maps can be controlled by voice commands. See Google Assistant under *Voice Recognition* ♀ 151.

#### Language

To change the language, see Settings \$\simp\$ 157.

#### **Mute Settings**

During active route guidance, Google Maps can give audible voice directions, traffic alerts, or can be muted. In the Google Maps app, touch Settings, then Mute settings to access the options. Alternatively, audible voice directions and traffic alerts can be muted by touching the sound icon on the navigation map screen during active navigation.

#### Compass

The Google Maps orientation can be changed between the direction currently traveling, pointing north, and route overview. Touch the compass to switch between these options.

To recenter the map to the current location, touch the location icon.

#### **Super Cruise**

If equipped, Super Cruise highlights routes in a specific outline. See *Super Cruise* ⇔ 214.

# Electric Vehicle (EV) Features with Google Maps

When vehicle data is shared with Google, some of the Maps features for EVs are as follows:

- Estimated battery charge level at arrival
- Estimated minimum charging time in order to reach destination

If the vehicle needs to be charged to reach a destination, charging stations may automatically be added to a route.

# Maps

#### **Auto-Downloaded Maps**

Google Maps downloads maps automatically for use when not connected to the Internet. Offline maps make map data available to vehicle features regardless of connectivity.

To turn on auto-download:

- Open Google Maps.
- 2. Touch the Settings icon.
- 3. Touch Privacy center, then select Offline maps.
- 4. Select Auto-download offline maps.
- Check the Internet connection and wait for the download to finish.

#### **Downloading Offline Maps**

- I. Open Google Maps.
- 2. Touch Settings, then Offline maps.
- 3. Touch the Select your own map square icon.
- 4. Adjust the map to cover the desired area to download.
- 5. Touch Download.

# **Navigation Symbols**

The following are the most common symbols that may appear in Google Maps.



This indicates the vehicle's current location and direction on the map.



The destination pin marks the location of the final destination. Touch the pin to view the destination address or to add it or remove it from the Favorites list. Hide the information by touching the pin one more time. It will automatically time out if no action is taken.

A second pin in the menu is the route overview. Touch this pin to show more details of the destination or to remove the destination.

#### 149

# **Destination**

#### Searching for a Destination

A destination can be searched using Google Assistant.

To search for a destination without Google Assistant:

- 1. Open Google Maps.
- 2. Touch the Search field.
- 3. Enter the destination.
- 4. Touch the Navigation icon.

#### **Alternate Routes**

Alternate routes are displayed as separate lines. While in either Turn-by-Turn navigation or on the route overview, touch the suggested alternate route.

# Adding a Stop on Route by Voice

- 1. While in Turn-by-Turn navigation, touch the Search icon at the bottom.
- 2. Touch the Google Assistant micicon and say the destination to search by voice.
- $3. \ \ Select the desired search result from the list.$
- 4. Touch the Add stop icon.

# Adding a Stop on Route by Category

- While in Turn-by-Turn navigation, touch the Search icon at the bottom.
- 2. Select a category.
- $3. \ \ Select the desired search result from the list.$
- 4. Touch the Add stop icon.

#### Adding a Home or Work Address

- 1. Open Google Maps.
- 2. Touch Settings, then touch Edit home or work.
- 3. Enter the address.

# Search by Category

Destinations can be searched by category, such as restaurant or grocery store.

- Open Google Maps.
- 2. Touch the search bar.
- 3. Touch Categories, then select a category.
- 4. Touch the desired location, then touch the Navigation icon.

# Avoid Tolls, Highways, or Ferries

- . Open Google Maps.
- 2. Touch the Settings icon.
- 3. Select Route options.
- 4. Select the desired options and then touch X to close.

#### An Alternative Way for General Route Options

- 1. During active route guidance, touch Route Overview.
- 2. Select Route options.
- Select the desired option and then touch X to close.

#### **Traffic Layers**

- 1. Open Google Maps.
- 2. Touch the Settings icon.
- 3. Touch Traffic to turn on or off.

# **Global Positioning System (GPS)**

The current position of the vehicle is determined by using satellite signals and various vehicle signals.

Attimes, other interference such as the satellite condition, road configuration, condition of the vehicle, and/or other circumstances can affect the navigation system's ability to determine the accurate position of the vehicle.

This system might not be available or interference can occur if any of the following are true:

- Signals are obstructed by tall buildings, trees, large trucks, or a tunnel.
- Satellites are being repaired or improved.

# **Vehicle Positioning**

At times, the position of the vehicle on the map could be inaccurate due to one or more of the following reasons:

- The road system has changed.
- The vehicle is driving on slippery road surfaces such as sand, gravel, or snow.
- The vehicle is traveling on winding roads or long, straight roads.

- The vehicle is approaching a tall building or a large vehicle.
- The surface streets run parallel to a freeway.
- The vehicle has been transferred by a vehicle carrier or a ferry.
- The current position calibration is set incorrectly.
- The vehicle is traveling at high speed.
- The vehicle changes directions more than once, or the vehicle is turning on a turn table in a parking lot.
- The vehicle is entering and/or exiting a parking lot, garage, or a lot with a roof.
- The GPS signal is not received.
- A roof carrier is installed on the vehicle.
- Tire traction devices are installed on the vehicle.
- The tires are replaced or worn.
- The tire pressure for the tires is incorrect.
- This is the first navigation use after the map data is updated.
- The 12-volt battery has been disconnected for several days.

 The vehicle is driving in heavy traffic where driving is at low speeds, and the vehicle is stopped and started repeatedly.

# **Problems with Route Guidance**

Incorrect route guidance can occur under one or more of the following conditions:

- The turn was not made on the road indicated.
- Route guidance might not be available when using automatic rerouting for the next right or left turn.
- The route might not be changed when using automatic rerouting.
- There is no route guidance when turning at an intersection.
- Automatic rerouting might display a route returning to the set waypoint if heading for a destination without passing through a set waypoint.
- The route prohibits the entry of a vehicle due to a regulation by time or season or any other regulation which may be given.
- Some routes might not be searched.

 The route to the destination might not be shown if there are new roads, if roads have recently changed, or if certain roads are not listed in Maps.

To recalibrate the vehicle's position on the map, drive to a safe location with a clear view of the sky and free from large obstructions. Place the vehicle in (P) Park with the ignition on for two to five minutes until the vehicle position updates.

# **Voice Recognition**

If equipped, the vehicle's built in Google Assistant allows for hands-free use of media and messaging, nagivation and climate control functionality in the vehicle. To activate, quickly press and release (symbol) on the steering wheel, touch Google Assistant on the infotainment home screen, or use the wake up words "Hey Google" or "OK Google." Google Assistant must be set as the default assistant for steering wheel and wake word activation to work.

However, not all features within these areas are supported by voice commands and requires the user to have a valid data subscription plan or be able to connect to an external WiFi in order to use the Google Assistant features.

# **Using Voice Recognition**

Voice recognition becomes available once the system is initialized. This begins when the vehicle is turned on. Initialization may take a few moments.

- Press <sup>™</sup>∑ on the steering wheel controls, touch Google Assistant on the Home screen, or use the wake up words "Hey Google" or "OK Google" to activate voice recognition. Google Assistant must be set as the Default Assistant for the <sup>™</sup>∑ and the wake word options to work.
- 2. Clearly speak one of the commands described later in this section.

# **Canceling Google Assistant**

 Press on the steering wheel controls to cancel the Google Assistant request.

# **Helpful Hints for Speaking Commands**

Voice recognition identifies commands that are naturally stated in sentence form, or direct commands that state the application and the task.

For best results:

 Speak the command naturally, not too fast, not too slow.  Use direct commands without a lot of extra words. For example, "Call <name> at work," "Play" followed by the artist or song name, or "Play" followed by the radio station number

Direct commands are more clearly understood by the system. An example of a direct command is "Call <number>."

If a cell phone number was saved with a name and a place, the direct command should include both. For example "Call <name> at work."

#### Voice Recognition for the Radio

When voice is started, the voice recognition commands for AM, FM, and media apps (if supported) are available.

"Play <AM frequency> AM": Tune to the radio station frequency identified in the command (like "nine fifty").

"Play <FM frequency> FM": Tune to the radio station frequency identified in the command (like "one oh one point one").

"Play <Media> on <Audio Source>": Play media like a song or channel using a specified audio source such as Pandora or Spotify. This command may require an online connection.

#### Voice Recognition for the Phone

Make sure the phone is paired using Bluetooth to use the phone related voice commands.

"Call < contact name>": Initiate a call to a stored contact. The command may include location if the contact has location numbers stored. You must accept Personal Results permission during set up for access to the contacts.

"Call < phone number>": Initiate a call to a phone number of seven digits or 10 digits.

"Send a message to <contact name>": Send a message to a stored contact.

#### **Voice Recognition for Navigation**

Navigation commands can be used to start, cancel route, or add way points/POI.

"Navigate to <destination address>": Initiate navigation to the address in the command.

"Find a <Place of Interest>": Find and initiate navigation to a POI in the command.

"Add <destination> on my way": Adds a waypoint to the current route.

"Take me home": Starts navigation to Home location set in Google maps.

#### **Onboard Vehicle Commands**

These commands can be used to adjust vehicle temperature, control window defrosters, etc.

"Turn on the A/C": Turns on the air conditioning.

"Set temperature to <desired number> degrees": Set to a specific temperature inside your vehicle.

#### **Phone Assistant Voice Recognition**

While a mobile phone is connected via Bluetooth, press and hold w on the steering wheel controls until you hear the phone's Voice Assistant tone, which will launch the Voice Assistant on the connected mobile phone (e.g, Google Assistant, Siri, etc.).

# **Phone**

# **Bluetooth (Overview)**

The vehicle's Bluetooth system can interact with a mobile device to:

- Place and receive calls in a hands-free mode.
- Share the device's address book or contact list with the vehicle.
- Stream audio (music, podcasts).

Notify receipt of text messages.

To minimize driver distraction, before driving, and with the vehicle parked:

- Become familiar with the features of the mobile device. Organize the phone book and contact lists clearly and delete duplicate or unused entries.
- Review the controls and operation of the infotainment system.
- Pair mobile device(s) to the vehicle. The system may not work with all mobile devices. See "Pairing" later in this section.

Vehicles with a Bluetooth system can use a Bluetooth-capable mobile device with a Hands-Free Profile to make and receive phone calls. The infotainment system and voice recognition feature are used to control the system. The system can be used while the vehicle is on or in accessory mode. The range of the Bluetooth system can be up to 9.1 m (30 ft). Not all mobile devices support all functions and not all mobile devices work with the Bluetooth system. See your dealer for more information about compatible mobile devices.

#### **Controls**

Use the controls on the infotainment display and the steering wheel to operate the Bluetooth system.

#### **Steering Wheel Controls**

ાર્ક : Press and release to answer incoming calls on your connected Bluetooth mobile device. Press and hold for mobile device assistant.

Press to end a call, decline a call, or cancel an operation. Press to mute or unmute the infotainment system when not on a call.

#### **Infotainment System Controls**

For information about how to navigate the menu system using the infotainment controls, see *Using the System* ⇔ 141.

#### **Audio System**

When using the Bluetooth mobile device system, sound comes through the vehicle's front audio system speakers and overrides the audio system. The volume level while on a mobile device call can be adjusted by pressing the steering wheel controls or the volume controls for the infotainment system.

The adjusted volume level remains in memory for later calls. The volume cannot be lowered beyond a certain level.

# Bluetooth (Pairing and Using a Phone)

#### **Pairing**

A Bluetooth-enabled mobile device must be paired to the Bluetooth system and then connected to the vehicle before it can be used. See the mobile device manufacturer's user guide for Bluetooth functions before pairing the device.

#### **Pairing Information**

- Select the phone icon on the infotainment home screen.
- If no mobile device has been paired, a message on the infotainment display will show the Manage Phones option. Select this option and the Phones screen will display. See "Pairing a Phone" later in this section.
- A Bluetooth mobile device with music capability can be paired to the vehicle as a phone and a music player at the same time.

- Up to 10 devices can be paired to the Bluetooth system.
- The pairing process is disabled when the vehicle is moving.
- Pairing only needs to be completed once, unless the pairing information on the mobile device changes or the phone is deleted from the system.
- If a previously paired mobile device is not connecting to the Bluetooth system, try forgetting the mobile device on the vehicle's infotainment system and also forgetting the vehicle in the Bluetooth settings of the mobile device. Then repeat the pairing process.
- If multiple paired mobile devices are within range of the system, the system connects to the paired mobile device that is set to First to Connect. If there is no mobile device set to First to Connect, it will connect to the mobile device which was used last. To connect to a different paired mobile device, see "Connecting to a Different Phone" later in this section.

#### Pairing a Phone

- Make sure Bluetooth has been enabled on the phone before starting the pairing process.
- 2. Select the phone icon on the infotainment home screen.
- If a phone has been previously added, select Settings > Connections > Phones to reach the device manager. From the device manager, select "Add Phone." If a phone has been previously added, the "Add Phone" card will just be a "+" button.
- 4. Select Manage Phones to display the Phones screen.
- Select Add Phone.
   If a phone has been previously added or disconnected, the "Add Phone" card will just be a "+" card.
- The code on both the phone and infotainment display need to be acknowledged for pairing to be successful.
- Follow the instructions on the phone to confirm the six-digit code showing on the infotainment display and select Pair.

- The code on the phone and infotainment display need to be acknowledged for pairing to be successful.
- If a previously paired mobile device is not connecting to the Bluetooth system, try forgetting the mobile device on the vehicle's infotainment system and also forgetting the vehicle in the Bluetooth settings of the mobile device.
- If the vehicle name does not appear on your phone under the "other devices" or "available devices" menu, there are a few ways to start the pairing process over:
  - Turn Bluetooth off then back on, on your phone.
  - Go back to the beginning of the Phone menus on the infotainment display and restart the pairing process.
  - Turn the phone off and then back on.
  - Reset the phone, but this step should be done as a last effort.
- 10. If the phone prompts to accept connection or allow phone book download, select Always Accept and Allow. The phone book may not be available if not accepted.

11. To pair additional phones, select Settings > Connections > Phones.

#### First to Connect Paired Phones

If multiple paired phones are within range of the system, the system connects to the paired phone that is set as First to Connect. To enable a paired phone as the First to Connect phone:

- 1. Make sure the phone is turned on.
- 2. Select the Settings icon on the infotainment home screen.
- 3. Select Connections.
- 4. Select Phone.
- 5. Select Options under the connected phone.
- Select First to Connect from the phone's settings menu and set First to Connect to On.

Phones and mobile devices can be added, removed, connected, and disconnected. A submenu will display whenever a request is made to add or manage phones and mobile devices.

#### **Accessing the Device List Screen**

There are two ways to access the device list screen:

#### 155

# Using the Settings Icon

- Select the Settings icon on the infotainment home screen or the Settings icon on the application tray near the left of the display.
- 2. Select Connections.
- 3. Select Phones.

#### Using the Phone Icon

- Select the Phone icon on the infotainment home screen or the Phone icon on the application tray near the left of the display.
- 2. Select on the Phones screen.
- 3. Select Connected Phone.

#### Disconnecting a Connected Phone

To disconnect a phone:

- Open the Device List Screen. See "Accessing the Device List Screen" previously in this section.
- 2. Select Option on the phone card to show the phone's or mobile device's settings.
- 3. Select Disconnect.

#### **Deleting a Paired Phone**

To delete a paired phone:

- Open the Device List Screen. See "Accessing the Device List Screen" previously in this section.
- 2. Select Option on the phone card to show the phone's or mobile device's settings.
- 3. Select Forget Phone.

#### **Connecting to a Different Phone**

To connect to a different phone, the new phone must be in the vehicle and paired to the Bluetooth system.

To connect to a different phone:

- Open the Device List Screen. See "Accessing the Device List Screen" previously in this section.
- Select the new phone you want to connect to from the list of available phones. See "First to Connect Paired Phones" previously in this section.

# Switching to Handset or Hands-Free Mode

To switch between handset or handsfree mode:

 While the active call is hands-free, select the Audio Output option, then select Phone to switch to the handset mode. The mute icon will not be available or functional while Handset mode is active.

 While the active call is on the handset, select the Audio Output option, then select Car Speakers to switch to the handsfree mode

# **Making a Call Using Contacts**

Calls can be made through the Bluetooth system using personal phone contact information for all phones that support the Phone Book feature. Become familiar with the phone settings and operation and that the phone is set to allow the sharing of contacts over Bluetooth with the vehicle. Verify the phone supports this feature and that the phone is set to allow the sharing of contacts over Bluetooth with the vehicle.

The Contacts menu accesses the phone book stored in the phone.

To make a call using the Contacts menu:

- Select the Phone icon on the infotainment home screen or on the application tray near the left of the display.
- 2. Select Contacts.
- 3. There are two methods to search for contacts:

- Search bar Select the search icon on the top right of the Phones window and type the name or number of the contact on the keyboard.
   Search results will be displayed corresponding to the user input.
   Select the name to call.
- Scroll Select the list and scroll, or use the scrollbar on the left side of the Phones window. Select the name to call.

# Making a Call Using the Recents Menu

The Recents menu accesses the recents call list from your phone.

To make a call using the Recents menu:

- Select the Phone icon on the infotainment home screen or on the application tray near the left of the display.
- 2. Select Recents.
- 3. Select the name or number to call.

# Making a Call Using the Keypad

To make a call by dialing the numbers:

- Select the Phone icon on the infotainment home screen or on the application tray near the left of the display.
- 2. Select Keypad and enter a phone number.
- 3. Select the phone icon on the infotainment display to start dialing the number.

# **Searching Contacts Using the Keypad**

To search for contacts using the keypad:

- Select the Phone icon on the infotainment home screen.
- Select Keypad and enter partial phone numbers or contact names using the digits on the keypad to search.
  - Results appear on the right side of the display. Select one to place a call.

# **Accepting or Declining a Call**

When an incoming call is received, the infotainment system mutes and a ring tone is heard in the vehicle.

# **Accepting a Call**

There are two ways to accept a call:

- Press on the steering wheel controls.
- Select Answer on the infotainment display.

#### **Declining a Call**

There are two ways to decline a call:

- Press on the steering wheel controls.
- Select Decline on the infotainment display.

#### **Call Waiting**

Call waiting must be supported on the Bluetooth phone and enabled by the wireless service carrier to work.

#### **Accepting a Call**

Press of to answer, then select Switch on the infotainment display.

#### **Declining a Call**

Press to decline, then select Decline on the infotainment display.

# Switching Between Calls (Call Waiting Calls Only)

To switch between calls, select Phone on the infotainment home screen to display Call View. While in Call View, select the call information of the call on hold to change calls.

# **Ending a Call**

- Press on the steering wheel controls.
- Select son the infotainment display, next to a call, to end only that call.

# **Dual Tone Multi-Frequency (DTMF) Tones**

The in-vehicle Bluetooth system can send numbers during a call. This is used when calling a menu-driven phone system. Use the Keypad to enter the number.

# **Settings**

To access the Settings menus:

- 1. Touch Settings on the infotainment home screen.
- 2. Touch the desired feature setting.
- 3. Touch the options on the infotainment display to change a setting.
- 4. Touch ≤ to go back.

The Settings menu may contain the following:

#### **Connections**

The menu may contain the following:

#### **Phones**

Allows connecting to a different cell phone or mobile device source, disconnecting a cell phone or media device, or deleting a cell phone or media device.

#### Wi-Fi Networks

Shows connected and available Wi-Finetworks.

#### Wi-Fi Hotspot

Allows adjustment of different Wi-Fi features.

#### **Vehicle-to-Phone Sharing**

Allows GM apps to use vehicle data on the listed phones shown.

#### **Trusted Device**

Allows for setting a phone as your trusted device to establish a secure communication channel between your phone and vehicle that enables convenient features like instant profile unlocking and account sign in. When nearby, your trusted device is recognized automatically via a unique Bluetooth connection.

#### Vehicle

The menu may contain the following:

#### **Teen Driver**

See Teen Driver \$\sime\$ 159.

#### Rear Seat Reminder

Allows for a chime and a message when the rear door has been opened before or during operation of the vehicle.

#### **Buckle to Drive**

This feature can prevent shifting out of Park when the driver's, and if applicable the front passenger's, seat belt is not buckled. See *Buckle To Drive* ⇔ 46.

#### **Climate and Air Quality**

Allows adjustment of different climate settings.

#### Collision/Detection Systems

Allows adjustment of different driver assistance system settings.

#### **Comfort and Convenience**

Allows adjustment of different comfort and convenience settings.

# Lighting

Allows adjustment of different lighting settings.

#### **Power Door Locks**

Allows adjustment of different door lock settings.

#### Remote Lock, Unlock, and Start

Allows adjustment of different remote lock settings.

# **Ride Height**

Allows adjustment of different ride height settings.

# **Power Assist Steps**

Allows adjustment of different running board settings.

# **Seating Position**

Allows adjustment of different seating position settings.

# Suspension

Allows adjustment of different suspension settings.

#### Trailering

Allows adjustment of different trailering settings.

# **Apps and Notifications**

Shows a list of installed apps and the permissions used.

#### Date/Time

Allows setting of the clock.

# Display

Allows adjustment of the infotainment display.

#### Sounds

Allows adjustment of the infotainment system sounds.

#### **Profiles and Accounts**

Allows the modification of the infotainment system's profiles and provides access to the accounts assigned to the currently active profile.

# Privacy

The menu may contain the following:

#### Location

Touch to view the Location screen.

# **App Permissions**

Touch to view the Permission manager screen.

#### **GM Privacy Statement**

Touch to view the GM Privacy Statement screen.

#### Google legal

Touch to view the Google legal screen.

# Accessibility

This menu shows the accessibility information on the infotainment system.

#### Storage

This menu shows the storage info on the infotainment system.

#### Securitu

This menu allows adjustment of the infotainment security settings.

# System

The menu may contain the following:

#### Language

This will set the display language used on the infotainment display.

#### **Keyboard and Speech**

Touch to change keyboard and speech settings.

#### **Quick Startup**

This allows your infotainment system to quickly resume its last session.

While the vehicle is in park, press and hold the mute/end call button on the steering wheel for 15 seconds to reboot the infotainment system.

#### Units

Touch to change units settings.

# **Reset Options**

Touch to change reset settings.

#### About

Touch to view the infotainment system software information.

# **Legal Information**

Touch to view legal and license information.

# **Updates**

This menu allows adjustment of the vehicle update settings.

#### Google

This menu allows adjustment of the Google settings.

#### Teen Driver

If equipped, this allows multiple keys to be registered for beginner drivers to encourage safe driving habits. When the vehicle is started with a Teen Driver key, it will automatically activate certain safety systems, allow setting of some features, and limit the use of others. The Report Card will record vehicle data about driving behavior that can be viewed later. When the vehicle is started with a Teen Driver key, the Driver Information Center (DIC) displays a message that Teen Driver is active.

#### To access:

 From the infotainment home screen, select Settings > Vehicle > Teen Driver.  Create a Personal Identification Number (PIN) by choosing a four-digit PIN. Re-enter the PIN to confirm. To change the PIN, touch Change PIN.

#### The PIN is required to:

- Set up/Add or remove keys.
- Change Teen Driver settings.
- Change or clear the Teen Driver PIN.
- Access or delete Report Card data.

# Set up/Add keys to activate Teen Driver and assign restrictions to the key:

Any vehicle key can be registered, up to a maximum of eight keys. Label the Teen Driver key to tell it apart from the other keys.

#### For a pushbutton start system:

- 1. Start the vehicle.
- 2. The vehicle must be in P (Park).
- From the Settings menu, touch Vehicle and then Teen Driver.
- 4. Enter the PIN.
- Place the remote key you wish to register in the transmitter pocket. The key does not need to be the one that started the vehicle.

- From the Teen Driver menu, touch Setup Keys or Add/Remove Teen Driver Keys.
  - If the remote key has not previously been registered, the option to add the key displays. Touch Add and a confirmation message displays. Teen Driver restrictions will be applied whenever this remote key is used to operate the vehicle.
  - If the remote key has already been registered, the option to remove the key displays. If Remove is touched, the remote key is no longer registered. A confirmation message displays, and Teen Driver restrictions will not be applied if this remote key is used to operate the vehicle.

In vehicles with a pushbutton start system, if a Teen Driver and a non-Teen Driver key are both present at start up, the vehicle will recognize the non-Teen Driver key to start the vehicle. The Teen Driver settings will not be active.

# **Manage Settings or Teen Driver Settings**

Depending on the options of your vehicle, the following menu items may be displayed:

Buckle to Drive: When turned ON, Buckle to Drive prevents the driver from shifting out of P (Park) for a period of time after the brake pedal is pressed if the driver, or on some vehicles the detected passenger, has not buckled their seat belt. On some vehicles, Buckle to Drive is always ON when Teen Driver is active and is not configurable.

Audio Volume Limit: Allows a maximum audio volume to be set. Turn the audio volume limit on or off. Use the arrows to choose the maximum allowable level for the audio volume. On some infotainment systems, touch Set Audio Volume Limit to choose the maximum allowable audio volume level.

**Set Audio Volume Limit :** Use the arrows to choose the maximum allowable level for the audio volume.

Teen Driver Speed Limiter: Limits the maximum speed of the vehicle. When the speed limiter is turned on and the vehicle is started with a Teen Driver key, the DIC displays a message that the top speed is limited.

On certain vehicles, when the Speed Limiter is turned ON, the vehicle's maximum acceleration will be limited. The DIC will display a message that the acceleration is limited.

Teen Driver Speed Warning: Displays a warning in the DIC when exceeding a selectable speed. Turn the speed warning on or off and choose the desired speed warning level. The speed warning does not limit the speed of the vehicle. On some infotainment systems, touch Set Teen Driver Speed Warning to set the warning speed.

**Set Teen Driver Speed Warning:** Choose the desired speed warning level. The speed warning does not limit the speed of the vehicle.

#### When Teen Driver is Active:

- If equipped, the radio will mute when the driver seat belt, and in some vehicles the front passenger seat belt, is not buckled. The audio from any device paired to the vehicle will also be muted.
- An object placed on the front passenger seat, such as a briefcase, handbag, grocery bag, laptop, or other electronic device, could cause the passenger sensing system to falsely sense an unbuckled front passenger and mute the radio. If this happens, remove the object from the seat.
- Some safety systems, such as Automatic Emergency Braking, if equipped, cannot be turned off.

- The gap setting for Adaptive Cruise Control and alert timing for Forward Collision Alert, if equipped, cannot be changed.
- When trying to change a safety feature that is not configurable in Teen Driver, the feature may be grayed out or removed from the infotainment menu, or the DIC will display a message indicating that Teen Driver is active and the action is not available.
- Super Cruise, if equipped, is not available.
- Do not tow a trailer if equipped with Automatic Emergency Braking.
- Daytime Running Lights or headlights are always on when the vehicle is shifted out of P (Park). Even if the headlight control is set to Off or 5005, the Automatic Headlight System is engaged and ensures that either the Daytime Running Lights or headlights come on based on outside light level.

#### Report Card

The vehicle owner must secure the driver's consent to record certain vehicle data when the vehicle is driven with a registered Teen Driver

key. There is one Report Card per vehicle. Data is only recorded when a registered Teen Driver key is used to operate the vehicle.

The Report Card data is collected from the time Teen Driver is activated or the last time the Report Card was reset. The following items may be recorded:

- Distance Driven the total distance driven.
- Maximum Speed the maximum vehicle speed detected.
- Overspeed Warnings the number of times the speed warning setting was exceeded.
- Wide Open Throttle the number of times the accelerator pedal was pressed nearly all the way down.
- Forward Collision Alerts (if equipped) the number of times the driver was notified when approaching a vehicle ahead too quickly and at potential risk for a crash.
- Forward Automatic Braking, also called Automatic Emergency Braking (if equipped) – the number of times the vehicle detected that a forward collision was imminent and applied the brakes.

- Reverse Automatic Braking (if equipped) the number of times the vehicle detected that a rearward collision was imminent and applied the brakes.
- Traction Control the number of times the Traction Control System activated to reduce wheel spin or loss of traction.
- Stability Control the number of events which required the use of electronic stability control.
- Antilock Braking System Active The number of Antilock Brake System activations.
- Tailgating Alerts (if equipped) the number of times the driver was alerted for following a vehicle ahead too closelu.

#### **Report Card Data**

Cumulative Data is saved for all trips until the Report Card is reset or until the maximum count is exceeded. If the maximum count is exceeded for a Report Card line item, that item will no longer be updated in the Report Card until it is reset. Each item will report a maximum of 1,000 counts. The distance driven will report a maximum of 64,374 km (40,000 mi).

To delete Report Card data, do one of the following:

- From the Report Card display, touch Reset.
- Touch Clear PIN and All Teen Driver Keys from the Teen Driver menu. This will also unregister any Teen Driver keys and delete the PIN.

#### Forgotten PIN

See your dealer to reset the PIN.

# Trademarks and License Agreements



"Made for iPhone," means that an electronic accessory has been designed to connect specifically to iPhone, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note

that the use of this accessory with iPhone may affect wireless performance. iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.



TouchSense Technology and TouchSense System 1000 Series Licensed from Immersion Corporation. TouchSense System 1000 is protected under one or more of the U.S. Patents at the following address www.immersion.com/patent-marking.html and other patents pending.

#### Bluetooth

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by General Motors is under license. Other trademarks and trade names are those of their respective owners.

#### Java

Java is a registered trademark of Oracle and/or its affiliates.

#### MPEG4-AVC (H.264)

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTPS://WWW.MPEGLA.COM.

#### VC-1

THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE

IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTPS://WWW.MPEGLA.COM.

#### MPEG4-Visual

USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE BY A CONSUMER ENGAGING IN PERSONAL AND NON-COMMERCIAL ACTIVITIES.

#### MP3

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

#### WMV/WMA

This product includes technology owned by Microsoft Corporation and under a license from Microsoft Licensing, GP. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft Corporation and/or Microsoft Licensing, GP as applicable.

# **Climate Controls**

Climate	Control	Systems

Dual Automatic Climate Control System .. 164

#### **Air Vents**

Air Vents ......166


#### Maintenance

Passenger Compartment Air Filter ......167
Service ......168

# **Climate Control Systems**

# **Dual Automatic Climate Control System**

The internal temperature of the vehicle can be controlled from the available options on the front console:

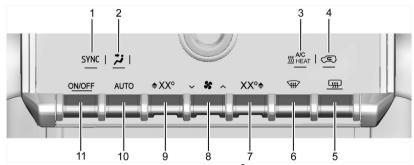

- 1. SYNC (Synchronized Temperature)
- 2. Air Delivery Mode Controls
- 3. 💯 A/C (Air Conditioning)/HEAT
- 5. Rear Window Defogger/Heated Outside Mirrors
- 6. Sty MAX Defrost
- 7. Passenger Temperature Controls

- 8. Fan Control
- 9. Driver Temperature Controls
- 10. AUTO (Automatic Operation)
- 11. ON/OFF

#### **Automatic Operation**

The system automatically controls the fan speed, air delivery, air conditioning, and recirculation to heat or cool the vehicle to the desired temperature.

When AUTO is selected, all four functions operate automatically. Each function can also be manually set. Functions not manually set are automatically controlled, even if the AUTO indicator is not highlighted. When enabled, the climate controls remain in AUTO mode through power cycles.

For automatic operation:

- 1. Press AUTO.
- Set the temperature. Allow the system time to stabilize. Adjust the temperature as desired.

To improve efficiency and to cool the vehicle faster, recirculation may be automatically selected in warm weather.

#### **Manual Operation**

\$\ :\ Press up or down to increase or decrease fan speed. When OFF is selected, a small amount of air may still come out of the outlets. If any buttons are pressed, the climate control system will turn on and operate at the current setting.

Touch AUTO to return to automatic operation.

**Driver and Passenger Temperature Control:** The temperature can be adjusted separately for the driver and passenger.

**SYNC:** Touch to link the passenger temperature setting to the driver setting.

Air Delivery Mode Control: Touch to change the direction of the airflow. Any combination of , , , or , can be selected.

Changing the mode cancels the automatic operation and the system goes into manual mode. Touch AUTO to return to automatic operation.

: Air is directed to the windshield, outboard A/C outlets, and side window outlets.

**:** Air is directed to the A/C outlets.

••• : Air is directed to the floor outlets, with some air directed to the windshield, outboard A/C outlets, and side window outlets.

: Air is directed to the windshield and the fan runs at a higher speed if not already above a medium fan speed. This mode overrides the previous mode selected and clears fog or frost from the windshield quickly. When the control is pressed again, the system returns to the previous mode setting and fan speed.

For best results, clear any snow or ice from the windshield before defrosting.

: Touch to turn on recirculation. An indicator light comes on. Air is recirculated to quickly cool the interior of the vehicle. It can also be used to help reduce outside air and odors that enter the vehicle.

Avoid using recirculation for long periods of time in cold or damp conditions. Using recirculation in cold or damp conditions can result in window fogging.

A/C: Press to turn the air conditioning on or off. An indicator light comes on to show that the air conditioning is enabled. If the fan is turned off, the air conditioner will not run.

# **Rear Window Defogger**

#### Caution

Using a razor blade or sharp object to clear the inside rear window can damage the rear window defogger. Repairs would

(Continued)

# **Caution (Continued)**

not be covered by the vehicle warranty. Do not clear the inside rear window with sharp objects.

If equipped, press to turn the rear window defogger on or off. An indicator light on the button comes on to show that the rear window defogger is on.

The rear window defogger only works when the vehicle is on. The defogger turns off if the vehicle is turned off.

If the vehicle is equipped with heated outside mirrors, they turn on when the rear window defogger button is on and help to clear fog or frost from the surface of the mirror. See *Heated Mirrors* ♀ 30.

If the vehicle is equipped with heated wiper parking, the feature will turn on when the rear window defogger button is on and help to clear frost from the wipers. See Windshield Wiper/Washer ▷ 96.

Remote Start Climate Control Operation: If equipped with remote start, the climate control system may run when the vehicle is started remotely. If equipped with heated or ventilated

seats or a heated steering wheel, these features may come on during a remote start. See Remote Start \$\Displays 12\$, Heated and Ventilated Front Seats \$\Displays 41\$, and Heated Steering Wheel \$\Displays 95\$.

#### Sensors



The solar sensor, on top of the instrument panel near the windshield, monitors the solar heat.

The climate control system uses the sensor information to adjust the temperature, fan speed, recirculation, and air delivery mode for best comfort.

Do not cover the sensor; otherwise the automatic climate control system may not work properly.

#### **Afterblow Feature**

If equipped, under certain conditions, the fan may stay on or may turn on and off several times after you turn off and lock the vehicle. This is normal.

#### FCO Climate

If equipped and enabled, ECO Climate may reduce airflow to unoccupied seats for energy efficiency. To turn ECO Climate off or on, select Settings > Vehicle > Climate and Air Quality > ECO Climate

# **Air Vents**

Use the sliding knobs on the center and side air vents to change the direction of the airflow.

Air vents blow warm air on the side windows in cold weather. If Floor, Defog, or Defrost modes are selected, a small amount of air will come from the vents closest to the window.

To close the front A/C vents, move the sliding knobs horizontally away from you.

To close the rear A/C vents, move the sliding knobs to the full inboard position.

#### 167

#### **Operation Tips**

- Clear away any ice, snow, or leaves from air inlets at the base of the windshield that could block airflow.
- Clear any snow off the hood to improve visibility and help decrease moisture drawn into the vehicle.
- Keep the path under the front seats clear of objects to help circulate the air inside of the vehicle more effectively.
- Use of non-GM approved hood deflectors can adversely affect system performance.
   Check with your dealer before adding equipment to the outside of the vehicle.
- Do not attach any devices to the air vent slats. Doing so restricts airflow and may cause damage to the air vents.

# Maintenance

# Passenger Compartment Air Filter

The filter reduces the dust, pollen, and other airborne irritants from outside air that is pulled into the vehicle.

The filter should be replaced as part of routine scheduled maintenance.




1. Open the lower glove box door completely.



2. Push the dampener arm to the left until it releases the glove box.



Press the sides of the glove box door inward and rotate the door downward to remove.

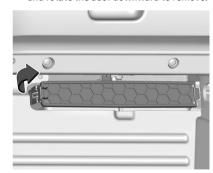

- Pull lever on left side of the filter door and slide left, then remove the door. Remove the old filter.
- 5. Install the new air filter.
- 6. Reinstall the filter door.
- 7. Reverse the steps to reinstall the glove box.

See your dealer if additional assistance is needed.

#### Service

All vehicles have a label underhood that identifies the refrigerant used in the vehicle. The refrigerant system should only be serviced by trained and certified technicians. The air conditioning evaporator should never be repaired or replaced by one from a salvage vehicle. It should only be replaced by a new evaporator to ensure proper and safe operation.

During service, all refrigerants should be reclaimed with proper equipment. Venting refrigerants directly to the atmosphere is harmful to the environment and may also create unsafe conditions based on inhalation, combustion, frostbite, or other health-based concerns.

1	-	
ı	b'	

# **Driving and Operating**

Oriving Information
Driving for Better Energy Efficiency170
Distracted Driving171
Defensive Driving172
Control of a Vehicle172
Braking 172
Steering172
Off-Road Recovery 173
Loss of Control174
Off-Road Driving174
Driving on Wet Roads178
Hill and Mountain Roads179
Winter Driving180
If the Vehicle is Stuck 181
Vehicle Load Limits182
Truck-Camper Loading Information185
tarting and Operating
New Vehicle Break-In185
Power Modes186
lectric Drive Unit
Electric Drive Unit187
One-Pedal Driving191
Orive Systems
Four-Whool Drivo 102

Brakes	
Electric Brake Boost	192
Antilock Brake System (ABS)	
Electric Parking Brake	193
Brake Assist	194
Hill Start Assist (HSA)	
Regenerative Braking	195
Ride Control Systems	
Traction Control/Electronic Stability	
Control	196
Driver Mode Control	197
Four-Wheel Steering	199
Air Suspension	201
Cruise Control	
Adaptive Cruise Control (Advanced)	204
Super Cruise	214
<b>Advanced Driver Assistance Systems</b>	5
Advanced Driver Assistance Systems	227
Assistance Systems for Parking or	
Backing	
Rear Vision Camera (RVC)	
Surround Vision System	220
Surround tistori system minimini	229
Park Assist	236
Park Assist Automatic Parking Assist (APA)	236 237
Park AssistAutomatic Parking Assist (APA) Reverse Automatic Braking (RAB)	236 237 239
Park Assist	236 237 239 240
Park Assist	236 237 239 240 241
Park Assist	236 237 239 240 241

	_
Forward Collision Alert (FCA) System 2 Automatic Emergency Braking (AEB) 2 Front Pedestrian Braking (FPB) System 2 Lane Change Alert (LCA)	44 48 50 252
Charging         When to Charge       2         Plug-In Charging       2         Delayed Charging Override       2         Charging Status Feedback       2         Charge Cord       2         Utility Interruption of Charging       2         Electrical Requirements for Battery       2         Charging       2	255 259 259 263 68
Trailer Towing General Towing Information	69 272 276 285
Add-On Electrical Equipment2 Auxiliary Switches2	

# Driving Information Driving for Better Energy Efficiency

Use the tips in the categories below to help maximize energy efficiency and range.

In colder temperatures, while these efficiency tips will help, the electric vehicle driving range will be lower due to higher energy usage including energy spent heating the cabin.

The Energy Info feature available on the Vehicle Status app estimates the influence of the main factors impacting vehicle range. It displays how energy is being used for the current drive since the last time the vehicle was started and over a recently driven distance. See *Vehicle Status* 

⇒ 124.

# Acceleration, Braking, and Coasting

Avoid rapid accelerations and decelerations.
Use cruise control when appropriate.

Plan ahead for decelerations, and coast whenever possible. Do not rush to traffic signals, and do not shift to N (Neutral) to coast.

Use the One-Pedal Driving feature when appropriate to help recover energy during coasting and braking. One-Pedal mode recovers more energy while coasting and braking than D (Drive) mode. See *One-Pedal Driving* ♥ 191.

Use the Regen on Demand feature during deceleration to help recover energy. See *Regenerative Braking* ⇔ 195.

#### **Terrain and Vehicle Speed**

Higher speeds and grade changes use more energy and can significantly reduce electric range.

# Managing the Interior Temperature Climate Settings

Using the heat and air conditioning systems decreases the energy available for electric driving. Optimal energy efficiency is achieved when the heat, air conditioning, and fan are turned off.

Use the heated and ventilated seat features (if equipped) instead of the climate control system. Heating and ventilating the seat uses less energy than heating and cooling the interior. See Heated and Ventilated Front Seats 

❖ 41 and Heated Rear Seats ❖ 45.

Use the Remote Start Climate Control feature to heat or cool the interior while the vehicle is plugged in to use electricity from the electrical outlet instead of using energy from the battery. See *Remote Start* ⇔ 12.

On colder days, it is best to plug in the vehicle overnight, and then remote start the vehicle.

Use the Battery Gauge on the Instrument Cluster to view the effect of climate control settings on your estimated range. See *Battery Gauge* (High Voltage) ⇒ 105.

#### Other Ways to Affect Cabin Temperature

In hot weather, avoid parking in direct sunlight.
Use sunshades inside the vehicle.

Keep the inside of the windows clean to reduce fogging. Turn off the front defroster and rear defogger when they are not needed.

Avoid driving with the windows open at highway speeds.

# Vehicle Charging and Maintenance Charging

Keep the vehicle plugged in, even when fully charged, to keep the battery temperature ready for the next drive. This is important when outside temperatures are extremely hot or cold.

If possible, use a 240 volt high power charge station for best results. This allows the interior of the vehicle and high voltage battery to warm to optimal temperature.

Allow the vehicle to warm up for 20 minutes before driving. This helps to optimize the high voltage battery temperature before driving.

#### Maintenance

Always keep the tires properly inflated and the vehicle properly aligned.

Avoid unnecessary use of electrical accessories. Power used for functions other than propelling the vehicle will reduce the available range.

# Cargo Weight

The weight of excess cargo in the vehicle affects efficiency and range. Avoid carrying more than is needed.

Using a rooftop carrier will reduce efficiency due to additional weight and drag.

# **Distracted Driving**

Distraction comes in many forms and can take your focus from the task of driving. Exercise good judgment and do not let other activities divert your attention away from the road. Many local governments have enacted laws regarding driver distraction. Become familiar with the local laws in your area.

To avoid distracted driving, keep your eyes on the road, keep your hands on the steering wheel, and focus your attention on driving.

- Do not use a phone in demanding driving situations. Use a hands-free method to place or receive necessary phone calls.
- Watch the road. Do not read, take notes, or look up information on phones or other electronic devices.
- Designate a front seat passenger to handle potential distractions.
- Become familiar with vehicle features before driving, such as programming favorite radio stations and adjusting

climate control and seat settings. Program all trip information into any navigation device prior to driving.

- Wait until the vehicle is parked to retrieve items that have fallen to the floor.
- Stop or park the vehicle to tend to children.
- Keep pets in an appropriate carrier or restraint.
- Avoid stressful conversations while driving, whether with a passenger or on a mobile phone.

# **⚠** Warning

Taking your eyes off the road too long or too often could cause a crash resulting in injury or death. Focus your attention on driving.

Your vehicle may be equipped with features that can help with hands-free use of the infotainment system, navigation system, and your mobile phone. For more information, see Introduction 

⇒ 139 in the Infotainment section, Voice Recognition 

⇒ 151, Bluetooth (Pairing and Using a Phone) 

⇒ 153, Bluetooth (Overview) 

⇒ 152, and Steering Wheel Controls 

⇒ 140.

# **Defensive Driving**

Defensive driving means to always expect the unexpected. The first step in driving defensively is to wear a seat belt. See *Seat Belts* ♀ 45.

- Assume that other road users (pedestrians, bicyclists, and other drivers) are going to be careless and make mistakes. Anticipate what they may do and be ready.
- Allow enough following distance between your vehicle and the vehicle in front of you.
- Focus on the task of driving.

#### Control of a Vehicle

Braking, steering, and accelerating are important factors in helping to control a vehicle while driving.

# **Braking**

Braking action involves perception time and reaction time. Deciding to push the brake pedal is perception time. Actually doing it is reaction time.

Average driver reaction time is about threequarters of a second. In that time, a vehicle moving at 100 km/h (60 mph) travels 20 m (66 ft), which could be a lot of distance in an emergency.

Helpful braking tips to keep in mind include:

- Keep enough distance between you and the vehicle in front of you.
- Avoid needless heavy braking.
- Keep pace with traffic.


If a brake fault occurs, the brakes may lose power assist. More effort will be required to stop the vehicle and it may take longer to stop.

If the vehicle loses propulsion power while driving, the brake boost system, which is powered by the 12-volt vehicle battery, will maintain the power assist for as long as the battery has sufficient voltage. Steer the vehicle out of the roadway and stop as soon as it is safe to do so. See *Electric Brake Boost* ⇒ 192.

# Steering

#### Caution

To avoid damage to the steering system, do not drive over curbs, parking barriers, or similar objects at speeds greater than 3 km/h (1 mph). Use care when driving over other objects such as lane dividers and speed bumps. Damage caused by misuse of the vehicle is not covered by the vehicle warranty.

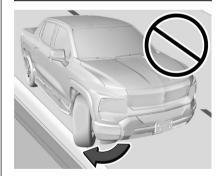

# **Electric Power Steering**

The vehicle is equipped with an electric power steering system, which reduces the amount of effort needed to steer the vehicle. It does not have power steering fluid. Regular maintenance is not required.

If the power steering system overheats, there will be a temporary reduced level of steering assist until the system cools down. For example, the system can overheat if the steering wheel is held firmly for an extended amount of time at the end of its range of travel. The energy from the additional power assist becomes heat. Normal operation of the power steering system will resume when the system cools down.

If the power steering system malfunctions, the power steering system will have no steering assist and greater steering effort may be required. See your dealer to resolve the problem.

# **Four-Wheel Steering**

If equipped, this feature enables the vehicle to steer with all four wheels to reduce the turning radius and improve maneuverability. See Four-Wheel Steering ▷ 199.

# **Curve Tips**

- Reduce speed before entering a curve.
- Maintain a reasonable steady speed through the curve.
- Wait until the vehicle is out of the curve before accelerating gently into the straightaway.

# **Steering in Emergencies**

- There are some situations when steering around a hazard may be more effective than braking.
- Holding both sides of the steering wheel allows you to turn 180 degrees without removing a hand.
- The Antilock Brake System (ABS) allows steering while braking.

# Off-Road Recovery



The vehicle's right wheels can drop off the edge of a road onto the shoulder while driving. Follow these tips:

- Ease off the accelerator and then, if there is nothing in the way, steer the vehicle so that it straddles the edge of the pavement.
- 2. Turn the steering wheel about one-eighth of a turn, until the right front tire contacts the pavement edge.
- Turn the steering wheel to go straight down the roadway.

# **Loss of Control**

# Skidding

There are three types of skids that correspond to the vehicle's three control systems:

- Braking Skid wheels are not rolling.
- Steering or Cornering Skid too much speed or steering in a curve causes tires to slip and lose cornering force.
- Acceleration Skid too much throttle causes the driving wheels to spin.

Antilock brakes help to avoid only the braking skid.

Defensive drivers avoid most skids by taking reasonable care suited to existing conditions, and by not exceeding those conditions. But skids are always possible.

If the vehicle starts to skid, follow these suggestions:

 Ease your foot off the accelerator pedal and steer the way you want the vehicle to go. The vehicle may straighten out, but if it skids again from oversteer, be ready to correct another skid if it occurs.

- Slow down and adjust your driving according to weather conditions. Stopping distance may be longer and vehicle control may be affected when traction is reduced by water, snow, ice, gravel, or other material on the road. Learn to recognize warning clues — such as enough water, ice, or packed snow on the road to make a mirrored surface — and slow down when you have any doubt.
- Try to avoid sudden steering, acceleration, or braking, including reducing vehicle speed by shifting to a lower gear. Any sudden changes could cause the tires to slide.

# **Off-Road Driving**

# ⚠ Warning

When driving off-road, bouncing and quick changes in direction can easily throw you out of position. This could cause you to lose control and crash. You and your passengers should always wear seat belts.

If equipped with all-terrain tires, this vehicle may be used for off-road driving. If not equipped with all-terrain tires, this vehicle should only be driven on a level. solid surface or used for light recreational driving away from paved roads.

The electric four-wheel drive (e4WD) system on this vehicle is not the same as a traditional 4x4 system and is not designed to handle extreme off-roading activities. See *Four-Wheel Drive* ♀ 192.

#### Off-Road Vehicle Features

If equipped, the following features may assist on off-road driving:

- Four-wheel steering: Provides the ability to steer the vehicle with all four wheels, reducing the turning diameter and improving maneuverability of the vehicle.
   See Four-Wheel Steering ⇒ 199.
- Exterior cameras: Provides various views around the vehicle to avoid obstacles during off-roading events. See Surround Vision System 

  229.

175

# Preparing to Drive Away from Paved Roads

Have all necessary maintenance and service work completed.

Charge the vehicle and check inflation pressure in all tires, including the spare, if equipped. See *Tire Pressure* \$ 318.

Select Off-Road in the Drive Modes app on the infotainment home screen. See *Driver Mode Control* 

→ 197.

Know the local laws that apply to offroad driving.

# Loading the Vehicle for Off-Road Driving

# **⚠** Warning

 Unsecured cargo on the load floor can be tossed about when driving over rough terrain. You or your passengers can be struck by flying objects. Secure the cargo properly.

(Continued)

# Warning (Continued)

- Keep cargo in the cargo area as far forward and as low as possible. The heaviest things should be on the floor, forward of the rear axle.
- Heavy loads on the roof raise the vehicle's center of gravity, making it more likely to roll over. You can be seriously or fatally injured if the vehicle rolls over. Put heavy loads inside the cargo area, not on the roof.

#### Caution

Placing tall or oversized items near or against the spoiler, midgate, or the lights above the rear window can result in vehicle damage. To prevent vehicle damage, properly store cargo in the truck bed away from the spoiler, midgate, and cargo lights using the cargo tie-downs.

For more information about loading the vehicle, see *Vehicle Load Limits* \$\sim\$ 182 and *Tires* \$\sim\$ 316.

#### **Environmental Concerns**

Always use established trails, roads, and areas that are reserved for public off-road recreational driving. Obey all posted regulations.

Do not damage shrubs, flowers, trees, grasses, or disturb wildlife.

# **Driving on Hills**

# **⚠** Warning

Many hills are simply too steep for any vehicle. Driving down hills can cause loss of control. Driving across hills can cause a rollover. You could be injured or killed. Do not drive on steep hills.

# **⚠** Warning

Getting out of the vehicle on the downhill side when stopped across an incline is dangerous. If the vehicle rolls over, you could be crushed or killed. Always get out on the uphill side of the vehicle and stay well clear of the rollover path.

Driving safely on hills requires good judgment and an understanding of the vehicle's capabilities.

Before driving on a hill, assess the steepness, traction, and obstructions. If the terrain ahead cannot be seen, get out of the vehicle and walk the hill before driving further.

When driving on hills:

- Keep a firm grip on the steering wheel.
- Maintain a slow speed.

# **⚠** Warning

Driving to the top of a hill at high speed can cause a crash. There could be a drop-off, embankment, cliff, or even another vehicle. You could be seriously injured or killed. As you near the top of a hill, slow down and stay alert.

- When possible, drive straight up or down the hill.
- Slow down when approaching the top of the hill.
- Use headlights even during the day to make the vehicle more visible.

- When driving down a hill, keep the vehicle headed straight down. Use low mode to slow the vehicle and help keep the vehicle under control.
- Never go downhill either forward or in reverse with the vehicle in N (Neutral).

# ⚠ Warning

Do not coast downhill in N (Neutral) or with the vehicle turned off. See Hill and Mountain Roads \$\Display\$ 179 for tips on maximizing regenerative braking and minimizing the load on the brake system. Heavy braking when going down a hill can cause your brakes to overheat and fade. This could cause loss of control and you or others could be injured or killed. Apply the brakes lightly when descending a hill and use a low mode to keep vehicle speed under control.

 Avoid turns that take the vehicle across the incline of the hill. Driving across an incline puts more weight on the downhill wheels, which could cause a downhill slide or a rollover.

- Loose gravel, muddy spots, or even wet grass can cause the tires to slip sideways, downhill. If the vehicle slips sideways, it can hit something and potentially roll over.
- Hidden obstacles can make the steepness of the incline more severe. If a rock is driven across with the uphill wheels, or if the downhill wheels drop into a rut or depression, the vehicle can tilt even more.
- If an incline must be driven across, and the vehicle starts to slide, turn downhill. This should help straighten out the vehicle and prevent side slipping.

# Driving in Mud, Sand, Snow, or Ice

# 

Driving on frozen lakes, ponds, or rivers can be dangerous. Ice conditions vary greatly and the vehicle could fall through the ice; you and your passengers could drown. Drive your vehicle on safe surfaces only.

Traction changes when driving on sand. On loose sand, such as on beaches or sand dunes, the tires tend to sink into the sand. This affects steering, accelerating, and braking. Drive at a reduced speed and avoid sharp turns or abrupt maneuvers.

Traction is reduced on hard-packed snow and ice and it is easy to lose control. Reduce vehicle speed when driving on hard-packed snow and ice.

# **Water Fording**

# **⚠** Warning

Driving in water can cause loss of vehicle control or vehicle damage. As water depths increase, reduce the vehicle speed.

- Never drive through water deeper than the driver's side front gravel guard behind the front tire.
- Be aware of submerged obstacles.
- Never open your doors while in water.



# **⚠** Warning

Driving through flowing water can be dangerous and have an unpredictable effect on vehicle control. Even shallow water can wash away the ground from under your tires. Traction could be lost, the vehicle could be swept downstream or the vehicle could roll over. Do not drive through rushing water.

#### Caution

Do not drive through standing water if it is deep enough to cover the gravel guards. Deep water can damage vehicle parts.

Your vehicle is capable of driving in varying water depths. See *Air Suspension* 

201.

Before driving in water:

- Determine the depth of the water.
- Enter the water slowly. If the water is deeper than the center of the front hubs, never exceed 5 km/h (3 mph).
- Always drive in the direction of the current.
- Avoid oncoming vehicles as they will increase the water depth surrounding your vehicle.
- After exiting the water, repeatedly and gently apply the brakes to dry them off and restore effectiveness.

# **If Something Goes Wrong**

# **⚠** Warning

A vehicle with driveline damage may roll when shifted into P (Park). Always set the Electric Parking Brake before inspecting for driveline damage or when securing the vehicle on a flatbed tow truck. See Electric Parking Brake 

193 and Transporting a Disabled Vehicle 

336.

If during your off-road experience a warning light or warning message displays on the instrument cluster, or if the vehicle sustains damage, stop driving as soon as it is safe to do so. Correct the condition if possible before continuing driving. If a warning light or message appears, or if the condition cannot be corrected, see your dealer. See Vehicle Messages \$\precep\$ 127.

If the vehicle is operating with reduced acceleration or reduced propulsion, stop your off-road experience and drive slowly to an accessible point for further assistance. The vehicle should be taken to your dealer for

service as soon as possible. See Propulsion Power Messages \$\times\$ 128 and Propulsion Power is Limited Light \$\times\$ 110.

# After Driving Your Vehicle Off-Road

#### **Inspections and Cleaning**

# **⚠** Warning

Lifting a vehicle and getting under it to do maintenance or repairs is dangerous without the appropriate safety equipment and training. If a jack is provided with the vehicle, it is designed only for changing a flat tire. If it is used for anything else, you or others could be badly injured or killed if the vehicle slips off the jack. If a jack is provided with the vehicle, only use it for changing a flat tire.

Remove any brush or debris that has collected on the underbody or chassis, or under the hood. Clean the lenses on the exterior cameras. These accumulations can be a fire hazard. After operation in mud or sand, have the brake linings cleaned and checked. These substances can cause glazing and uneven braking.

Check the body structure, driveline, steering, suspension, wheels, tires, and other vehicle systems for damage, or have these inspections done by your dealer.

The extreme conditions of off-road driving require more frequent maintenance service. See "Severe Conditions Requiring More Frequent Maintenance" and "Additional Required Services — Severe Service" on Maintenance Schedule 

348.

# **Driving on Wet Roads**

Rain and wet roads can reduce vehicle traction and affect your ability to stop and accelerate. Always drive slower in these types of driving conditions and avoid driving through large puddles and deep-standing or flowing water.

# **⚠** Warning

Wet brakes can cause crashes. They might not work as well in a quick stop and could cause pulling to one side. You could lose control of the vehicle.

After driving through a large puddle of water or a car/vehicle wash, lightly apply the brake pedal until the brakes work normally.

Flowing or rushing water creates strong forces. Driving through flowing water could cause the vehicle to be carried away. If this happens, you and other vehicle occupants could drown. Do not ignore police warnings and be very cautious about trying to drive through flowing water.

# Hydroplaning

Hydroplaning is dangerous. Water can build up under the vehicle's tires so they actually ride on the water. This can happen when the road is wet and you are driving fast. When the vehicle is hydroplaning, it has little or no contact with the road.

There is no hard and fast rule about hydroplaning. The best advice is to slow down when the road is wet.

# **Other Rainy Weather Tips**

Besides slowing down, other wet weather driving tips include:

- Allow extra following distance.
- Pass with caution.
- Keep windshield wiping equipment in good shape, and keep the windshield washer fluid reservoir filled.
- Turn off any cruise control, if equipped.
   See Adaptive Cruise Control (Advanced)
   ⇒ 204 or Super Cruise ⇒ 214.
- Turn off One-Pedal Driving mode. See One-Pedal Driving 

  → 191.
- Turn on the Traction Control System (TCS) and the Electronic Stability Control (ESC).
   See Traction Control/Electronic Stability Control 

  196.

# Hill and Mountain Roads

# ⚠ Warning

Do not charge your vehicle's battery above an 80% charge if you are going to drive down long, steep grades such as mountain passes. This provides room in the battery for regenerative braking to supplement your conventional brakes during the descent. This is especially important when towing a trailer, which puts additional stress on your vehicle's braking system.

If the battery becomes full, regenerative braking will be limited or unavailable. The brakes will have to do all the work of slowing down the vehicle and could become too hot. Hot brakes may not be able to slow the vehicle enough to maintain speed and control. To help avoid the risk of a crash, limit the battery's charge and, if you experience brake fade or receive a brake warning, stop the vehicle and allow the brakes to cool.

See "Charge Now" under *Charging* \$\simeq\$ 118 for information on setting charge limits.

Driving on steep hills or through mountains is different than driving on flat or rolling terrain. Be sure to:

- Use regenerative braking to help slow the vehicle or maintain speed by keeping the vehicle in gear and limiting the initial battery charge to 80% or less. See Regenerative Braking \$\DDS\$ 195.
- When braking is necessary, use frequent, light taps of the brake pedal. This maximizes regenerative braking and minimizes the load on the vehicle brake system.
- Keep the vehicle serviced and in good shape.
- Check all fluid levels, brakes, tires, and cooling system.
- Drive at speeds that keep the vehicle in its own lane. Do not swing wide or cross the center line.
- Be alert on top of hills; something could be in your lane (e.g., stalled car, crash).
- Pay attention to special road signs (e.g., falling rocks area, winding roads, long grades, passing or no-passing zones) and take appropriate action.

# **Winter Driving**

# **Driving on Snow or Ice**

#### Caution

To avoid damage to the wheels and brake components, always clear snow and ice from inside the wheels and underneath the vehicle before driving.

Snow or ice between the tires and the road creates less traction or grip, so drive carefully. Wet ice can occur at about 0°C (32°F) when freezing rain begins to fall. Avoid driving on wet ice or in freezing rain until roads can be treated.

#### For Slippery Road Driving:

- Turn off cruise control.
- If enabled, turn off One-Pedal Driving. See One-Pedal Driving 

  → 191.
- If turned off, turn on the Traction Control and the Electronic Stability Control systems. See Traction Control/Electronic Stability Control 

  196.
- Select the Snow/Ice driver mode. See Driver Mode Control 

  → 197.

- Accelerate gently. Accelerating too quickly causes the wheels to spin and makes the surface under the tires slick.
- Allow greater following distance and watch for slippery spots. Icy patches can occur on otherwise clear roads in shaded areas. The surface of a curve or an overpass can remain icy when the surrounding roads are clear. Avoid sudden steering maneuvers and braking while on ice.
- Antilock Brake System (ABS) improves vehicle stability during hard stops, but the brakes should be applied sooner than when on dry pavement. See Antilock Brake System (ABS) 

  193.
- Avoid using the Regen on Demand paddle.
   See Regenerative Brakina \$\infty\$ 195.

#### **Blizzard Conditions**

If you become stranded or cannot continue driving due to winter storm conditions, stop the vehicle in a safe place and signal for help. Stay with the vehicle unless there is help nearby.

If you stay in your vehicle while waiting, signal for help and keep everyone in the vehicle safe by turning on the hazard warning flashers and tying a red cloth to an outside mirror.

181

To conserve battery energy while waiting for help, run the vehicle for only short periods as needed to warm the vehicle and then shut the vehicle off and partially close the window. Moving about to keep warm also helps. For additional tips to help conserve battery energy in cold weather, see *Driving for Better Energy Efficiency* ▷ 170.

### If the Vehicle Is Stuck

### ⚠ Warning

If the vehicle's tires spin at high speed, they can explode, and you or others could be injured. Spin the wheels as little as possible and avoid going above 56 km/h (35 mph).

Slowly and cautiously spin the wheels to free the vehicle when stuck in sand, mud, ice, or snow.

The Traction Control System can often help to free a stuck vehicle. See *Traction Control/Electronic Stability Control* ❖ 196. If this does not free the vehicle, try "rocking" the vehicle as described below.

Do not use tire chains on this vehicle. For information about using traction devices, see *Tire Chains and Other Traction Devices* 

⇒ 327.

### Rocking the Vehicle to Get It Out

Turn the steering wheel left and right to clear the area around the front wheels. Turn off the traction control and StabiliTrak/electronic stability control features. Shift back and forth between R (Reverse) and D (Drive), spinning the wheels as little as possible. To prevent wear on the electric drive unit, wait until the wheels stop spinning before shifting gears. Slowly spinning the wheels in the forward and reverse directions causes a rocking motion that could free the vehicle. If that does not get the vehicle out after a few tries, it might need to be towed out. See *Transporting a Disabled Vehicle* ❖ 336.

### **Recovery Hooks**

### **⚠** Warning

Never pull on recovery hooks from the side. The hooks could break and you and others could be injured. When using recovery hooks, always pull the vehicle from the front.

#### Caution

Never use recovery hooks to tow the vehicle. The vehicle could be damaged, and the repairs would not be covered by the vehicle warranty.

If equipped, there are recovery hooks at the front of the vehicle. Use them if the vehicle is stuck in sand, mud, ice, or snow to pull the vehicle back to the road and continue driving.




### **Vehicle Load Limits**

It is very important to know how much weight the vehicle can carry. This weight is called the vehicle capacity weight and includes the weight of all occupants, cargo, and all nonfactory-installed options. Two labels on the vehicle may show how much weight it was designed to carry: the Tire and Loading Information label and the Certification/Tire label.

### Tire and Loading Information Label

### **⚠** Warning

Do not load the vehicle any heavier than the Gross Vehicle Weight Rating (GVWR), or either the maximum front or rear Gross Axle Weight Rating (GAWR). This can cause systems to break and change the way the vehicle handles. This could cause loss of control and a crash. Overloading can also reduce stopping performance, damage the tires, and shorten the life of the vehicle.

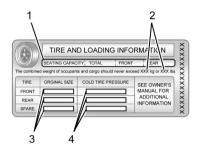

### **Label Example**

A vehicle-specific Tire and Loading Information label is attached to the center pillar (B-pillar). The Tire and Loading Information label shows the number of occupant seating positions (1), and the maximum vehicle capacity weight (2) in kilograms and pounds.

The Tire and Loading Information label also shows the size of the original equipment tires (3) and the recommended cold tire inflation pressures (4). For more information on tires and inflation see *Tires* ⇒ 316 and *Tire Pressure* ⇒ 318.

There is also important loading information on the vehicle Certification/ Tire label. It may show the Gross Vehicle Weight Rating (GVWR) and the Gross Axle Weight Rating (GAWR) for the front and rear axles. See "Certification/Tire Label" later in this section.

#### Steps for Determining Correct Load Limit


- Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
- 2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- 4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lb passengers in your

vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.)

- 5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.


See *Trailer Towing*  $\Rightarrow$  272 for important information on towing a trailer, towing safety rules, and trailering tips.

If aftermarket accessories are installed on the vehicle, for example a rooftop carrier, be sure to add the weight of all installed accessories to the combined weight of luggage and cargo.

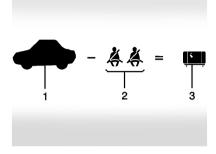

### Example 1

- Vehicle Capacity Weight for Example 1
   = 453 kg (1,000 lb)
   Then subtract Accessory Weight, for example a rooftop cargo box = 15.8 kg (35 lb)
- Subtract Occupant Weight @ 68 kg (150 lb) × 2 = 136 kg (300 lb)
- 3. Remaining available capacity for Cargo Weight = 301.2 kg (665 lb)

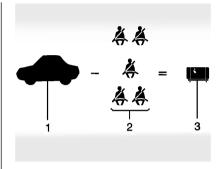


#### Example 2

Vehicle Capacity Weight for Example 2
 = 453 kg (1,000 lb)
 Then subtract Accessory Weight, for example a rooftop cargo box = 18.1 kg

(40 lb)

- 2. Subtract Occupant Weight @ 68 kg (150 lb) × 5 = 340 kg (750 lb)
- 3. Remaining available capacity for Cargo Weight = 94.9 kg (210 lb)

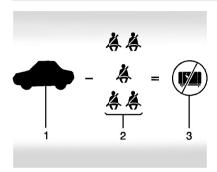


Example 3

- 1. Vehicle Capacity Weight for Example 3 = 453 kg (1,000 lb)
- 2. Subtract Occupant Weight @ 91 kg (200 lb) × 5 = 453 kg (1,000 lb)
- 3. Available Cargo Weight = 0 kg (0 lb)

Refer to the Tire and Loading Information label for specific information about the vehicle's capacity weight and seating positions. The combined weight of the driver, passengers, accessories, and cargo should never exceed the vehicle's capacity weight.

### **Certification/Tire Label**

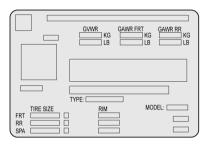

#### Label Example

A vehicle-specific Certification/Tire label is attached to the center pillar (B-pillar). The label may show the size of the vehicle's original tires and the inflation pressures needed to obtain the gross weight capacity of the vehicle. This is called Gross Vehicle Weight Rating (GVWR). The GVWR includes the weight of the vehicle, all occupants, and cargo.

The Certification/Tire label also may show the maximum weights for the front and rear axles, called Gross Axle Weight Rating (GAWR). To determine the actual loads on the front and rear axles, weigh the vehicle at a weigh station. Your dealer can help with this. Be sure to spread the load equally on both sides of the centerline.

The Certification/Tire label also contains important information about the Front Axle Reserve Capacity.

### 

In the case of a sudden stop or collision, things carried in the bed of your truck could shift forward and come into the passenger area, injuring you and others. If you put things in the bed of your truck, you should make sure they are properly secured.

Using heavier suspension components to get added durability might not change the weight ratings. Ask your dealer to help load the vehicle the right way.

### **⚠** Warning

Things you put inside the vehicle can strike and injure people in a sudden stop or turn, or in a crash.

- Put things in the cargo area of the vehicle. Try to spread the weight evenly.
- Never stack heavier things, like suitcases, inside the vehicle so that some of them are above the tops of the seats.
- Do not leave an unsecured child restraint in the vehicle.
- When you carry something inside the vehicle, secure it whenever you can.
- Do not leave a seat folded down unless you need to.

### **Add-On Equipment**

#### Caution

Overloading the vehicle may cause damage. Repairs would not be covered by the vehicle warranty. Do not overload the vehicle.

When carrying removable items, a limit on how many people carried inside the vehicle may be necessary. Be sure to weigh the vehicle before buying and installing the new equipment.

Remember not to exceed the Gross Axle Weight Rating (GAWR) of the front or rear axle.

### Truck-Camper Loading Information

The vehicle was neither designed nor intended to carry a slide-in camper.

#### Caution

Adding a slide-in camper or similar equipment to the vehicle can damage it, and the repairs would not be covered by the vehicle warranty. Do not install a slide-in camper or similar equipment on the vehicle.

# Starting and Operating New Vehicle Break-In

#### Caution

Avoid making hard stops for the first 322 km (200 mi). During this time the new brake linings are not yet broken in. Hard stops with new linings can mean premature wear and earlier replacement. Follow this breaking-in guideline every time you get new brake linings. Following break-in, vehicle speed and load can be gradually increased.

### **Power Modes**

### **Turning the Vehicle On**

This vehicle is equipped with the Hands-Free Start feature, which automatically starts the vehicle when you enter with a remote key, press the brake, or close the driver door.



Avehicle ready light displays on the instrument cluster when the vehicle is ready to be driven. This could take up to 15 seconds at extremely cold temperatures. The instrument cluster also displays an active battery gauge when the vehicle is ready to be driven.

If a remote key was left in the vehicle after being driven, closing the driver door will not turn on the vehicle. The brake pedal must be pressed to turn the vehicle on. Driver Information Center messages will display explaining how to turn on the vehicle. If the remote key is not in the vehicle or something is interfering with the remote key, a message displays in the Driver Information Center.

If the vehicle does not turn on due to a low remote key battery, the vehicle can still be driven. See *Remote Key Operation* 

7.

A chime will sound if the driver door is opened while the vehicle is on.

### **Turning the Vehicle Off**



Turning off the vehicle while moving may disable the airbags. While driving, only shut the propulsion system off in an emergency.

When the vehicle is shifted to P (Park), it will turn off when a driver exit is detected. The vehicle can also be turned off by pressing on the infotainment displau.

Retained Accessory Power (RAP) remains active until the driver door is opened.

If the vehicle was started but not shifted out of P (Park), it will not turn off based on driver exit detection and will need to be turned off through off or waiting for the automatic shutdown timeout.

To turn off the vehicle in an emergency:

- Brake using firm and steady pressure. Do not pump the brakes repeatedly. This may deplete power assist, requiring increased brake pedal force.
- Shift the vehicle to N (Neutral). This can be done while the vehicle is moving.
   After shifting to N (Neutral), firmly apply the brakes and steer the vehicle to a safe location
- 3. Come to a complete stop, shift to P (Park), and turn off the vehicle
- 4. Set the parking brake. See *Electric Parking*Brake \$\to\$ 193.

If a drive mode is entered where Fi is present while moving, the vehicle can be turned off while driving. Press Fi and follow the instructions displayed in the Driver Information Center.

Climate control functions, such as defrost, heating, and air conditioning are only available while the vehicle is powered on. Turning the vehicle off will turn off all climate controls.

An additional emergency vehicle off button will display if a collision is detected. It can be pressed to turn off the vehicle.

### **Keep Vehicle On After Driver Exit**

### **⚠** Warning

It is dangerous to get out of the vehicle if the P (Park) button is not pressed with the parking brake set. The vehicle can roll.

Do not leave the vehicle when the propulsion system is running. If you have left the propulsion system running, the vehicle can move suddenly. You or others could be injured. To be sure the vehicle will not move, even when you are on fairly level ground, always set the parking brake and press the P (Park) button.

To keep the vehicle on after a driver exit:

 Shift into P (Park) and press the parking brake switch. See Electric Drive Unit ▷ 187. 2. Press (a) on the infotainment display. The vehicle will remain on for a set time, which will be displayed upon activation. To restart the time interval, press (a) again.

Using  $\bigcirc$  will reduce the charge level of the high voltage battery. Ensure your battery has sufficient charge before activating  $\bigcirc$ . See Battery Gauge (High Voltage)  $\triangleright$  105.

should only be used when the vehicle is attended. A horn chirp will sound if the vehicle turns off during the set time interval.

### Service Mode

#### Caution

Placing the vehicle in Service Mode will use the 12-volt battery. Do not use Service Mode for an extended period, or the vehicle may not start.

This mode is available for service and diagnostics, and to verify the proper operation of the service vehicle soon light as may be required for inspection or maintenance purposes.

To place the vehicle in Service Mode:

- 1. Ensure the vehicle is off, the driver door is open, and the brake pedal is not applied.
- Press and release the accelerator pedal three times within five seconds, keeping the accelerator pressed on the third time.

The instrument cluster and infotainment systems will operate normally, but the vehicle will not be able to be driven. The propulsion system will not be active in Service Mode. Press the brake pedal to turn the vehicle on or press on the infotainment display to turn the vehicle off.

### **Electric Drive Unit**



The vehicle uses an electric drive unit. The shift pattern is displayed on the front of the shift lever. The selected gear position will illuminate red on the shift lever, while all others will be displayed in white. If the shift is not immediate, as in very cold conditions, the indicator on the shift switch may blink until it is fully engaged.

**P:** This position locks the drive wheels. Use P (Park) when starting the vehicle to ensure the vehicle does not move.

### ⚠ Warning

It is dangerous to get out of the vehicle if the P (Park) button is not pressed with the parking brake set. The vehicle can roll.

Do not leave the vehicle when the propulsion system is running. If you have left the propulsion system running, the vehicle can move suddenly. You or others could be injured. To be sure the vehicle will not move, even when you are on fairly level ground, always set the parking brake and press the P (Park) button.

### **Shifting out of Park**

To shift out of P (Park) the vehicle must be on, the brake pedal applied, and the charge cord unplugged.

Parking the vehicle in extreme cold for several days without the charge cord connected may cause the vehicle not to start. Plug the vehicle in to allow the high voltage battery to be warmed sufficiently.

To shift out of P (Park):

- 1. Apply the brake pedal.
- 2. Verify that the vehicle is unplugged and the vehicle ready light is on.
- 3. Move the shift lever to the desired position.

  After releasing the shift lever, it will return to

After releasing the shift lever, it will return to the center position.

The P indicator will turn white and the gear indicator on the shift lever will turn red when the vehicle is no longer in P (Park).

If the vehicle cannot shift from P (Park), a Driver Information Center (DIC) message may be displayed. Check that the vehicle is on, the vehicle ready light is on, and the brake pedal is applied when you are attempting to shift out of

P (Park). If all of these are met but the vehicle will not shift out of P (Park), see your dealer for service.

### **Shifting Into Park**

### **⚠** Warning

Parking on grades with poor traction such as ice, snow, mud, or gravel may cause the vehicle to unintentionally move and could result in injury, death, and/or vehicle damage. Be sure to apply the parking brake. See Electric Parking Brake 

9193.

To shift into P (Park):

- Hold the brake pedal down and set the parking brake. See Electric Parking Brake ⇒ 193.
- Press the P (Park) switch at the end of the shift lever.
- The P indicator on the shift lever will turn red when the vehicle is in P (Park).

If the vehicle is on, the vehicle can be shifted into P (Park).

If the vehicle is shifted into P (Park) on a hill, the Electric Parking Brake (EPB) may apply automatically. The driver may not be able to release the EPB using the EPB switch. It should automatically release when the vehicle is shifted out of P (Park).

The vehicle will not shift into P (Park) if it is moving too fast. Stop the vehicle and shift into P (Park).

When the vehicle is stopped, press For to turn off the vehicle. The vehicle will shift to P (Park) automatically unless the vehicle is in N (Neutral). See "Car Wash Mode" later in this section.

If  $\bigcap_{\Gamma \in \Gamma}$  is pressed while at a relatively high speed, instructions will display on the Driver Information Center (DIC) to confirm that vehicle off mode is desired. Once confirmed, the vehicle will turn off and automatically shift to N (Neutral). When the vehicle is stopped, P (Park) can be selected.

If the vehicle must be left with the propulsion system on, be sure that the vehicle is in P (Park) with the EPB set, before leaving the vehicle. After pressing the P (Park) button, hold down the regular brake pedal. If you cannot see the

P (Park) indicator in the instrument cluster, it means that the vehicle has not shifted to P (Park).

### Service Shift Lever Message

If the message SERVICE SHIFTER SEE OWNER'S MANUAL appears in the Driver Information Center (DIC), the shifter needs service. Have the vehicle serviced as soon as possible. If the vehicle is automatically shifting into P (Park), check to see if the P (Park) button is stuck. To operate the vehicle, hold the shift lever in the desired gear, R (Reverse) or D (Drive), until vehicle speeds exceed 16 km/h (10 mph), then release the shift lever.

R: Use this gear to back up.

If the vehicle is shifted from either R (Reverse) to D (Drive) or D (Drive) to R (Reverse) while the speed is too high, the vehicle may shift to N (Neutral). Reduce the vehicle speed and try the shift again.

To shift into R (Reverse):

- 1. Bring the vehicle to a complete stop.
- From the center position, move the shift lever rearward toward you, and then up. The R indicator will illuminate red.

3. After releasing the shift lever, it will return to the center position.

To shift out of R (Reverse):

- 1. Bring the vehicle to a complete stop.
- 2. Shift to the desired gear.
- 3. After releasing the shift lever, it will return to the center position.

At low vehicle speeds, R (Reverse) can be used to rock the vehicle back and forth to get out of snow, ice, or sand without damaging the electric drive unit. See *If the Vehicle Is Stuck* 

⇒ 181.

N: In this position, the propulsion system is inactive. If the vehicle is moving and turned off, restart the propulsion system in N (Neutral) only.

#### Caution

The vehicle is not designed to stay in N (Neutral) for extended periods of time. It will automatically shift into P (Park).

To shift into N (Neutral):

 Move the shift lever rearward toward the driver.

- If the vehicle is in P (Park), apply the brake pedal while moving the shift lever rearward.
- The N indicator will illuminate red.
- 2. After releasing the shift lever, it will return to the center position.

To shift out of N (Neutral):

- 1. Bring the vehicle to a complete stop.
- 2. Hold the brake pedal down
- 3. Shift into the desired gear.

If the brake pedal is not applied, the vehicle may remain in N (Neutral).

#### Car Wash Mode

This vehicle includes a Car Wash Mode that allows the vehicle to remain in N (Neutral) for use in automatic car washes.

The vehicle was neither designed nor intended to be towed with any of its wheels on the ground. If your vehicle is disabled and needs to be towed, see *Transporting a Disabled Vehicle* 

⇒ 336.

#### Caution

The vehicle is not designed to stay in N (Neutral) for extended periods of time. It will automatically shift into P (Park).

#### Car Wash Mode (Vehicle Off) – Driver In Vehicle

To place the vehicle in N (Neutral) with the vehicle off and occupied:

- 1. Drive to the entrance of the car wash.
- 2. Apply the brake pedal.
- 3. Shift to N (Neutral).
- 4. Turn off the vehicle and release the brake pedal.
- 5. The indicator should continue to show N. If it does not, repeat Steps 2–4.
- 6. The vehicle is now ready for the car wash.

# Car Wash Mode (Vehicle Off) – Driver Out of Vehicle

To place the vehicle in N (Neutral) with the vehicle off and unoccupied:

- 1. Drive to the entrance of the car wash.
- 2. Apply the brake pedal.

- 3. Open the door.
- 4. Shift to N (Neutral).
- 5. Turn off the vehicle and release the brake pedal.
- 6. The indicator should continue to show N. If it does not, repeat Steps 2–5.
- 7. Exit the vehicle and close the door. The vehicle is now ready for the car wash.
- 8. The vehicle may automatically shift into P (Park) upon reentry.

#### Car Wash Mode (Vehicle On) - Driver In Vehicle

To place the vehicle in N (Neutral) with the vehicle on and occupied:

- 1. Drive to the entrance of the car wash.
- 2. Apply the brake pedal.
- 3. Shift to N (Neutral).
- 4. Release the brake pedal. The vehicle is now ready for the car wash.

## Car Wash Mode (Vehicle On) – Driver Out of Vehicle

To place the vehicle in N (Neutral) with the vehicle on and unoccupied:

1. Drive to the entrance of the car wash.

- 2. Apply the brake pedal.
- 3. Open the door.
- 4. Shift to N (Neutral), then release the brake pedal.
- 5. The indicator should continue to show N. If it does not, repeat Steps 2–4.
- 6. Exit the vehicle and close the door. The vehicle is now ready for the car wash.
- 7. The vehicle may automatically shift into P (Park) upon reentry.

**D:** This position is for normal driving. If more power is needed for passing, press the accelerator pedal down.

#### Caution

Spinning the tires excessively may damage the electric drive unit. The repair will not be covered by the vehicle warranty. If you are stuck, do not spin the tires.

To shift into D (Drive):

- 1. Bring the vehicle to a complete stop.
- 2. From the center position, move the shift lever rearward toward you and then down.

- If the vehicle is in P (Park), press the brake pedal while moving the shift lever.
- The D indicator will illuminate red.
- 3. After releasing the shift lever, it will return to the center position.

To shift out of D (Drive):

- 1. Bring the vehicle to a complete stop.
- 2. Shift to the desired gear.

When stopping on a steep hill, use the brakes to hold the vehicle in place.

When shifting to P (Park) on a hill, use the brakes to hold the vehicle then shift to P (Park).

### **One-Pedal Driving**

One-Pedal Driving allows you use the accelerator pedal to decelerate to a complete stop. Completely releasing the accelerator pedal will result in aggressive deceleration. Partially lifting off the accelerator pedal allows the deceleration of the vehicle to be adjusted as desired.

Use the brake pedal if emergency braking is required.

Select Controls > See More Controls > Drive & Park > One-Pedal Driving to view and configure One-Pedal Driving settings from the infotainment display home screen.

- Select Off to disable One-Pedal Driving for traditional two-pedal driving, similar to a gasoline vehicle.
- Select Normal to enable One-Pedal Driving where a moderate level of braking is applied when the accelerator pedal is released while driving.
- Select High to enable One-Pedal Driving where a strong level of braking is applied when the accelerator pedal is released while driving.

When enabled, One-Pedal Driving applies in D (Drive). The vehicle will remain in One-Pedal Driving mode, including through vehicle off and on power cycles, until manually disabled by the driver. Press the accelerator pedal to the desired speed. The brake lights will come on during substantial deceleration and when the vehicle is stopped.

If One-Pedal Driving is turned off while stopped, the vehicle will stay stopped. Press the accelerator pedal to return to twopedal driving.

For faster access, select One-Pedal Driving in the Drive Mode app or the controls tray. If equipped, enable the controls button in the One-Pedal Driving menu to change the setting.

Touch so to toggle One-Pedal Driving on or off. When turned on, One-Pedal Driving returns to the previously selected setting. To change the setting, press the Settings link in the popup box to go to the full One-Pedal Driving selection.

When possible, One-Pedal Driving uses regenerative braking to slow the vehicle for energy efficiency. Friction brakes may be used in some cases when regenerative braking is reduced. Friction brakes will be used to hold the vehicle after coming to a stop, and a noise may be noticed when the brakes apply.

When driving on slippery roads, it is recommended to turn off One-Pedal Driving for maximum vehicle stability. See *Winter Driving* 

→ 180.

One-Pedal Driving is a useful feature when towing a trailer, however, using the brake pedal may be required to slow down and hold the vehicle with large loads or steep hills. Trailer brake lights will be functional during substantial deceleration or when the vehicle is stopped. See *General Towing Information* 

⇒ 268.

While using One-Pedal Driving, the Electric Parking Brake may apply in some circumstances. This can occur when:

- The driver exits the vehicle.
- The vehicle has remained stationary for five minutes.

To resume driving, press the accelerator pedal, and the parking brake will automatically disengage.

# Drive Systems Four-Wheel Drive

This vehicle is equipped with advanced electric four-wheel drive (e4WD). The e4WD system delivers power to all four wheels, and the system adjusts automatically to the driving conditions. The e4WD system continuously varies the drive power to the front and rear wheels to maximize driving efficiency and improve driving dynamics. Your vehicle has exceptional driving capability, but care must always be taken to adjust driving style to the traffic and road conditions.

### **Torque Vectoring**

If equipped, the torque vectoring feature of e4WD enhances vehicle performance by focusing the vehicle torque to the optimal wheel(s).

The vehicle e4WD settings may be customized for the driver mode selected. See *Driver Mode Control* 

→ 197 for more information.

### **Brakes**

### **Electric Brake Boost**

Vehicles equipped with electric brake boost have hydraulic brake circuits that are electronically controlled when the brake pedal is applied during normal operation. The system performs routine tests and turns off within a few minutes after the vehicle is turned off. Noise may be heard during this time. If the brake pedal is pressed during the tests or when the electric brake boost system is off, a noticeable change in pedal force and travel may be felt. This is normal.

### **Antilock Brake System (ABS)**

The Antilock Brake System (ABS) helps to prevent skidding and maintain steering control during hard breaking.



If there is a problem, the Antilock Brake System (ABS) warning light stays on. See *Brake System Warning Light* \$\to\$ 110.

### **Using Antilock Brakes**

Do not pump the brakes. Just hold the brake pedal down firmly. It is normal to hear and feel the Antilock Brake System (ABS) operating.

### **Braking in Emergencies**

The Antilock Brake System (ABS) does not always decrease stopping distance. If a vehicle suddenly slows or stops, there may not be enough time to apply the brakes. Always allow enough following distance between your vehicle and the vehicle ahead.

The Antilock Brake System (ABS) allows you to steer and brake at the same time. In many emergencies, steering to make an evasive maneuver can be more effective than braking.

### **Electric Parking Brake**



The Electric Parking Brake (EPB) can always be applied, even if the vehicle is off. In case of insufficient electrical power, the EPB cannot be applied or released. To prevent draining the battery, avoid unnecessary repeated cycles of the EPB.

The system has a red parking brake status light and an amber service parking brake warning light. See *Electric Parking Brake Light* ♀ 111

and Service Electric Parking Brake Light ▷ 111. There are also parking brake-related Driver Information Center (DIC) messages.

Before leaving the vehicle, check the red parking brake status light to ensure that the parking brake is applied.

### **EPB Apply**

#### Caution

Driving with the parking brake on can overheat the brake system and cause premature wear or damage to brake system parts. Make sure that the parking brake is fully released and the brake warning light is off before driving.

#### To apply the EPB:

- 1. Be sure the vehicle is at a complete stop.
- 2. Press the EPB switch momentarily.

The red parking brake status light will flash and then stay on once the EPB is fully applied. If the red parking brake status light flashes continuously, then the EPB is only partially applied or there is a problem with the EPB. A DIC message will display. Release the EPB and try

to apply it again. If the light does not come on, or keeps flashing, have the vehicle serviced. Do not drive the vehicle if the red parking brake status light is flashing, see your dealer.

If the amber service parking brake warning light is on, press the EPB switch. Continue to hold the switch until the red parking brake status light remains on. If the amber service parking brake warning light is on, see uour dealer.

If the EPB is applied while the vehicle is moving, the vehicle will decelerate as long as the switch is pressed. If the switch is pressed until the vehicle comes to a stop, the EPB will remain applied.

The vehicle may automatically apply the EPB in some situations when the vehicle is not moving. This is normal, and is done to periodically check the correct operation of the EPB system, or at the request of other safety functions that utilize the FPB.

If the EPB fails to apply, block the rear wheels to prevent vehicle movement.

#### **EPB Release**

To release the EPB:

1. Turn the vehicle on.

- 2. Apply and hold the brake pedal.
- 3. Press the EPB switch momentarilu.

The EPB is released when the red parking brake status light is off.

If the amber service parking brake warning light is on, release the EPB by pressing and holding the EPB switch. Continue to hold the switch until the red parking brake status light is off. If either light stays on after release is attempted, see your dealer.

#### **Automatic EPB Release**

The EPB will automatically release if the vehicle is running, placed into gear, and an attempt is made to drive away. Avoid rapid acceleration when the EPB is applied, to preserve parking brake lining life.

### **Brake Assist**

Brake Assist detects rapid brake pedal applications due to emergency braking situations. It also provides additional braking to activate the Antilock Brake System if the brake pedal is not applied hard enough to activate it normally. Minor noise, brake pedal pulsation, and/or pedal movement during this time may occur. Continue to apply the brake pedal as the driving situation dictates. Brake Assist disengages when the brake pedal is released.

### Hill Start Assist (HSA)



### ⚠ Warning

Do not rely on the HSA feature. HSA does not replace the need to pay attention and drive safely. You may not hear or feel alerts or warnings provided by this system. Failure to use proper care when driving may result in injury, death, or vehicle damage. See Defensive Drivina \$\sime\$ 172.

When the vehicle is stopped on a grade, Hill Start Assist (HSA) prevents the vehicle from rolling in an unintended direction during the transition from brake pedal release to accelerator pedal apply. The brakes release when the accelerator pedal is applied. The brakes may also release under other conditions. Do not rely on HSA to hold the vehicle.

HSA is available when the vehicle is facing uphill in a forward gear, or when facing downhill in R (Reverse). The vehicle must come to a complete stop on a grade for HSA to activate.

### **Regenerative Braking**

### **⚠** Warning


Do not charge your vehicle's battery above an 80% charge if you are going to drive down long, steep grades such as mountain passes. This provides room in the battery for regenerative braking to supplement your conventional brakes during the descent. This is especially important when towing a trailer, which puts additional stress on your vehicle's braking system.

Regenerative braking takes some of the energy from the moving vehicle and turns it back into electrical energy. This energy is then stored back into the high voltage battery system, contributing to increased energy efficiency.

Regenerative power may be limited when the battery is near full charge or cold. See "Regenerative Power Limited" under Power Indicator Gauge \$\Display\$ 106. Regenerative braking supplements your vehicle's conventional brakes, especially when going downhill. See Hill and Mountain Roads \$\Display\$ 179.

The brake system uses regenerative braking, conventional hydraulic braking, or a combination of both as appropriate.

### Regen on Demand

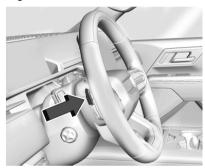

If equipped, Regen on Demand increases deceleration by pressing and holding the steering wheel paddle. Regen on Demand works in D (Drive). The accelerator pedal can be used to manage deceleration while using Regen on Demand. See One-Pedal Driving ❖ 191.

If the Regen on Demand is activated continuously during a power cycle, Regen on Demand increases deceleration after each use.

If the vehicle is brought to a complete stop while the Regen on Demand paddle is held, the vehicle will not creep forward when the paddle is released. The accelerator pedal must be pressed to move the vehicle forward.

If the vehicle is on a steep grade, the brake pedal must be used to hold the vehicle.

When available regenerative braking power is limited, the hydraulic brakes may be applied to make up the difference.

Cruise control will turn off and the brake lights may come on when this feature is activated.

Avoid using Regen on Demand under slippery road conditions. Use the brake pedal as the primary braking device.

# Ride Control Systems Traction Control/Electronic Stability Control

This vehicle has a Traction Control System (TCS) and StabiliTrak/Electronic Stability Control (ESC) system. These systems help limit wheel spin and assist the driver in maintaining control, especially on slippery road conditions. Both systems turn on automatically when the vehicle is started and begins to move.

The Traction Control System activates if any of the drive wheels are spinning and beginning to lose traction. If this happens, the traction system reduces power and applies the brakes to limit wheel spin. StabiliTrak/Electronic Stability Control activates when the vehicle senses a difference between the intended path and the direction the vehicle is actually traveling. StabiliTrak/Electronic Stability Control selectively applies braking pressure to any one of the vehicle wheel brakes to assist the driver in keeping the vehicle on the intended path.

The systems may be heard or felt while they are operating or while performing diagnostic checks. This is normal and does not mean there is a problem with the vehicle.

It is recommended to leave both systems on for normal driving conditions, but it may be necessary to turn the Traction Control System off if the vehicle gets stuck in sand, mud, ice, or snow. See *If the Vehicle Is Stuck* ▷ 181 and "Turning the Systems Off and On" later in this section

Trailer Sway Control is also on automatically when the vehicle is started. See *Trailer Sway Control (TSC)* ⇒ 285.

If cruise control is engaged and the Traction Control System or StabiliTrak/Electronic Stability Control begins to limit wheel spin, cruise control will disengage. Cruise control may be turned back on when road conditions allow.



The indicator light for both systems is in the instrument cluster. This light will:

- Flash when the Traction Control System is limiting wheel spin.
- Flash when StabiliTrak/Electronic Stability Control is activated.
- Turn on and stay on when either system is not working.

See Traction Control System (TCS)/Electronic Stability Control Light 

↑ 113.

If either system fails to turn on or to activate, a message displays in the Driver Information Center. The vehicle is safe to drive, but adjust driving accordingly.

- 1. Stop the vehicle.
- 2. Turn the vehicle off and wait 15 seconds.
- 3. Start the vehicle.
- 4. Drive the vehicle.

If hrackarrow
hracka

### Turning the Systems Off and On

#### Caution

Do not repeatedly brake or accelerate heavily when TCS is off. The vehicle driveline could be damaged.

To turn the Traction Control System on and off, in the controls app on the infotainment home screen, select Controls > See More Controls > Drive & Park > Traction Control. To turn StabiliTrak/ESC on or off, select → next to the Traction Control menu. The following options appear:

- Traction Control Off
- StabiliTrak/ESC Off and Traction Control Off
- StabiliTrak/ESC On and Traction Control On

The Traction Off light 🙆 displays in the instrument cluster when the traction control is turned off. When the traction control is turned

back on, the Traction Off light ☑ displayed in the instrument cluster will turn off. See Traction Off Light ➡ 113.

If the Traction Control System is actively limiting wheel spin when disabled, the system will not turn off until the wheels stop spinning. To turn StabiliTrak/Electronic stability control off, select > next to the Traction Control menu. Select the StabiliTrak/ESC Off and Traction Control Off option. The StabiliTrak/ Electronic Stability Control Off light will display in the instrument cluster. See Electronic Stability Control (ESC) Off Light > 114.

The Traction Control System cannot be engaged when StabiliTrak//Electronic Stability Control is off.

StabiliTrak//Electronic Stability Control automatically engages if the vehicle exceeds 56 km/h (35 mph) and cannot be turned off again until speed is reduced to under 56 km/h (35 mph). Traction control will remain off.

Entering Teen Driver will automatically enable both systems and prevent these safety features from being turned off. See *Teen Driver* 

⇒ 159.

### **Driver Mode Control**

Driver Mode Control allows the driver to adjust the overall driving experience by selecting different modes. Driver Mode Control has the following modes: Normal, Off Road, Tow/Haul, Max Power, and a customizable mode: My Mode. Driver mode availability and affected vehicle subsystems are dependent upon trim level, region, and optional features.

If the vehicle is in Normal mode or My Mode it will stay in that mode through future on/off cycles. If the vehicle is in Off Road mode, it will return to Normal mode when the vehicle is restarted. When each mode is selected, a unique and persistent indicator is displayed in the instrument cluster.

### **Mode Activation**

To activate each mode, open the Drive Modes app on the infotainment home screen. Activate each mode by selecting the mode icon.

### **Mode Descriptions**

**Normal Mode:** Use for normal city and highway driving to provide a smooth ride. This setting provides balance between comfort and handling. There is no persistent indicator in the instrument cluster for this mode.

Off Road Mode: Use this mode for off-road recreational driving. Off Road mode should be used to improve driving at moderate speeds, on grass, gravel, dirt, unpaved roads, or snow-covered roads. The accelerator pedal is tuned for off road use. If equipped, this mode also modifies steering, suspension, active rear steer, electric Four-Wheel Drive (e4WD), EVSE, Automatic Brake System (ABS), StabiliTrak/Electronic Stability Control (ESC), and Traction Control System (TCS) performance.

For more information on off-road driving, see *Off-Road Driving* ❖ 174.

Tow/Haul Mode: Use this mode when hauling heavy loads to provide increased performance and vehicle control. Tow/Haul mode adjusts the pedal map, steering, active rear steer, suspension, and TSC performance.

If equipped with a Work Truck, the Tow/Haul mode may be operated through a button on the center stack. Press — to activate Tow/Haul mode.

If the vehicle is turned off with Tow/Haul mode active and then restarted within four hours or less, Tow/Haul mode will remain active. Otherwise, the vehicle will start in Normal mode.

For more information on Tow/Haul mode, see Towing Equipment 

276.

Max Power Mode: Use this mode for short durations. It is not intended for daily use. Max Power mode provides maximum propulsion. Engaging Max Power mode will not change the currently active drive mode but will provide additional propulsion torque for maximum acceleration.

Max Power mode will not function when the vehicle battery is low. Remaining in this mode will reduce the range of the vehicle.

Max Power mode adjusts the acceleration pedal map.

My Mode: Use this mode to personalize everyday driving. This mode allows the driver to configure the vehicle subsystem settings to their driving preferences. My Mode remains active across on/off cycles.

Through the infotainment display, the following vehicle subsystems may be available for customization in this mode:

Acceleration Feel: Relaxed, Normal, Adrenaline

**Steering:** Tour, Normal, Sport **Suspension:** Tour, Normal, Sport **Motor Sound:** Off, Normal, Sport

For a more detailed description of each selectable option, refer to "Drive Mode Customization"

#### **Drive Mode Customization**

The vehicle is equipped to modify the following settings based on vehicle content. Through the infotainment home screen, select Settings > Vehicle > Drive Mode Customization to personalize My Mode. These settings will be retained over each on/off cycle, and do not have to be reset each time the vehicle is started.

**Acceleration Feel:** Choose how responsive you want acceleration to feel. You can adjust the accelerator pedall to provide increased power.

**Steering:** Choose how responsive you want the steering to feel. You can set the steering wheel to provide more feedback, which requires more steering effort.

**Suspension:** Choose how responsive you want the suspension to feel. You can make the suspension stiffer or more comfortable.

Motor Sound: Customize how your vehicle sounds when you are accelerating. Your electric motor remains quiet outside but the sound you hear inside changes as you drive faster or slower

### Four-Wheel Steering

If equipped, this feature steers the vehicle with all four wheels, which reduces the vehicle turn diameter and improves maneuverability of the vehicle.

The four-wheel steering feature has three modes: Automatic, CrabWalk, and Off.

**Automatic Mode:** Engages when the vehicle is turned on for everyday driving in all weather conditions. Automatic mode is the default, preferred mode and can be selected at any time.

At slower speeds, the front and rear wheels turn in opposite directions. This helps the vehicle make tighter turns, such as during parking, cornering, and turning into tight spaces. At higher speeds, the front and rear wheels turn in the same direction. This improves stability of the vehicle during lane changes and wide turns.

If the Automatic mode is selected when the vehicle is in the process of turning, the mode will not engage until the turn is complete.

**CrabWalk Mode:** Allows the driver to turn the rear wheels at the same angle as the front wheels enabling the vehicle to move diagonally.

**Off Mode:** Disengages the four-wheel steering feature. The vehicle is steered with the front wheels and the rear wheels are in the forward position.

When the vehicle is turned off, the rear steering angle automatically returns to the forward position.

When the vehicle is stationary, the maximum rear steering angle may not be available until the vehicle begins to move.

Four-wheel steering is not operational when Super Cruise is active. See Super Cruise ⇒ 214.

Maximum vehicle speed may be limited if the four-wheel steering system becomes inoperable.

When towing a trailer, the four-wheel steering provides enhanced stability allowing the trailer to follow the path of the tow vehicle more closely, especially during lane changes. See *General Towing Information* ▷ 268 for more information on towing a trailer.

#### **Driver Notification**

To access four-wheel steering from the infotainment home screen, select Controls & Safety > Rear Steering or Crabwalk.

If CrabWalk mode or Off mode is activated, an icon on the Driver Information Center turns on and stays on. If the Automatic mode is activated, no icon will display.

The following icons display depending on the mode activated:





#### CrabWalk Mode

Off Mode

The following three second pop-up messages display on the Driver Information Center when the four-wheel steering mode changes:

- Rear Wheel Steering AUTO
- Rear Wheel Steering CRABWALK
- Rear Wheel Steering OFF

#### **How to Enter Automatic Mode**

- Automatic mode is the default four-wheel steering mode at vehicle key-up.
- To access Automatic mode while in Off mode or CrabWalk mode, from the infotainment home screen, select Controls & Safety > Rear Steering.

When in Automatic mode, the Rear Steering button highlights.

### Steering Behavior in Automatic Mode

- Four-wheel steering is based on front steering angle.
  - At lower vehicle speeds, the rear wheels steer opposite of the front wheels to improve turning radius.
  - At higher vehicle speeds, the rear wheels steer in same direction as the front wheels to improve handling stability.
- The exact relationship of front to rear angle is dependent on the currently selected Driver Mode Control mode.

#### **How to Enter CrabWalk Mode**

The following vehicle conditions must be true to enter CrabWalk mode:

- The vehicle speed is less than 2 km/h (1.2 mph)
- The steering wheel is not in motion
- CrabWalk mode cannot be engaged while Super Cruise is active

From the infotainment home screen, press Controls & Safety > CrabWalk > CrabWalk confirmation.

- The CrabWalk icon displays in the gauge cluster.
- A message displays when CrabWalk mode is active.
- When in CrabWalk mode, the CrabWalk button highlights.

#### How to Exit CrabWalk Mode

- On the infotainment home screen, press Controls & Safety > Rear Steering > CrabWalk or Rear Steering button.
- Press the CrabWalk smart control icon in the infotainment display.
- If the vehicle speed reaches higher than about 40 kmh (25 mph) for more than 10 seconds, the vehicle will automatically exit CrabWalk mode and turn on Automatic mode.

#### CrabWalk Mode Steering Behavior

- Rear wheels steer in the same direction as front wheels at lower vehicle speeds
- Maximum rear steering angle in CrabWalk mode is dependent on the vehicle variant
- Intended to improve maneuverability for specific off-road situations

### **How to Enter Off Mode**

To enter Off mode, the vehicle speed must be less than 2 km/h (1.2 mph).

To access Off mode while in Automatic mode, on the infotainment home screen, select Controls & Safety > Rear Steering. When in Off mode, the Rear Steering button unhighlights.

#### How to Exit Off Mode

To access Automatic mode while in Off mode, from the infotainment screen, select Controls & Safety > Rear Steering.

#### Steering Behavior in Off Mode

Four-wheel steering is disengaged with rear wheels set to forward position.

# Four-Wheel Steering Behavior at 0 KM/H (0 MPH)

The rear wheels may not steer to full travel when the vehicle is stationary. Additional travel may be achieved once the vehicle begins to move.

Take care to ensure the vehicle path is clear of obstacles if the rear tires steer once the vehicle is moving.

### **Air Suspension**

If equipped, the Air Suspension feature provides full time load leveling capability along with the benefit of adjusting ride height for increased convenience and capability.

### **⚠** Warning

To help avoid personal injury or death, make sure the area underneath the vehicle and inside the wheel wells is clear when lowering the vehicle.

### ⚠ Warning

To help avoid personal injury or death, always select the lowest ride height for the current driving conditions. Higher ride heights raise the vehicle's center of gravity, increasing the chance of a rollover during extreme maneuvers.

### **⚠** Warning

Heavy loads on the roof rack will make the vehicle's center of gravity higher, increasing the possibility of a rollover. To avoid losing control of the vehicle, always select the normal height setting and avoid high speeds, sudden starts, sharp turns, sudden braking, or abrupt maneuvers when carrying cargo on the roof rack.

### **Changing Ride Height**

The Ride Height button is on the instrument panel to the left of the steering wheel. See Instrument Panel Overview 

4.



Press either "Up" or "Down" Ride Height button to open the Ride Height menu. Select the desired ride height from the available options. After a brief pause, available selections finalize, and unavailable ride heights appear greyed out.

Select the desired ride height option:

- 1. Entry/Exit
- 2. Normal
- 3. Increased
- 4. Maximum

### **Ride Height Descriptions**

### Entry/Exit

Entry/Exit height is the lowest height option. This ride height lowers the vehicle 50 mm (2 in) for easy entry and exit, and loading and unloading of cargo.

This ride height can be selected in the Ride Height menu at any vehicle speed, but will not lower until the vehicle slows to less than 12 km/h (7 mph).

The vehicle automatically raises to Normal height from Entry/Exit height when the vehicle speed exceeds 8 km/h (5 mph) after doors have been closed. If no door has been opened after lowering to Entry/Exit height, the vehicle will return to Normal height at 29 km/h (18 mph) to give the driver more flexibility when lowering to Entry/Exit height for passenger pick up and drop off.

The driver can enable Easy Exit Vehicle Height mode to automatically lower to Entry/Exit Height when the vehicle is shifted to P (Park). From the infotainment home screen select Settings > Vehicle > Ride Height > Easy Exit Vehicle Height. When the vehicle is higher than Normal height, is in Tow/Haul mode, Off-Road mode, or senses a trailer is connected, Easy Exit Vehicle Height mode is disabled.

#### **Aerodynamic**

Aerodynamic height is 15 mm (0.5 in) lower than Normal height. The vehicle automatically lowers to Aerodynamic height when the vehicle speed exceeds 105 km/h (65 mph) to improve aerodynamics. This is not a selectable option on the Ride Height menu.

The vehicle will raise to Normal height when the vehicle speed slows to less than 48 km/h (30 mph).

Aerodynamic height is automatically disabled when a trailer is connected to the vehicle, Tow/Haul mode is active, or the vehicle is at Increased or Maximum height.

#### Normal

Normal height is the standard vehicle height used for everyday driving.

#### Increased

Increased height is 25 mm (1 in) higher than Normal height. This ride height raises the vehicle for off-road use. Increased height can be selected in the Ride Height menu while the vehicle speed is less than 80 km/h (50 mph). If the vehicle exceeds 80 km/h (50 mph), the vehicle will lower to Normal height.

#### Maximum

Maximum height is 50 mm (2 in) higher than Normal height. This ride height raises the vehicle for off-road use and maximum ground clearance. Maximum height can be selected in the Ride Height Menu while the vehicle speed is less than 48 km/h (30 mph). If the vehicle exceeds 48 km/h (30 mph) the vehicle will lower to Increased height.

#### **Low Rider**

#### Caution

To help avoid damage to the vehicle, stay clear of obstacles such as speed bumps, curbs, and rough road/uneven terrain while (Continued)

### **Caution (Continued)**

in Low Rider height. Continue to use caution until vehicle returns to Normal ride height or higher.

Low Rider height is 80 mm (3 in) lower than Normal height for low speed driving or parking aesthetics.

Low Rider height must be commanded by the driver by holding the down ride height button for 3 to 10 seconds while the vehicle is stationary.

To exit Low Rider height manually, select a new ride height or change driver modes. See *Driver Mode Control* ❖ 197. If the vehicle speed exceeds 48 km/h (30 mph), or if high acceleration is detected, the vehicle will automatically raise to Normal height.

### **Suspension Modes**

The air suspension has two modes, Service mode and Alignment mode.

#### Service Mode

Service mode will disable all air suspension operation including raising and lowering the vehicle and operation of the air compressor. This mode is useful when the vehicle is being towed on a flat bed or when any work under the vehicle is being performed.

To access Service mode from the infotainment home screen, select Settings > Vehicle > Suspension > Service Mode > On or Off.

Service mode is recommended when the vehicle is put on a hoist or a floor jack is used to raise a corner. Service mode automatically disables when the vehicle speed exceeds 32 km/h (20 mph).

### **Alignment Mode**

Alignment mode will optimize the vehicle height to provide the most accurate wheel alignment. This mode should be enabled once the vehicle is driven onto the alignment station.

To enable Alignment mode, ensure the vehicle is at Normal Height and shift the vehicle to N (Neutral).

To access Alignment mode from the infotainment home screen, select Settings > Vehicle > Suspension > Alignment Mode > On or Off.

Alignment mode automatically disables when the vehicle speed exceeds 16 km/h (10 mph).

# Air Suspension Operation with Door(s) or Hood Open

The air suspension will temporarily suspend all height changes while the hood or any door is open.

An open tailgate does not suspend the air suspension operation.

#### **System Over-Temperature**

If the air suspension is under heavy use, the system may temporarily suspend all height changes to allow the compressor to cool down. When this occurs and a height change is requested, the message LEVELING SYSTEM UNAVAILABLE will display in the instrument cluster.

### **Excessive Vehicle Loading**

If the air suspension detects excessive vehicle loading, it will not raise above Normal height.

#### **Air Suspension Service**

If a SERVICE LEVELING SYSTEM message displays in the instrument cluster, see your authorized dealer immediately.

### Cruise Control Adaptive Cruise Control (Advanced)

If equipped, Adaptive Cruise Control (ACC) allows you to choose the cruise control set speed and the following gap. Read this entire section before using this system. The following gap is the following time (or distance) between your vehicle and a vehicle detected directly ahead in your path, moving in the same direction. If no vehicle is detected in your path, ACC works like regular cruise control. ACC uses a camera and radar sensor(s) to detect other vehicles

If a vehicle is detected in your path, ACC can apply acceleration or limited, moderate braking to maintain the selected following gap. To disengage ACC, apply the brake pedal or press . If ACC is controlling the vehicle speed when the Traction Control System (TCS) or StabiliTrak/Electronic Stability Control (ESC)

Disabling the TCS or StabiliTrak/ESC system will disengage ACC and prevent ACC from being re-engaged while TCS or StabiliTrak/ESC is disabled.

ACC can reduce the need for you to frequently brake and accelerate, especially when used on expressways, freeways, and interstate highways. When used on other roads, you may need to take over the control of braking or acceleration more often.

### **⚠** Warning

ACC has limited braking ability and may not have time to slow the vehicle down enough to avoid a collision with another vehicle you are following. This can occur when vehicles suddenly slow or stop ahead, or enter your lane. Also see "Alerting the Driver" later in this section. Complete attention is always required while driving and you should be ready to take action and apply the brakes. See Defensive Driving \$\infty\$ 172.

### 

ACC will not detect or brake for children, pedestrians, animals, or other objects.

Do not use ACC when:

- On winding and hilly roads or when the sensors are blocked by snow, ice, or dirt.
   The system may not detect a vehicle ahead. Keep the entire front of the vehicle clean.
- Visibility is poor due to rain, snow, fog, dirt, insect residue, or dust; when other foreign objects obscure the camera and/or radar; or when the vehicle in front or oncoming traffic causes additional environmental obstructions, such as road spray. ACC performance is limited under these conditions.
- On slippery roads where fast changes in tire traction can cause excessive wheel slip.



- : Press to turn the system on or off. The indicator turns white on the instrument cluster when ACC is turned on.
- **+RES:** If ACC is already activated, press the thumbwheel up briefly to resume the previous set speed or to increase the set speed. See "Increasing Speed While ACC is at a Set Speed" later in this section.
- **-SET:** If ACC is already activated, briefly press the thumbwheel down to –SET to set the ACC cruise speed or to decrease the set speed. See "Reducing Speed While ACC Is at a Set Speed" later in this section.

Eress to disengage ACC without erasing the selected set speed. Press and hold to switch between ACC and regular cruise control. See "Switching Between ACC and Regular Cruise Control" later in this section.

: Press the thumbwheel down to change the ACC following gap setting. Available settings are: Far, Medium, or Near.

The speedometer reading can be displayed in either English or metric units. See *Settings*⇒ 157. The increment value used depends on the units displayed.

# Switching Between ACC and Regular Cruise Control

To switch between ACC and regular cruise control, press and hold ≅. A message is briefly displayed in the Driver Information Center (DIC). See *Vehicle Messages* ♀ 127.





**ACC Indicator** 

Regular Cruise Control Indicator

When ACC is the selected cruise control mode and is activated, a green ACC indicator light is displayed in the instrument cluster and the following gap is displayed. When regular cruise control is the selected cruise control mode and is activated, a green C cruise control indicator light is displayed in the instrument cluster, however the following gap is not displayed.

When the vehicle is turned on, the cruise control mode will be set to the last mode used before the vehicle was turned off.

### **⚠** Warning

Always check the cruise control indicator on the instrument cluster to determine which mode cruise control is in before using the feature. If ACC is not active, the vehicle will not automatically brake for other vehicles, which could cause a crash if the brakes are not applied manually. You and others could be seriously injured or killed.

### **Setting Adaptive Cruise Control**

If ACC is on but not engaged, the thumbwheel could be pressed to -SET or +RES and engage ACC when not desired. Keep ACC off when it is not being used. Press 😚 to turn off ACC.

The set speed is the vehicle speed when another vehicle is not detected in your path.

ACC cannot be set below the minimum allowable cruise speed. For vehicles that are not equipped with Super Cruise, the minimum allowable ACC cruise speed is 25 km/h (15 mph). For vehicles equipped with Super Cruise, the minimum allowable ACC cruise speed is 5 km/h (3 mph).

To set the ACC cruise speed while moving:

- 1. Press (5).
- 2. Accelerate to the desired speed.
- 3. Briefly press the thumbwheel down to –SET and release it.
- 4. Gently remove your foot from the accelerator pedal.

After the ACC cruise speed is set, ACC may immediately apply the brakes if it detects a vehicle ahead that is closer than the selected following gap.

The ACC cruise speed can be set while the vehicle is stopped if ACC is on and the brake pedal is applied.



The ACC indicator light is displayed in the instrument cluster and the Head-Up Display (HUD). When ACC is on but not engaged, the ACC indicator light is lit white. When ACC is on and is engaged, the ACC indicator light is lit green.

Always pay attention to the speed limit, surrounding traffic speeds, and weather conditions when selecting the set speed.

### Resuming a Set Speed

If ACC is engaged at a set speed and then the brakes are applied, ACC is disengaged without erasing the set speed from memory.

To resume ACC, briefly press the thumbwheel up to +RES and release it.

- If the vehicle is moving more than 5 km/h (3 mph), the vehicle accelerates to resume the previous set speed.
- If the vehicle is stopped with the brake pedal applied, briefly press and release the thumbwheel up to +RES and then release the brake pedal. ACC will hold the vehicle until +RES or the accelerator pedal is pressed.

When ACC is active, the set speed value and the ACC indicator light are displayed green in the instrument cluster. The vehicle ahead indicator may repeatedly flash if a vehicle ahead was present and then moved. See "Approaching and Following a Vehicle" later in this section.

If ACC is active, ACC will accelerate the vehicle to the set speed under the following conditions:

- There is no vehicle ahead.
- The vehicle ahead is beyond the selected following gap.
- The vehicle speed is not being limited because of a sharp turn.

### **Increasing Speed While ACC Is at a Set Speed**

If ACC is already activated, do one of the following:

- Use the accelerator pedal to reach the desired cruise speed. Briefly press and release the thumbwheel down to –SET and then release the accelerator pedal. The vehicle will now cruise at the higher speed.
   When the accelerator pedal is pressed, ACC will not brake because it is overridden.
   While ACC is overridden, the ACC indicator light will turn blue in the instrument cluster and in the HUD.
- Press and hold the thumbwheel up to +RES until the desired set speed is displayed, then release it.

- To increase the vehicle speed in smaller increments, briefly press and release the thumbwheel up to +RES. For each press, the vehicle speed increases by about 1 km/h (1 mph).
- To increase the vehicle speed in larger increments, press and hold the thumbwheel up to +RES, and then release it when the desired set speed is reached. While holding +RES, the vehicle speed increases to the next 5 km/h (5 mph) increment then continues to increase by 5 km/h (5 mph) increments until the thumbwheel is released.

The set speed can also be increased while the vehicle is stopped.

- If stopped and with the brake pedal applied, press the thumbwheel up to +RES until the desired set speed is displayed.
- If ACC is holding the vehicle at a stop and there is another vehicle directly ahead, pressing and holding the thumbwheel up to +RES will increase the set speed.
- Pressing +RES will automatically resume ACC when there is no longer a vehicle ahead or the vehicle ahead is pulling away and the brake pedal is not applied.

When the ACC system determines that there is no vehicle ahead, or the vehicle ahead is beyond the selected following gap, the vehicle will accelerate to resume the ACC set speed.

### Reducing Speed While ACC Is at a Set Speed

If ACC is already activated, do one of the following:

- Apply the brake pedal to reduce the vehicle speed to the desired lower cruise speed.
   When the desired cruise speed is reached, remove your foot from the brake pedal and briefly press the thumbwheel down to -SET. The vehicle will now cruise at the lower set speed.
- Press and hold the thumbwheel down to
   –SET until the desired lower cruise speed is reached, then release it.
- To decrease the vehicle speed in smaller increments, briefly press and release the thumbwheel down to –SET. For each press, the vehicle speed decreases by about 1 km/ h or (1 mph).
- To decrease the vehicle speed in larger increments, press and hold the thumbwheel down to –SET and then release it when the desired lower set speed is

reached. While holding the thumbwheel down to –SET, the vehicle speed decreases to the next 5 km/h (5 mph) increment, then continues to decrease by 5 km/h (5 mph) increments until the thumbwheel is released.


The set speed can also be decreased while the vehicle is stopped. When the vehicle is at a stop with the brake pedal applied, press or hold the thumbwheel down to –SET until the desired set speed is displayed, then release it.


### Selecting the Follow Distance Gap

When a slower moving vehicle is detected ahead and is within the selected following distance gap, ACC will adjust the vehicle's speed and attempt to maintain the selected following distance gap.

On the steering wheel, press the thumbwheel down to change the following gap setting. Available following gap settings are: Far, Medium, or Near.


When you press the humbwheel down, the current selected gap setting displays briefly on the instrument cluster. The selected gap setting is maintained until it is changed.

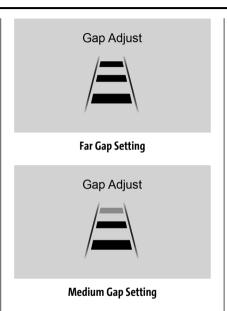

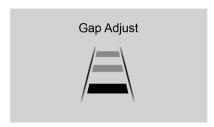


**Near Gap Setting** 

 If equipped, and a trailer is electrically connected, a trailer symbol is displayed near the gap setting symbol.

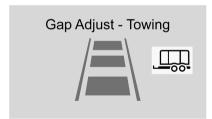


Far Gap Setting with Trailer

209

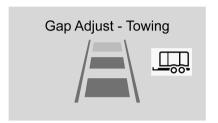

**Medium Gap Setting with Trailer** 

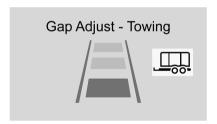

**Near Gap Setting with Trailer** 

Since each gap setting corresponds to a following time (Far, Medium, or Near), the following distance will vary based on vehicle speed. The faster the vehicle speed, the longer the following distance will be between your vehicle and the vehicle detected ahead. Consider traffic and weather conditions when

selecting the following gap. The range of selectable gaps may not be appropriate for all drivers and driving conditions.

Changing the gap setting automatically changes the alert timing sensitivity (Far, Medium, or Near) for the Forward Collision Alert (FCA) feature. See Forward Collision Alert (FCA) System 

242.

 
### **Courtesy Gap**

Press and hold the thumbwheel down when the vehicle is moving to temporarily increase the following distance gap with the vehicle ahead to allow for merging traffic.

Press and hold the thumbwheel down when stopped to cancel ACC from resuming automatically (if the stop is brief) and to remain stationary. This can be used to allow traffic to merge between you and the vehicle ahead. Press the speed control thumbwheel up to +RES or press the accelerator pedal to resume ACC.

The following distance gap will return to the original selection after hold.

### **Alerting the Driver**

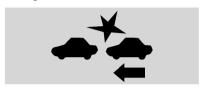

With Head-Up Display



Without Head-Up Display

If ACC is engaged, driver action may be required when ACC cannot apply sufficient braking because your vehicle is approaching a vehicle ahead too quickly.

When this condition occurs, the red collision alert symbol will flash on the windshield or on the HUD. Either eight beeps will sound from the front, or both sides of the Safety Alert Seat

will pulse five times. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

See Defensive Driving \$\simp\$ 172.

### Approaching and Following a Vehicle



The vehicle ahead indicator light is displayed in the instrument cluster and the HUD. It only displays when a vehicle is detected in your vehicle's path and is moving in the same direction. If the vehicle ahead indicator light does not appear in the instrument cluster, then ACC will not respond to, or brake for, vehicles ahead.

While ACC is active, ACC will automatically adjust your vehicle's speed to follow a detected vehicle ahead according to the selected following gap setting. ACC may decrease your vehicle's cruise speed when following a detected vehicle ahead that is traveling slower than your ACC set speed.

ACC may apply limited braking, if necessary. When ACC automatic braking is active, the brake lights will turn on. The automatic braking may feel or sound different than if the brakes were applied manually. This is normal.

### Passing a Vehicle While Using ACC

If the set speed is high enough, and the left turn signal is used to pass a vehicle ahead in the selected following gap, ACC may assist by gradually accelerating the vehicle prior to the lane change.

### **⚠** Warning

When using ACC to pass a vehicle or perform a lane change, the following distance to the vehicle being passed may be reduced. ACC may not apply sufficient acceleration or braking when passing a vehicle or performing a lane change. Always be ready to manually accelerate or brake to complete the pass or lane change.

### Stationary or Very Slow-Moving Objects



ACC may not detect and react to stopped or slow-moving vehicles ahead of you. For example, the system may not brake for a vehicle it has never detected moving. This can occur in stop-and-go traffic or when a vehicle suddenly appears due to a vehicle ahead changing lanes. Your vehicle may not stop and could cause a crash. Use caution when using ACC. Your complete attention is always required while driving and you should be ready to take action and apply the brakes.

### **Irregular Objects Affecting ACC**

ACC may have difficulty detecting the following objects:

- Vehicles with cargo extending from the back end.
- Non-standard shaped vehicles, such as vehicle transport, vehicles with a side car fitted, or horse carriages.
- Objects that are close to the front of your vehicle.

### **ACC Automatically Disengages**

ACC may automatically disengage and the driver will need to manually apply the brakes to slow the vehicle if:

- The sensors are blocked.
- The TCS or StabiliTrak/ESC system has activated or has been disabled.
- If equipped with Air Suspension, the vehicle ride height is outside normal operating range. See Air Suspension 

  ≥ 201.
- There is a fault in the system.
- The radar falsely reports a blockage when driving in a remote area with no other vehicles or roadside objects.

A DIC message may display to indicate that ACC is temporarily unavailable.

The ACC indicator light will turn white when ACC is disengaged.

In some cases, when ACC is temporarily unavailable, regular cruise control may be used. See "Switching Between ACC and Regular Cruise Control" previously in this section. Always consider driving conditions before using either cruise control mode.

#### **Notification to Resume ACC**

ACC will maintain a following gap distance behind a detected vehicle, and will slow down your vehicle to a stop behind that vehicle.

If the stopped vehicle ahead has driven away and ACC has not resumed, the vehicle ahead indicator will flash as a reminder to check traffic ahead before proceeding. In addition, the left and right sides of the Safety Alert Seat will pulse three times, or three beeps will sound. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems > Alert Type > Adaptive Cruise Go Notifier.

If equipped with Driver Attention System (DAS) located on top of the steering column, when the vehicle ahead drives away, and the DAS determines that the driver's attention is on the road ahead, ACC automatically resumes.

If necessary, briefly press and release the thumbwheel up to +RES or apply the accelerator pedal to resume ACC.

If stopped for more than two minutes, or if the driver door is opened and the driver seat belt is unbuckled, the ACC system automatically applies the Electric Parking Brake (EPB) to hold the vehicle. The EPB light will turn on. To release the EPB, press the accelerator pedal. See *Electric Parking Brake* ⇔ 193.

A DIC warning message may display indicating to shift to P (Park) before exiting the vehicle.

### ⚠ Warning

If ACC has stopped the vehicle, and if ACC is disengaged, turned off, or canceled, the vehicle will no longer be held at a stop. The vehicle can move. When ACC is holding the vehicle at a stop, always be prepared to manually apply the brakes.

### ⚠ Warning

Leaving the vehicle without placing it in P (Park) can be dangerous. Do not leave the vehicle while it is being held at a stop by ACC. Always place the vehicle in P (Park) and turn it off before leaving the vehicle.

#### **ACC Override**

If you apply the accelerator pedal while ACC is engaged, the ACC indicator light turns blue in the instrument cluster and the HUD indicating

that ACC braking will not occur. ACC will resume operation when the accelerator pedal is released.

### **⚠** Warning

The ACC will not automatically apply the brakes if your foot is resting on the accelerator pedal. You could crash into a vehicle ahead of you.

#### Curves in the Road

### **⚠** Warning

On curves, ACC may not detect a vehicle ahead in your lane. You could be startled if the vehicle accelerates up to the set speed, especially when following a vehicle exiting or entering exit ramps. You could lose control of the vehicle or crash. Do not use ACC while driving on an entrance or exit ramp. Always be ready to use the brakes if necessary.


### ⚠ Warning

On curves, ACC may respond to a vehicle in another lane, or may not have time to react to a vehicle in your lane. You could crash into a vehicle ahead of you, or lose control of your vehicle. Give extra attention in curves and be ready to use the brakes if necessary. Select an appropriate speed while driving in curves.


ACC may operate differently when the vehicle approaches a sharp curve in the road ahead. If the ACC system detects that a curve is too sharp, ACC may temporarily reduce the vehicle speed while navigating the curve.

The curve speed control indicator light may illuminate green when ACC is actively controlling the vehicle speed and detects a sharp curve in the road ahead.

ACC may automatically increase the vehicle speed when exiting out of the curve, however ACC will not exceed the set speed.

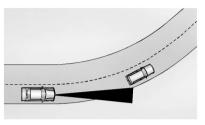

 When following a vehicle and entering a curve, ACC may not detect the vehicle ahead and accelerate to the set speed. When this happens, the vehicle ahead indicator will not appear.

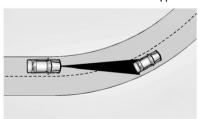


ACC may detect a vehicle that is not in your lane and apply the brakes.

ACC may occasionally provide an alert and/or braking that is considered unnecessary. It could respond to vehicles in different lanes

or stationary objects when entering or exiting a curve. This is normal operation. The vehicle does not need service.

#### **Other Vehicle Lane Changes**

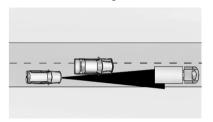

ACC will not detect a vehicle ahead until it is completely in the lane. You may need to manually apply the brakes.

#### **Objects Not Directly in Front of Your Vehicle**

The ACC system may not be able to detect all objects in front of the vehicle if:

- The vehicle or object ahead is not within your lane.
- The vehicle ahead is shifted, not centered, or is shifted to one side of the lane.

### **Driving in Narrow Lanes**

Vehicles in adjacent traffic lanes or roadside objects may be incorrectly detected when located along the roadway.

#### Do Not Use ACC on Hills



Do not use ACC when driving on steep hills. ACC will not detect a vehicle ahead.

### Towing with ACC

If equipped when towing a trailer, ACC driving characteristics such as following gap, acceleration rates, and braking rates may be modified to provide a better towing experience.

When ACC is used with vehicles equipped with an aftermarket trailer brake controller, disengage ACC before applying the manual

trailer brake. ACC will not automatically disengage when the manual trailer brake is applied.

ACC may be used when towing a trailer if the trailer is within the GM-approved allowable size and weight limits. See *Trailer Towing* ⇒ 272.

Use Tow/Haul mode when driving down steep hills or mountain grades, or when hauling heavy loads. See *Driver Mode Control* ▷ 197.

#### Disengaging ACC

There are four ways to disengage ACC:

- Press ☒.
- Lightly apply the brake pedal.
- Apply the Regen on Demand steering wheel paddle.
- Press 🕥.

### **Erasing Speed Memory**

The ACC set speed is erased from memory if (5) is pressed or if the vehicle is turned off.

### Weather Conditions Affecting ACC

ACC system operation may be limited under snow, heavy rain, or road spray conditions.

#### Accessory Installations and Vehicle Modifications

- Do not install or place any object around the front camera windshield area that would obstruct the front camera view.
- Do not install objects on top of the vehicle that overhang and may obstruct the front camera, such as a canoe, kayak, or other items that can be transported on top of the vehicle.
- Do not modify the hood, headlights, or fog lights, as this may limit the camera's ability to detect an object.

### Cleaning the Sensing System

The camera sensor on the windshield behind the rearview mirror, and the sensors on the front of the vehicle can become blocked bu snow, ice, dirt, mud, or other debris. These areas must be clean for ACC to operate properly. For proper cleaning instructions, see the section "Washing the Vehicle" in Exterior Care \$\infty\$ 337.

If driving conditions temporarily prevent normal and safe ACC operation, regular cruise control may be available. See "Switching Between ACC and Regular Cruise Control" previously in this section. Always consider driving conditions before using either cruise control system.

### **Super Cruise**

### ✓ Warning

Super Cruise does not perform all aspects of driving, nor does it do everything a driver can do. Super Cruise only steers to maintain vehicle position in the current lane or, under some circumstances, to change lanes. Super Cruise can only be used with Adaptive Cruise Control.

Super Cruise does:

• Not prevent crashes or warn of possible crashes.

(Continued)

### Warning (Continued)

- Not steer to avoid stopped or slow-moving vehicles, cross-traffic, construction barriers or cones. motorcycles, children, pedestrians, animals, or other objects on the road.
- Not steer in response to vehicles or objects next to your vehicle, including vehicles attempting to enter your lane.
- Not respond to traffic lights, stop signs, or other traffic control devices
- Not respond to crossing traffic.
- Not make turns.
- Not steer to merge onto or to exit highways.
- Not steer to avoid, or steer through construction zones.
- Not function on surface streets.
- Not respond to oncoming traffic.
- Not function in city driving conditions.

### **⚠** Warning

Failure to supervise the driving task and to respond appropriately, even while Super Cruise is operating, can cause a crash. Super Cruise may not respond as you would to all driving situations and may not maintain lane position under all conditions.

It is extremely important to pay attention to the operation of the vehicle, even while using Super Cruise. Do not use a handheld device while driving, even with Super Cruise engaged. To prevent serious injury or death:

- Always remain properly seated in the driver seat with your seat belt fastened.
- Never remove your hands from the steering wheel when Super Cruise is not operating.
- Always make sure traffic conditions are safe before using Super Cruise.
- Always keep the entire vehicle and the sensors clean. Sensors are on the front, sides, and rear of the vehicle.

(Continued)

### Warning (Continued)

Always observe posted speed limits.
 Only use Super Cruise at or below the posted speed limit.

Super Cruise should not be used in complex or uncertain driving conditions, including:

- Not in construction zones.
- Not when approaching or exiting toll plazas.
- Not when approaching an intersection that is controlled with a traffic light, stop sign, or other traffic control device.
- Not when lane markings are not present or cannot be detected. For example, there is too much glare, weather conditions are poor, or lanes are poorly marked.
- Not on slippery or icy roads.
- Not in adverse weather conditions, including rain, sleet, fog, ice, or snow.
- Not on winding or hilly roads.
- Not for city driving.
- Not during heavy or emergency braking.

(Continued)

### Warning (Continued)

- Not on surface streets.
- Not on a road shoulder, service drive, or under an elevated freeway.
- Not when towing a trailer that does not meet GM approved guidelines.
- Not in a highway exit lane.

### **⚠** Warning

Super Cruise can only assist to maintain lane position, or steer to change lanes, when driving on compatible roads. You must supervise the driving task and monitor the road conditions. You may need to respond to traffic events by steering, braking, or accelerating. See Defensive Driving.

Super Cruise is:

- Not a self-driving system
- Not a crash avoidance or warning system
- Not a substitute for proper supervision of the driving task

### **⚠** Warning

Some state and local laws may require hands to be kept on the steering wheel at all times. Only remove your hands from the steering wheel if Super Cruise is engaged, it is safe to do so, and it is permitted by state and local laws.

### ⚠ Warning

To prevent serious injury or death, be alert and pay special attention when passing highway exits, entrances, and crossings with Super Cruise, and be ready to take control of the vehicle when necessary. Changes in lane markings around exits and entrances can momentarily cause Super Cruise to not detect the correct lane. If this occurs, Super Cruise may attempt steering inputs to bring the vehicle back into the correct lane and, in rare circumstances, could over-correct and cause the vehicle to momentarily cross into a lane next to your vehicle unless you manually steer to maintain your lane position.

If equipped, Super Cruise is an advanced driver assistance technology that allows hands-free driving on compatible roads. Additionally, it offers support for trailering, lane changes, and hands-on driving across an expanded set of roads. Super Cruise works with Adaptive Cruise Control (ACC) to maintain vehicle set speed and following distance. The Driver Attention System monitors your head pose and eye gaze to ensure you're paying attention to the road. The Driver Attention System does not record or save video.

Super Cruise is designed to operate only when:

- Teen Driver is not active.
- The camera and radar sensors are functioning and not covered, obstructed, or damaged.
- The Driver Attention System (DAS) detects the driver's head and eyes are directed toward the road ahead.
- The lane markings are clearly visible and detectable by the system.
- If equipped with Adjustable Ride Height;
   Super Cruise allowable ride height is selected.
- If the outside temperature is not too cold.

 There are not any other conditions preventing the system to work.

When Super Cruise is unavailable, a message will display with the reason. See "Super Cruise Message Summary" later in this section.

You may also press and hold on the steering wheel to have the system display the unavailability message.

### **Engaging Super Cruise**

### **⚠** Warning

Super Cruise is a driver assistance system and cannot accurately detect or predict all situations. Super Cruise is not a crash avoidance system. To prevent serious injury or death, you must supervise the driving task and monitor the road conditions. You may need to respond to traffic events by steering, braking, or accelerating. See *Defensive Driving* 

⇒ 172. Super Cruise also cannot determine whether you are awake, asleep, impaired, or properly focused on safe driving. The vehicle could crash into other vehicles, drive

(Continued)

### Warning (Continued)

out of the lane, or drive off the road. Complete attention is always required while driving, even while using Super Cruise. Be prepared to take over steering or apply the brakes at any time.

### **⚠** Warning

Super Cruise may not begin steering immediately, even when Super Cruise is available and has been pressed. To prevent serious injury or death, only remove your hands from the steering wheel if the steering wheel light bar, the Super Cruise light ( ), and the Adaptive Cruise Control (ACC) light — are green.

1. Make sure the vehicle is on and Adaptive Cruise Control is enabled. You will see one of two icons: a white illuminated 
or a green illuminated — with the set speed limit. If you do not see either of these, press on the steering wheel.

- 2. Press on the steering wheel to activate Super Cruise.
- 3. Set the desired vehicle speed using the SET+/RES- button.

The system automatically engages the appropriate level of assistance based on availability and operating conditions. There are three possible assistance levels:

Adaptive Cruise Control: When Adaptive Cruise Control is active,  $\frown$  appears green in the instrument cluster. See Adaptive Cruise Control (Advanced) \$\times 204.

Hands-On: When the vehicle is centered in the lane, and kind displays green in the instrument cluster, the vehicle will keep itself centered in the lane. While this light is on, you must keep your hands on the steering wheel.

Hands-Free: When the vehicle is centered in the lane, displays green in the instrument cluster, and the steering wheel light bar turns green, you may take your hands off the steering wheel. This is the only level that allows for hands-free driving.

### **Lane Changes**



### Warning

To help prevent crashes before making a lane change:

- Always check mirrors.
- Glance over your shoulder.
- Use the turn signals.

### **⚠** Warning

Super Cruise Lane Change may not detect a vehicle in an adjacent lane. Always supervise the driving task and monitor traffic conditions when using the Super Cruise Lane Change feature. Only request a lane change when traffic conditions are safe for a lane change, and always be ready to manually steer the vehicle.

Super Cruise allows for manual, automatic, or turn signal activated lane changes. Automatic and turn signal activated lane changes are only available in Super Cruise hands-free functionality. Super Cruise Lane Change functionality may be disabled when a trailer

or other accessories (e.g. bike rack, cargo tray, etc.) are detected. Do not use Super Cruise Lane Change when towing a trailer.

To view the available settings, from the infotainment home screen, touch Settings > Vehicle > Super Cruise Lane Change.

#### **Automatic Lane Changes**

Automatic lane changes are initiated by the system under the following conditions to:

- · pass a slower vehicle.
- merge out of a lane that is ending.
- allow space for other vehicles to merge from a highway entrance ramp.
- follow a route set on the built-in navigation system. See General Towing Information
   ⇒ 268.

To cancel an automatic lane change, activate the turn signal lever or steer manually.

Automatic Lane Change is not available when a construction zone is detected.

#### **Turn Signal Activated Lane Changes**

To initiate this type of lane change:

1. Ensure the adjacent lane is clear of traffic.

- 2. Activate the turn signal in the direction you want to go.
- 3. The system will steer the vehicle to perform the lane change.

To cancel a turn signal activated lane change, disengage the turn signal lever or steer manually.

### **Trailer Towing With Super Cruise**

Super Cruise may be used when towing a trailer when the attached trailer is within size and weight limits designated in the Trailer Towing section. See General Towing Information \$\displace268\$.

When Super Cruise is used with vehicles equipped with aftermarket trailer brake controller, disengage Super Cruise before applying the manual trailer brake. Super Cruise will not automatically disengage when manual trailer brake is applied.

Super Cruise can recognize when the vehicle is pulling a trailer and adjusts the following gap for extra stopping distance. Automatic and turn signal activated lane changes are disabled for safety while trailering.

## Stationary or Very Slow-Moving Objects; Cross-Traffic

### <u> Marning</u>

Super Cruise is not a crash avoidance system and will not steer or brake to avoid a crash. Super Cruise does not steer to prevent a crash with stopped or slowmoving vehicles. You must supervise the driving task and may need to steer and brake to prevent a crash, especially in stopand-go traffic or when a vehicle suddenly enters your lane. Always pay attention when using Super Cruise. Failure to do so could result in a crash involving serious injury or death.

#### **Curves in the Road**

### **⚠** Warning


The vehicle could drift out of your lane of travel. To prevent crashes, always be ready to manually steer. Super Cruise may not detect your lane on curves in the road. Super Cruise may not detect the markings

(Continued)

### Warning (Continued)


that show your lane. You may not have time to react to a vehicle in the lane next to your vehicle while on curves in the road. Super Cruise may hand control back to the driver more often driving around a sharp curve while towing a trailer.

Super Cruise may operate differently in sharp curves. It may drift out of your lane of travel if the curve is too sharp.

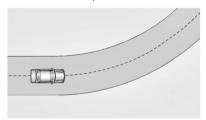


When entering a curve, Super Cruise may not detect the lane markings and may not adjust the steering enough to stay in your lane of travel. When this happens, you will need to steer the vehicle.

Super Cruise may detect other lane markings that are not in your lane and may or may not steer appropriately to maintain your lane.

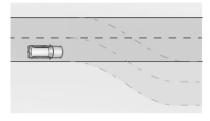

Super Cruise may occasionally provide an alert and/or steering that is considered unnecessary. It could respond to lane markings in different lanes, signs, guardrails, and other stationary objects when entering or exiting a curve. This is normal operation. The vehicle does not need service.

### Other Vehicles Entering Your Lane

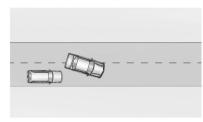

Super Cruise may not detect a vehicle that enters your lane, or may not brake fast enough to avoid a crash. You must manually brake and steer the vehicle.

## Intersections and Vehicles Crossing the Road Ahead

Super Cruise will not brake the vehicle when approaching an intersection that is controlled by a traffic light or stop sign. Super Cruise will not detect vehicles crossing the road ahead, including at intersections, and will not automatically steer or brake to prevent a collision. You must manually brake and steer the vehicle.

### **Super Cruise on Hills**

Do not use Super Cruise while driving on steep hills.

### **Disengaging Super Cruise**

To cancel or turn off Super Cruise in your vehicle, you can use one of the following methods:

- Press on the steering wheel to disengage Super Cruise.
- Press the brake pedal to disengage Super Cruise and Adaptive Cruise Control.
- Turn Adaptive Cruise Control off. This also disengages Super Cruise.
- Use the Regen on Demand paddle to disengage Super Cruise and Adaptive Cruise Control.


### **Super Cruise Status and Lightbar**

### **⚠** Warning

Super Cruise will not maintain the vehicle's speed while the steering wheel light bar is flashing red. If the steering wheel light bar (Continued)

### Warning (Continued)

flashes red, immediately resume manual steering to prevent serious injury or death. If you do not resume manual steering, the vehicle will begin to slow in the same lane and eventually come to a complete stop on the road.

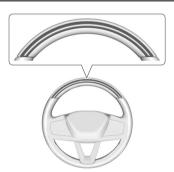

The steering wheel light bar and instrument cluster light provide the following important information about Super Cruise operation:

Steering Wheel Light Bar	Instrument Cluster Light	Super Cruise Description
Off	Off	Super Cruise is off. There is no automatic steering. Operate the vehicle manually.
Off	White	Super Cruise is available and can be engaged.
Solid Green	Solid Green	Super Cruise is steering. Pay attention to the road and vehicle operation.
Flashing Green	Solid Green	Super Cruise has detected you are not paying sufficiently close attention to the road. Pay attention to the road.
Flashing Red	Solid Red	Take over steering immediately. Super Cruise will disengage.

### When Super Cruise is Steering

When the vehicle is positioned in the center of the lane, the steering wheel light bar and will turn green, indicating Super Cruise is steering the vehicle.

When Super Cruise controls the steering, traffic and other conditions and laws permit, and it is safe to do so, your hands can be taken off the steering wheel.

Always pay attention to the road and the operation of the vehicle. Always monitor and be attentive of surrounding traffic, including vehicles that may cross the road in front of your vehicle.





Super Cruise steering can be overridden with manual steering at any time. To begin steering manually, hold the steering wheel firmly with both hands.

You can adjust vehicle position within the lane by cooperatively steering the vehicle. If you steer out of the lane, the system will disengage.

When ready to allow Super Cruise to resume steering again, position the vehicle in the center of the lane, hold the steering wheel until the steering wheel light bar turns green, and then release the steering wheel when it is safe to do so.

## Escalation Requiring Driver To Take Control of the Steering Wheel

When you are required to take control of the steering wheel, , and the steering wheel lightbar will turn red, and a message will display in the Driver Information Center (DIC). When you begin steering manually, Super Cruise will disengage.

In addition, audible alerts will sound, or the Safety Alert Seat will vibrate, if equipped. To view collision and detection settings, from the infotainment home screen, touch Settings > Vehicle > Collision/Detection Systems.

The red flashing steering wheel light bar could occur under any of the following conditions:

- The lane markings are poor, or visibility is limited.
- The Driver Attention System does not detect that the driver's head and eyes are directed toward the road ahead.
- Adaptive Cruise Control is cancelled.
- The vehicle is on a tight curve, the lane is too wide, or the vehicle enters a curve too quickly.
- The Super Cruise enabled road ends.
- The vehicle is approaching an intersection controlled by a traffic light, stop sign, or other traffic control device.
- A Super Cruise system fault occurs.
- Super Cruise is unable to complete a lane change maneuver.
- Super Cruise detects that the outside temperature is too cold to operate correctly.
- The driver's seatbelt becomes unbuckled.

### Super Cruise Message Summary

Subscription Required - Press OnStar Button	<ul> <li>The owner's required Connected Services subscription may have ended.</li> <li>Press the Blue OnStar button in your vehicle to speak with an OnStar representative, who can help determine the issue and what actions to take</li> </ul>
Unavailable Turn on Adaptive Cruise Control	Adaptive Cruise Control must be on before Super Cruise can be enabled.  • Set speed is not required before enabling Super Cruise.  • Adaptive Cruise Control is not required to be engaged before enabling Super Cruise.
Unavailable Lane Ending	Super Cruise is disabled because the driving lane is ending.
Unavailable No Road Information	<ul> <li>There is no map information available for that portion of the road. Recent road reconstruction may turn off Super Cruise for that section of road until new map information is available.</li> <li>The vehicle is not on the correct type of road. A controlled access freeway or compatible divided or non-divided road is required for Super Cruise.</li> <li>There are lanes entering or exiting on both the left and right side of the road.</li> </ul>
Unavailable Sensors Can't Find Lane Lines	<ul> <li>Rain or snow is inhibiting the system's ability to see lane lines.</li> <li>Direct sunlight is on the front camera at dawn or dusk.</li> <li>There are missing or poor lane line markings on the road.</li> <li>There is sun glare on the road surface.</li> <li>There is heavy rain, puddles, road spray, or inclement weather conditions that are affecting system performance.</li> </ul>

Unavailable Sensor Can't See	Sun is shining into the DAS camera.	
Face Clearly	Dawn or dusk sun glare is on the driver's face.	
	Cups, food, hands, or other objects are obscuring the DAS view of the driver's face.	
	The steering column is pointed too high or low for the DAS to see the driver. Adjust the steering column or the seat if the message occurs frequently.	
Unavailable Looking Away From Road for Too Long	The DAS system detects that the driver is not looking at the road.	
Unavailable Driving Too Fast	The vehicle is traveling faster than 137 km/h (85 mph).	
	The maximum Super Cruise speed in curves will vary based on how sharp the curve is. The vehicle will automatically decrease speed if needed.	
Unavailable Driving in Exit Lane	The Super Cruise system has detected that the vehicle is in an exit lane.	
Unavailable GPS Signal Lost	There is poor reception in isolated areas.	
	Reception is being blocked by buildings or other large structures.	
Unavailable You Have Taken Vehicle Control	The brake pedal is being pressed.	
	Adaptive Cruise Control has been canceled or turned off.	
Unavailable Sensor Blocked	Clear snow, ice, dirt, or other contaminants from the front and rear areas of the vehicle.	
Unavailable Sharp Curve	Some curves are too sharp to be navigated by the Super Cruise system. Super Cruise will be available after the curve is traveled.	

Unavailable Over Weight Limit	Super Cruise has detected that the trailer is over the allowable weight limit.
Unavailable Trailer Too Unstable	Super Cruise has detected that the attached trailer is causing an unstable condition. Check the trailer and/or load.
Unavailable Trailer Too Large	Trailer size (length/width) is larger than supported for Super Cruise operation.
Unavailable Lane Too Narrow	Super Cruise has detected that the lane width ahead is too narrow for Super Cruise operation while towing a trailer.
Super Cruise Unavailable	Super Cruise is unavailable for reasons not described in other messages.
Super Cruise Locked Out See Owner's Manual	The driver did not take control of the vehicle when prompted by the Super Cruise system. The Super Cruise system will be disabled until the vehicle is turned off and back on.
Unavailable Seat Belt Not Fastened	The driver seat belt is not fastened.
Unavailable Teen Driver Mode Active	Teen Driver mode is active.
Unavailable Snow Mode	A snow plow is attached.
Unavailable Unsupported Intersection	Super Cruise has detected an unsupported intersection.
Unavailable Approaching Toll Booth	Super Cruise has detected that there is a toll booth ahead.

Unavailable Ride Height Out of Range	The vehicle ride height is out of Super Cruise operational range.
Caution Construction Zone - Drive With Care	Super Cruise has detected a construction zone.

### **Map Updates**

Super Cruise relies on precise LIDAR based maps, these are often called High Definition (HD) Maps. These HD Maps are regularly updated by GM and sent to your vehicle. This will happen automatically as your vehicle is driven. This will not require any user input. If there is any issue with these HD Map updates, a Service Driver Assist error message will be displayed. If this message is displayed, please contact an authorized GM Service Center.

### Connectivity

An active Connected Service plan that includes Super Cruise Services is required to use Super Cruise. If the vehicle is equipped with OnStar and has an active service plan, additional data may be collected through the OnStar system. This includes information about: the vehicle's operation; a crash involving the vehicle; the use of the vehicle and its features; and, in certain

situations, the location and approximate GPS speed of the vehicle. Refer to the OnStar Terms and Conditions and Privacy Statement on the OnStar website.

#### **Location Services**

This setting enables or disables sharing of vehicle location outside the vehicle for certain purposes. Even if the Location Services setting is disabled, vehicle location information will continue to be shared for emergency services and Super Cruise, if equipped.

#### **Sustem Care**

#### Caution

The Super Cruise system is a highly sophisticated system and should only be serviced by technicians with the proper training, tools, and safety instructions, which your dealer has. Without proper training and tools the vehicle may become damaged.

The camera on the steering column has a lens cover that may become dirty over time and affect camera performance. Clean the lens cover with a soft cloth sprayed with glass cleaner. Wipe the lens gently, then dry it. Never use abrasive cloths/cleaners or corrosive chemicals of any kind on the lens cover.

Super Cruise uses the front radar, front camera, rear radar, and 360-degree cameras for its operation. Clean surfaces are required for Super Cruise operation. See Adaptive Cruise Control (Advanced) ▷ 204, Surround Vision System ▷ 229, and Lane Keep Assist (LKA) ▷ 253 for care information.

### Advanced Driver Assistance Systems

This vehicle may have features that work together to help avoid crashes or reduce crash damage while driving, backing, and parking. Read this entire section before using these systems.

### ⚠ Warning

Do not rely on the Driver Assistance Systems. These systems do not replace the need for paying attention and driving safely. You may not hear or feel alerts or warnings provided by these systems. Failure to use proper care when driving may result in injury, death, or vehicle damage. See *Defensive Driving* ▷ 172.

(Continued)

### Warning (Continued)

Under many conditions, these systems will not:

- Detect children, pedestrians, bicyclists, or animals.
- Detect vehicles or objects outside the area monitored by the system.
- Work at all driving speeds.
- Warn you or provide you with enough time to avoid a crash.
- Work under poor visibility or bad weather conditions.
- Work if the detection sensor is not cleaned or is covered by ice, snow, mud, or dirt.
- Work if the detection sensor is covered up, such as with a sticker, magnet, or metal plate.
- Work if the area surrounding the detection sensor is damaged or not properly repaired.

(Continued)

### Warning (Continued)

Complete attention is always required while driving, and you should be ready to take action and apply the brakes and/or steer the vehicle to avoid crashes.

#### **Audible or Safety Alert Seat**

Some driver assistance features alert the driver of obstacles by chiming. To view available settings from the infotainment screen, touch Settings > Vehicle > Comfort and Convenience.

If equipped with the Safety Alert Seat, the driver seat cushion may provide a vibrating pulse alert instead of chiming. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

#### Cleaning

Depending on vehicle options, keep these areas of the vehicle clean to ensure the best driver assistance feature performance. A Driver Information Center (DIC) message may display when a system is unavailable.





- Front and rear bumpers and the area below the bumpers
- · Front grille and headlights


- Front camera lens in the front grille or near the front emblem
- Front side and rear side panels
- Outside of the windshield in front of the rearview mirror
- Side camera lens on the bottom of the outside mirrors
- Rear side corner bumpers
- Rear Vision Camera in the tailgate handle
- Rear Camera Mirror and Cargo View Camera in the Center High-Mounted Stoplight

# Assistance Systems for Parking or Backing


The Rear Vision Camera (RVC), Surround Vision, Rear Park Assist (RPA), Front and Rear Park Assist (FRPA), and Rear Cross Traffic Alert (RCTA) may help the driver park or avoid objects. Always check around the vehicle when parking or backing.

### Rear Vision Camera (RVC)

When the vehicle is shifted into R (Reverse), the Rear Vision Camera (RVC) displays an image of the area behind the vehicle in the infotainment display. The previous screen displays when the vehicle is shifted out of R (Reverse) after a short delay. To return to the previous screen sooner, press Home or Back on the infotainment system, shift into P (Park), or reach a vehicle speed of approximately 12 km/h (8 mph) while in D (Drive).

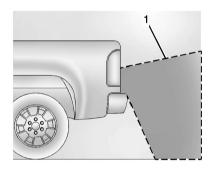

 1. View Displayed by the Camera

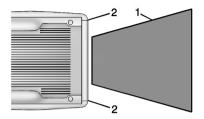

- 1. View Displayed by the Camera
- 2. Corners of the Rear Bumper

Displayed images may be farther or closer than they appear. The area displayed is limited and objects that are close to either corner of the bumper or under the bumper do not display.

A warning triangle may appear on the infotainment display to show that Rear Park Assist (RPA) or Rear Cross Traffic Alert (RCTA) has detected an object. This triangle changes from amber to red and increases in size the closer the object.

### **⚠** Warning

The camera(s) do not display children, pedestrians, bicyclists, crossing traffic, animals, or any other object outside of the cameras' field of view, below the bumper, or under the vehicle. Shown distances may be different from actual distances. Do not drive or park the vehicle using only these camera(s). Always check behind and around the vehicle before driving. Failure to use proper care may result in injury, death, or vehicle damage.

### **Surround Vision System**

### **⚠** Warning

The Surround Vision cameras have blind spots and will not display all objects near the corners of the vehicle. Folding outside mirrors that are out of position may not display surround view correctly. Always check around the vehicle when parking or backing.

### **⚠** Warning


The camera(s) do not display children, pedestrians, bicyclists, crossing traffic, animals, or any other object outside of the cameras' field of view, below the bumper, or under the vehicle. Shown distances may be different from actual distances. Do not drive or park the vehicle using only these camera(s). Always check behind and around the vehicle before driving. Failure to use proper care may result in injury, death, or vehicle damage.

If equipped the Surround Vision system can display various views surrounding the vehicle in the infotainment display.




1. Views Displayed by the Surround Vision Cameras

#### 2. Area Not Shown

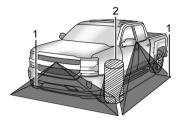

- Views Displayed by the Surround Vision Cameras
- 2. Area Not Shown

#### **Camera Views**

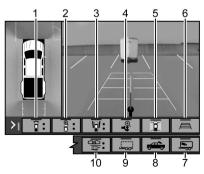

Some views may automatically display, or switch based on vehicle movement or additional safety features. For views that use a shared button, touch the button to switch between them.

Touch the camera view buttons along the bottom of the infotainment display to access each view (if equipped):

1. Front/Rear Standard View

Displays an image of the area in front or behind the vehicle. To select, touch Front/ Rear Standard View on the infotainment display when a camera view is active.

When the hitch guidance is selected, Rear Standard View will remain visible across gear changes, otherwise the view will switch between Front and Rear Standard View based on gear position.

If equipped, the front view camera also displays when the Park Assist system detects an object in front of the vehicle.

To access the Rear Standard View, select CAMERA on the infotainment display and select Rear Standard View. The view can be closed by selecting X, Home, or Back on the infotainment display.

Front/Rear Top-Down ViewDisplays a front or rear overhead view of

the vehicle. To view, select Front/Rear Top-Down View on the infotainment display when the camera app is active.

3. Front/Rear Side View

Displays a view that shows objects next to the front or rear sides of the vehicle. To select, touch Front/Rear Side View on the infotainment display when a camera view is active. Touch the button to switch between front and rear camera views. Park Assist and Rear Cross Traffic Alert (RCTA) overlays are not available when Front/Rear Side View is active.

4. Hitch View

Displays a zoomed-in view of the hitch area to assist with aligning the vehicle's hitch ball with the trailer coupler and monitoring the trailer connection. To view, select Hitch View on the infotainment display when the Camera App is active. The view can be closed by selecting X, Home, or Back on the infotainment display. Shifting

into P (Park) while in this view will automatically engage the Electric Parking Brake (EPB).

#### 5. Surround View

Touch the Surround View icon to enable or disable the view. Displays an image of the area surrounding the vehicle. Surround View is displayed alongside the currently selected view.

6. Camera App Guidance Lines

The Camera App supports three possible guidance modes: No Guidance, Vehicle Guidance, and Trailering Guidance. To change guidance mode, select the appropriate guidance icon. Depending on the guidance mode and view selected, different guidance lines may appear. A grayed-out icon indicates that guidance lines are not available. Certain views do not support guidance lines. This feature only works with conventional box type trailers.

 Standard Guidance Lines are available in Front/Rear Standard Views, Front/Rear Top-Down Views, and Surround View when the vehicle guidance mode is selected. Standard Guidance Lines show current and intended vehicle path.

### **⚠** Warning

Use Hitch Guidance only to help back the vehicle to a trailer hitch or, when traveling above 12 km/h (8 mph), to briefly check the status of your trailer. Do not use for any other purpose, such as making lane change decisions. Before making a lane change, always check the mirrors and glance over your shoulder. Improper use could result in serious injury to you or others.

 The Hitch Guidance Line is available in Rear Standard View or Cargo Bed View when the Trailering Guidance mode is selected. Hitch Guidance displays a single centered guidance line on the infotainment display to assist with aligning the vehicle's hitch with a trailer coupler. Align the Hitch Guidance Line with the trailer

- coupler by continuously steering the vehicle to keep the guidance line centered on the coupler when backing. Park Assist overlays will not display when the Hitch Guidance Line is active
- Rear Trailer Guidance Lines are available in the Rear Trailer View when the Trailering Guidance mode is selected and the rear trailer camera calibration has been successfully completed. Rear Trailer Guidance Lines show the intended path (yellow) and the current path (blue) of the trailer. The current path guidance lines will converge with the intended path guidance lines.

#### 7. Interior Trailer View

Displays a view of the interior of the trailer. The feature is available when a trailer is connected. The feature requires installation of an accessory trailer camera on the interior of the trailer per the accessory trailer camera installation instructions. See your dealer for accessory trailer camera(s) and information. To view, select Interior Trailer View on the infotainment display

when the Camera App is active. The view can be closed by selecting X, Home, or Back on the infotainment display.

- 8. Cargo Bed View/Bed Hitch View
  Use the plus and minus icons on the infotainment display to zoom in or out.
  - Cargo Bed View

Displays a view of the truck bed and the area behind the vehicle to assist in cargo or hitch monitoring or hitching to a fifth-wheel or gooseneck trailer. To view, select Cargo Bed View on the infotainment display when the Camera App is active. To access this view when in a forward gear above 12 km/h (8 mph), select CAMERA on the infotainment display and select Cargo Bed View. The view will close after eight seconds and can be closed early by selecting X, Home, or Back. When the Cargo Bed View is selected when not in D (Drive), the cargo bed lighting is turned on automatically. The feature can be enabled or disabled. To view available settings

from the infotainment screen, touch Settings > Vehicle > Collision/ Detection Systems.

9. Transparent Trailer View

Displays a view that allows the driver to virtually "see through" the trailer. The feature is available when a compatible trailer is connected, a valid profile is selected, and the vehicle is not in R (Reverse). The feature requires installation of an accessory trailer camera on the rear exterior surface of the trailer per the accessory trailer camera installation instructions. See your dealer for accessory trailer camera(s) and information. To view, select Transparent Trailer View on the infotainment display when the Camera App is active. This view can be closed by selecting X, Home, or Back on the infotainment display.

To calibrate the system, a minimum clearance of 61 cm (24 in) behind the Rear Vision Camera (RVC) is required. When the system is calibrated and trailer position is known, one of three views will be show: Transparent Trailer View, or Right Transparent Trailer View. The

Transparent Trailer View is shown when the position of the trailer is relatively straight behind the vehicle. The Left or Right Transparent Trailer view is shown when the position of the trailer is too far to the left or right. When the system is not calibrated or trailer position is not known the Transparent Trailer Picture-in-Picture View will be shown

For fifth-wheel and gooseneck trailers, the size of the image overlaid on the face of the trailer can be adjusted by pressing (+) or (-) on the infotainment display.

- 10. Rear Trailer Views
  - Rear Trailer View

Displays a view of the area behind the trailer when a trailer is connected. The feature requires installation of an accessory trailer camera on the rear exterior surface of the trailer per the accessory trailer camera installation instructions. See your dealer for accessory trailer camera(s) and information. To view, select Rear Trailer View on the infotainment display when the Camera App is active. The view can be closed by selecting X, Home, or Back.

- Trailer Tow Mirror View
  Displays a rearward split view of the
  left and right sides of the vehicle and
  trailer, when a trailer is connected.
  The view will automatically pan
  to show more of the left or right
  side based on the position of the
  trailer when a compatible profile
  is configured and selected via the
  Trailering App. To view, select Trailer
  Tow Mirror View on the infotainment
  display when the Camera App is
  active. The view can be closed by
  selecting X, Home, or Back.
- Picture-in-Picture Side View
   Displays a rearward split view of the left and right sides of the vehicle and trailer with an overlay view of the area behind the trailer when a trailer is connected. The feature requires installation of an accessory trailer camera on the rear exterior surface of the trailer per the accessory trailer camera installation instructions. See your dealer for accessory trailer camera(s) and information. To view, select Picture-in-Picture Side View on

the infotainment display when the Camera App is active. The view can be closed by selecting X, Home, or Back.

#### Additional Views and Alerts

• Turn Signal Activated Views

Displays a rearward view of the left or right side of the vehicle and trailer when a trailer is connected. Views are provided based on turn signal activation with the right-side view being shown when the right turn signal is active and the left side view being shown when the left turn signal is active. The feature can be enabled or disabled. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems. The view can be closed early by selecting X, Home, or Back on the infotainment screen.

A Trailer Length Indicator Overlay is available in the Turn Signal Activated Views when the trailer is relatively straight behind the vehicle and a compatible profile is configured and selected via the Trailering App. The overlay will not be visible when the position of the trailer is too far to the left or right. The overlay can be enabled or

disabled. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

• Jack-Knife Detection and Alert

The vehicle may be equipped with Jack-Knife Detection. The system will track the position of the trailer relative to the vehicle. As the front of the trailer approaches the rear of the vehicle, a warning or an alert will be displayed. A warning indicates to the driver to proceed with caution, an alert indicates that a collision is imminent. Based on vehicle equipment and user settings, the visual warning or alert may be accompanied by audible or safety alert seat notifications. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/ Detection Systems. This feature only works with conventional box type trailers.

• Trailer Angle Indicator

The vehicle may be equipped with a Trailer Angle Indicator. The Trailer Angle Indicator gives the driver a visual representation of the trailer's position relative to the vehicle. This feature is only available in R (Reverse),

Guidelines On, Rear Trailering Views. This feature only works with conventional box type trailers.

## **HD Surround Vision with Trailer Camera Provisions**

If equipped, this feature provides additional views to aid in trailering/towing. The system shows multiple views in the infotainment display using five cameras mounted around the vehicle and up to two additional accessory cameras that can be mounted on or in a trailer. The front camera is in the grille under the front emblem, the side cameras are on the bottom of the outside mirrors, the rear camera is in the tailgate handle, and the bed camera is mounted on the rear of the cab. Additionally, up to two accessory cameras can be mounted to the rear and/or interior of the trailer. See your dealer for accessory trailer cameras. To access, touch CAMERA on the infotainment display or shift to R (Reverse). To return to the previous screen when not in reverse, touch the Home or Back buttons on the infotainment display.

Certain trailer views require a compatible trailer profile be configured and selected. A compatible trailer is a box type trailer (cargo, camper, etc.) with a conventional hitch.

Available camera views:

- Front/Rear Standard View
- Front/Rear Top-Down View
- Rear Bowl View
- Front/Rear Side View
- Hitch View
- Rear trailer View
- Rear Side View with Available Articulation Functionality
- Picture-in-Picture Side View
- Interior Trailer View
- Transparent trailer View
- Surround View
- Guidance Lines
- Hitch Guidance
- Surround Vision (360 Degrees)

If equipped, the Surround Vision system can display various 360 views surrounding the vehicle in the infotainment display using four cameras mounted around the vehicle. The front camera is in the grille under the front emblem,

the side cameras are on the bottom of the outside mirrors, and the rear camera is in the tailgate handle.

The Surround Vision system can be accessed by selecting CAMERA in the infotainment display or when the vehicle is shifted into R (Reverse). To return to the previous screen, when not in R (Reverse), press the Home or Back button on the infotainment system, or shift into P (Park).

#### Available camera views:

- Front/Rear Standard View
- Front/Rear Top-Down View
- Rear Bowl View
- Front/Rear Side View
- Hitch View
- Surround View
- Guidance Lines
- Hitch Guidance

#### Surround Vision for Trailing/Towing

If equipped, this feature provides, additional views to aid in trailering/towing. The Front Vision Camera and Surround Vision cameras are not supported. The system can show various views in the infotainment display using

cameras mounted in and around the vehicle and trailer. The rear camera is in the tailgate handle and the cargo bed camera is mounted on the rear of the cab. Up to two accessory cameras can be mounted to the rear and/or interior of the trailer. See your dealer for these accessory cameras.

The system can be accessed by selecting CAMERA in the infotainment display or when the vehicle is shifted into R (Reverse). To return to the previous screen sooner, when not in R (Reverse), press the Home or Back button on the infotainment system or shift into P (Park).

#### Available camera views:

- Rear Standard View
- Hitch View
- Rear Trailer View
- Interior Trailer View
- Guidance Lines
- Hitch Guidance

### Troubleshooting

The Transparent Trailer calibration may take longer than expected or not calibrate if:

- The vehicle is driven too fast during calibration. Speed should be maintained below 50 km/h (31 mph).
- The vehicle is not driven straight during calibration. Steering should be maintained as straight as possible, excessive steering during calibration may extend calibration time.
- The calibration is attempted in low light.
   Calibration should be attempted when there is enough light.
- The calibration is attempted during adverse weather conditions. Calibration during conditions such as snow or heavy rain should be avoided.
- The road surface is not ideal for calibration.
   Calibration should be attempted on an alternate road surface.
- The accessory trailer cameras are swapped at the hitch connector. Ensure that the camera mounted to the rear of the trailer is connected to the rear trailer camera input.

 The accessory trailer camera is mounted, angled or rotated outside of the defined mounting location (see camera installation instructions). Road markings need to be visible to the camera while calibrating. The camera will need to be turned off and on to save the calibration

Distortion may be observed in the calibrated Transparent Trailer View if:

 The accessory trailer camera is mounted, angled or rotated outside of the defined mounting location (see camera installation instructions).

The Transparent Trailer image is not the right size:

- The size of the image overlaid on the face of the trailer may be too large or too small if the measurements input in the trailering app are not accurate. See Trailering App for details on how to take measurements.
- The bed hitch transparent trailer view is optimized for trailers of federally mandated maximum width. Trailers that exceed the maximum width, or are too close to the cab, may not be optimized. The

maximum trailer width is 259 cm (102 in). The trailer must be closer than 122 cm (48 in) from the cab

The Transparent Trailer icon may appear grayed out if:

- A compatible trailer profile is not configured or a non-compatible trailer profile is selected.
- The vehicle is in R (Reverse).

The preview may not be provided or the wrong preview may be provided if:

- The accessory cameras are not recognized.
   Ensure that the accessory camera(s) are connected and power cucle the vehicle.
- The accessory trailer cameras are swapped at the hitch connector. Ensure that the accessory camera(s) are connected to the correct input.
- The accessory trailer camera(s) are connected to the correct camera input.
- The accessory trailer camera(s) are not installed according to the installation instructions.

A feature may be unavailable or not activating as expected if:

- The customization is disabled. Check the customization settings where applicable through the Trailering App.
- The accessory trailer cameras are swapped at the hitch connector. Ensure that the accessory camera(s) are connected to the correct camera input.
- The accessory trailer cameras were plugged in while the vehicle is running. Prior to plugging in the trailer camera, the vehicle needs to be off, with all of the doors closed, for at least five minutes before plugging in the accessory trailer cameras.

A view may switch automatically if:

- The vehicle is shifted to another gear.
- A distorted Transparent Trailer view may display during the initial portions of a drive until the vehicle calculates the correct angle between the vehicle and the trailer. Once calculated, the expected transparent trailer view will be displayed.

### **Park Assist**

With Front and Rear Park Assist, as the vehicle moves at speeds of less than 9 km/h (6 mph) the sensors on the bumpers may detect objects up to 1.2 m (4 ft) in front and 1.8 m (6 ft) behind the vehicle. These detection distances may be shorter during warmer or humid weather. Blocked sensors will not detect objects and can also cause false detections. Keep the sensors clean of mud, dirt, snow, ice, and slush; and clean sensors after a car wash in freezing temperatures.

### **⚠** Warning

The Park Assist System is no substitute for careful and attentive driving. The Park Assist system does not detect children, pedestrians, bicyclists, animals, or objects located below the bumper or that are too close or too far from the vehicle. It is not available at speeds greater than 9 km/h (6 mph). To prevent injury, death, or vehicle damage, even with Park Assist, always check the area around the vehicle and check all mirrors before moving forward or backing.



The instrument cluster may have a Park Assist display with bars that show "distance to object" and object location information for the Front and Rear Park Assist system. As the object gets closer, more bars light up and the bars change color from yellow to amber to red.

When an object is first detected in the rear, one chime will be heard from the rear, or both sides of the Safety Alert Seat will pulse two times. When an object is very close — < 0.6 m (2 ft) in the vehicle rear or < 0.3 m (1 ft) in the vehicle front — a continuous chime will sound from the rear or front depending on object location, or both sides of the Safety Alert Seat will pulse five times. Chimes for FPA are higher pitched than for RPA.

### Turning the Features On or Off



Press P//▲ on the center stack to turn on or off the Front and Rear Park Assist. The indicator light next to the button comes on when the features are on and turns off when the features have been disabled.

Front and Rear Park Assist can be turned Off or On. There is also a Park Assist Towbar that can be turned Off or On. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems > Park Assist. If Park Assist is turned off through vehicle personalization, the Park Assist button will be disabled. To turn Park Assist on again, select On in vehicle personalization. Setting Park Assist Towbar to On allows Park Assist to work properly with a trailer hitch. Some larger trailer hitches may not be compatible.

Turn off Park Assist when towing a trailer.

# Automatic Parking Assist (APA) Automatic Parking Assist

### **⚠** Warning

APA may not always detect objects in the parking space, objects that are not rigid (e.g. shrubs and chain-link fences), objects below the bumper, objects high off the ground (e.g. flatbed trucks), hanging objects, objects below ground level (e.g. large potholes), or moving objects (e.a. pedestrians, cyclists, vehicles). Always verify that the parking space is appropriate for parking a vehicle. APA may not respond to changes in the parking space, such as movement of an adjacent vehicle, or a person or object entering the parking space. APA does not detect or avoid traffic that is behind or alongside of the vehicle. Always be prepared to stop the vehicle during the parking maneuver.

If equipped, under certain conditions Automatic Parking Assist can use sensors to detect a parking spot, and, under the supervision of the driver, automatically park or unpark the vehicle. The vehicle will control gear

selection, steering, acceleration, and braking, at or near idle speeds. The driver must always be prepared to apply braking, as needed. A display and audible beeps help to guide the parking maneuvers.

#### **How to Activate Automatic Parking**

To activate Automatic Parking Assist, press Automatic Parking Assist, press Automatic Parking Assist, press Automatic Parking Assist searches for parking spots, within the detection range, to the left or right of the vehicle. To search for a parking space to the left, turn on the left turn signal or, if available, change the side selection in the infotainment display. To choose or change the parking mode, make a selection on the infotainment display.

The Automatic Parking Assist feature cannot be used in all empty parking spots. The parking spot must:

- Be sufficiently large to fit the vehicle comfortably.
- Have an adjacent vehicle, wall, or pillar for the system to align to.
- Not be too steep.

After completely passing an eligible parking spot, a beep sounds and a notification to stop the vehicle is displayed in the driver information center. Generally, Automatic Parking Assist selects the nearest empty parking spot behind the vehicle, but under some conditions may select a space that is further back. Slow down and bring the vehicle to a complete stop to begin.

Follow the displayed instructions. When the vehicle is ready to begin the maneuver, the steering wheel will vibrate briefly as a reminder to remove hands from the steering wheel. After the vibration stops, check your surroundings and release the brakes to begin automatic parking. As the vehicle maneuvers into the parking spot, continue to check your surroundings. Be prepared to stop to avoid vehicles, pedestrians, or objects.

A progress bar displays the status of the parking maneuver. Once automatic parking is finished and the vehicle has come to a full stop, Automatic Parking Assist will beep and display a message indicating parking is complete.

#### **How to Activate Automatic Unparking**

To activate Automatic Parking Assist, turn the vehicle on and leave it in P (park), then press on the infotainment screen or the without on the instrument panel. A screen will display with unparking options. Like automatic parking, follow the displayed instructions and continue to check your surroundings, being prepared to brake to avoid vehicles, pedestrians, or objects.

Once automatic unparking is finished and the vehicle has come to a full stop, Automatic Parking Assist will display a message requesting the driver to take control. Press the brakes and take control of the vehicle to drive away.

#### How to Cancel Automatic Parking/Unparking

To cancel automatic parking or automatic unparking at any time, press or X on the infotainment display. Be prepared to resume full control of the vehicle. Automatic Parking Assist holds the vehicle until the parking brake or brake is applied, or the vehicle is shifted into P (Park). To start driving away, press the brakes and shift into D (Drive).

Certain vehicle conditions and driver interferences may also cancel automatic parking:

- The driver manually steers the vehicle.
- The driver shifts gears.
- The driver presses the accelerator pedal.
- There is a failure with the Automatic Parking Assist system.
- The electronic stability control or antilock brakes are activated.
- The parking brake is applied.
- The driver unbuckles the seat belt and opens the door.

### **System Limitations**

Automatic Parking Assist has certain limitations. The system cannot:

- Detect whether a parking space is legal or restricted.
- Detect pavement markings or lines.
- Park in an angled spot.
- Park exactly centered in a very large spot.
- Park in a very narrow spot.
- Always detect short curbs.

- Operate while towing any trailer.
- Operate with certain rear-mounted accessories, such as bike racks.
- Operate on a steep grade.
- Park the vehicle front first.

# Reverse Automatic Braking (RAB) Backing Warning and RAB

### **⚠** Warning

The Reverse Automatic Braking System only operates at speeds greater than 8 km/h (5 mph). It does not detect children, pedestrians, bicyclists, animals, or objects below the bumper or that are too close or too far from the vehicle. In some situations, such as at higher backing speeds, there may not be enough time for the short, sharp application of the vehicle brake system to occur.

It may not avoid many types of backing crashes. Do not wait for the automatic braking to apply. This system is not designed to replace driver braking and only

(Continued)

### Warning (Continued)

works in R (Reverse) when an object is detected directly behind the vehicle. It may not brake or stop in time to avoid a crash. It will not brake for objects when the vehicle is moving at very low speeds. The system will not work correctly under poor visibility or bad weather conditions, such as rain or snow.

To prevent injury, death, or vehicle damage, always check the area around the vehicle and check all mirrors before backing.

#### Caution

There may be instances where unexpected or undesired automatic braking occurs. If this happens, either press the brake pedal or firmly press the accelerator pedal to release the brakes. Before releasing the brakes, check the Rear Vision Camera and check the area around the vehicle to make sure it is safe to proceed.

If equipped and enabled, when in R (Reverse), Backing Warning alerts of rear objects at vehicle speeds greater than 8 km/h (5 mph), and RAB may automatically brake hard at speeds between 1-32 km/h (0.5-20 mph).

RAB can be turned on or off using the infotainment system.

The Backing Warning System will chime once from the rear when an object is first detected, or pulse twice on both sides of the Safety Alert Seat. When the system detects a potential crash, chimes will be heard from the rear, or five pulses will be felt on both sides of the Safety Alert Seat. There may also be a brief, sharp application of the brakes.

When the vehicle is in R (Reverse), if the system detects the vehicle is backing too fast to avoid a crash with a detected object behind your vehicle in your path, it may automatically brake hard to a stop to help avoid or reduce the harm caused by a backing crash.

Pressing the brake pedal after the vehicle comes to a stop will release RAB. If the brake pedal is not pressed soon after the stop, the Electric Parking Brake (EPB) may be set. When it is safe, press the accelerator pedal firmly at any time to override RAB

Unexpected braking events are possible with a static installed accessory, such as a bike rack or hitch-mounted cargo carrier.

#### **Rear Pedestrian Alert**

Under certain conditions, this feature can provide alerts for a pedestrian within the system's range directly behind the vehicle. This feature only works in R (Reverse) below 12 km/h (8 mph), and detects pedestrians up to 8 m (26 ft) away during daytime driving. During nighttime driving, feature performance is very limited.



#### **Rear Pedestrian Alert Indicator**

When a pedestrian is detected within the system's range directly behind the vehicle, this symbol flashes amber on the infotainment display, along with seven chimes from the rear and/or two pulses from both sides of the driver seat. When a pedestrian is detected close to the vehicle, the symbol flashes red on the

infotainment display, along with seven chimes from the rear, or if equipped, seven pulses from both sides of the driver seat

### **⚠** Warning

Rear Pedestrian Alert does not automatically brake the vehicle. It also does not provide an alert unless it detects a pedestrian, and it may not detect all pedestrians if:

- The pedestrian is not directly behind the vehicle, fully visible to the Rear Vision Camera (RVC), or standing upright.
- The pedestrian is part of a group.
- The pedestrian is a child.
- Visibility is poor, including nighttime conditions, fog, rain, or snow.
- The RVC is blocked by dirt, snow, or ice.
- The RVC, taillights, or back-up lights are not cleaned or in proper working condition.
- The vehicle is not in R (Reverse).

(Continued)

### Warning (Continued)

To help avoid death or injury, always check for pedestrians around the vehicle before backing up. Be ready to take action and apply the brakes. See *Defensive Driving*⇒ 172. Keep the RVC, taillights, and back-up lights clean and in good repair.

Rear Pedestrian Alert can be set to Off or Alert. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

Alerts can be set to chimes or seat pulses. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/ Detection Systems.

# Rear Cross Traffic Alert (RCTA) System

### **⚠** Warning

The Rear Cross Traffic Alert System only operates at speeds greater than 8 km/h (5 mph). It does not detect children, pedestrians, bicyclists, animals, or objects below the bumper or that are too close or too far from the vehicle. In some situations, such as at higher backing speeds, there may not be enough time for the short, sharp application of the vehicle brake system to occur.

It may not avoid many types of backing crashes. Do not wait for the automatic braking to apply. This system is not designed to replace driver braking and only works in R (Reverse) when an object is detected directly behind the vehicle. It may not brake or stop in time to avoid a crash. It will not brake for objects when the vehicle is moving at yery low speeds. The sustem

(Continued)

### Warning (Continued)

will not work correctly under poor visibility or bad weather conditions, such as rain or snow.

To prevent injury, death, or vehicle damage, always check the area around the vehicle and check all mirrors before backing.

If equipped, Rear Cross Traffic Alert (RCTA) displays a red warning triangle with a left or right pointing arrow on the infotainment display to warn of traffic coming from the left or right. This system detects objects coming from up to 20 m (65 ft) from the left or right side of the vehicle. When an object is detected, either three chimes sound from the left or right, or three Safety Alert Seat pulses occur on the left or right side, depending on the direction of the detected vehicle.

Use caution while backing up when towing a trailer, as the RCTA detection zones that extend out from the back of the vehicle do not move farther back when a trailer is attached to the vehicle.

#### Rear Cross Traffic Braking (RCTB)

If equipped, RCTB displays a red warning triangle with a left or right pointing arrow on the infotainment screen to warn of traffic coming from the left or right. The system detects objects coming from up to 20 m (65 ft) from the left or right side of the vehicle. When an object is detected, three chimes sounds from the left or right, depending on the direction of the detected vehicle. RCTB will bring the vehicle to a full stop if a collision is imminent.

### **Driving With a Trailer**

Use caution while backing up when towing a trailer. RCTA and RCTB are automatically disabled when a trailer is attached to the vehicle.

#### Turning the Features On or Off

RCTA can be turned on or off using the infotainment system. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

### **Assistance Systems for Driving**

If equipped, when driving the vehicle in a forward gear, Forward Collision Alert (FCA), Lane Departure Warning (LDW), Lane Keep Assist (LKA), Blind Zone Steering Assist (BZSA), Lane Change Alert (LCA), Automatic Emergency Braking (AEB), Intersection Automatic Emergency Braking (FAB), and/or the Front Pedestrian Braking (FPB) System can help to avoid a crash or reduce crash damage.

# Forward Collision Alert (FCA) System

If equipped, the FCA system may help to avoid or reduce the harm caused by front-end crashes. When approaching a vehicle ahead too quickly, FCA provides a red flashing alert on the windshield and rapidly chimes or pulses the driver seat. FCA also lights an amber visual alert if following another vehicle much too closely.

FCA detects vehicles within a distance of approximately 60 m (197 ft) and operates at speeds above 8 km/h (5 mph).

### 

FCA is a warning system and does not apply the brakes. When approaching a slower-moving or stopped vehicle ahead too rapidly, or when following a vehicle too closely, FCA may not provide a warning with enough time to help avoid a crash. It also may not provide any warning at all. FCA does not warn of pedestrians, animals, signs, guardrails, bridges, construction barrels, or other objects. Be ready to take action and apply the brakes. See *Defensive Driving* ❖ 172.

FCA can be disabled. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

#### **Detecting the Vehicle Ahead**

 


FCA warnings will not occur unless the FCA system detects a vehicle ahead. When a vehicle is detected, the vehicle ahead indicator will display green. Vehicles may not be detected on curves, highway exit ramps, or hills, due to poor visibility; or if a vehicle ahead is partially blocked by pedestrians or other objects. FCA will not detect another vehicle ahead until it is completely in the driving lane.

### 

FCA does not provide a warning to help avoid a crash, unless it detects a vehicle. FCA may not detect a vehicle ahead if the FCA sensor is blocked by dirt, snow, or ice, or if the windshield is damaged. It may also not detect a vehicle on winding or hilly roads, or in conditions that can limit visibility such as fog, rain, or snow, or if the headlights or windshield are not cleaned or in proper condition. Keep the windshield, headlights, and FCA sensors clean and in good repair.

#### **Collision Alert**

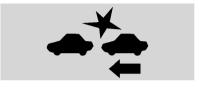

With Head-Up Display



#### Without Head-Up Display

When your vehicle approaches another detected vehicle too rapidly, the red FCA display will flash on the windshield. Also, eight rapid high-pitched chimes will sound from the front, or both sides of the Safety Alert Seat will pulse five times. When this Collision Alert occurs, the brake system may prepare for driver braking to occur more rapidly which can cause a brief, mild deceleration. Continue to apply the brake pedal as needed.

### **Tailgating Alert**



The vehicle ahead indicator will display amber when you are following a vehicle ahead much too closelu.

### Selecting the Alert Timing



The Collision Alert control is on the steering wheel. Press to set the FCA timing to Far, Medium, or Near. The first button press shows the current setting on the Driver Information Center (DIC). Additional button presses will change this setting. The chosen setting will remain until it is changed and will affect the timing of both the Collision Alert and the Tailgating Alert features. The timing of both alerts will vary based on vehicle speed. The

faster the vehicle speed, the farther away the alert will occur. Consider traffic and weather conditions when selecting the alert timing. The range of selectable alert timings may not be appropriate for all drivers and driving conditions.

If your vehicle is equipped with Adaptive Cruise Control (ACC), changing the FCA timing setting automatically changes the following gap setting (Far, Medium, or Near).

### **Following Distance Indicator**

If equipped, the following distance to a moving vehicle ahead in your path is indicated in following time in seconds on the DIC. See *Driver Information Center (DIC)* ⇒ 122. The minimum following time is 0.5 seconds away.

If there is no vehicle detected ahead, or the vehicle ahead is out of sensor range, dashes will be displayed.

#### **Unnecessary Alerts**

FCA may provide unnecessary alerts for turning vehicles, vehicles in other lanes, objects that are not vehicles, or shadows. These alerts are normal operation and the vehicle does not need service.

### **Cleaning the System**

If the FCA system does not seem to operate properly, this may correct the issue:

- Clean the outside of the windshield in front of the rearriew mirror.
- Clean the entire front of the vehicle.
- · Clean the headlights.

# Automatic Emergency Braking (AEB)

### **⚠** Warning

AEB is an emergency crash preparation feature and is not designed to avoid crashes. Do not rely on AEB to brake the vehicle. AEB will not brake outside of its operating speed range and only responds to detected vehicles.

#### AEB may not:

 Detect a vehicle ahead on winding or hilly roads.

(Continued)

### Warning (Continued)

- Detect all vehicles, especially vehicles with a trailer, tractors, muddy vehicles, etc.
- Detect a vehicle when weather limits visibility, such as in fog, rain, or snow.
- Detect a vehicle ahead if it is partially blocked by pedestrians or other objects.

Complete attention is always required while driving, and you should be ready to take action and apply the brakes and/or steer the vehicle to avoid crashes.

### **⚠** Warning

AEB may automatically brake the vehicle suddenly in situations where it is unexpected and undesired. It could respond to a turning vehicle ahead, guardrails, signs, and other non-moving objects. To override AEB, firmly press the accelerator pedal, if it is safe to do so.

The AEB system may help avoid or reduce the harm caused by front-end crashes. AEB also includes Intelligent Brake Assist (IBA). When the system detects a vehicle ahead in your path that is traveling in the same direction that you may be about to crash into, it can provide a boost to braking or automatically brake the vehicle. This can help avoid or lessen the severity of crashes when driving in a forward gear. Depending on the situation, the vehicle may automatically brake moderately or hard. Always wear a seat belt and ensure that all passengers are properly restrained. This automatic emergency braking can only occur if a vehicle is detected. This is shown by the FCA vehicle ahead indicator being lit. See Forward Collision Alert (FCA) System \$\sim 242.

The system works when driving in a forward gear above 4 km/h (2 mph). It can detect vehicles up to approximately 60 m (197 ft).

AEB may slow the vehicle to a complete stop to try to avoid a potential crash. If this happens, AEB may engage the Electric Parking Brake (EPB) to hold the vehicle at a stop. Release the EPB or firmly press the accelerator pedal.

### Intelligent Brake Assist (IBA)



### **⚠** Warning

IBA may increase vehicle braking in situations when it may not be necessary. You could block the flow of traffic. If this occurs, take your foot off the brake pedal and then apply the brakes as needed.

### 

Using AEB or IBA while towing a trailer could cause you to lose control of the vehicle and crash. Turn the system to Alert or Off when towing a trailer.

IBA may activate when the brake pedal is applied quickly by providing a boost to braking based on the speed of approach and distance to a vehicle ahead.

Minor brake pedal pulsations or pedal movement during this time is normal and the brake pedal should continue to be applied as needed. IBA will automatically disengage only when the brake pedal is released.

AFB and IBA can be disabled. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/ **Detection Systems.** 

A system unavailable message may display if:

- The front of the vehicle or windshield is not clean.
- Heavy rain or snow is interfering with object detection.
- There is a problem with the StabiliTrak/ Electronic Stability Control (ESC) system.

The AEB system does not need service.

### Intersection Automatic Emergency Braking (I-AEB) System



### **⚠** Warning

I-AEB is an emergency crash preparation feature. Do not rely on I-AEB to brake or avoid crashes. I-AEB will not brake outside of its operating speed range and only responds to detected intersecting vehicles. I-AEB may not:

(Continued)

### Warning (Continued)

- detect a crossing or oncoming vehicle on winding or hilly roads.
- detect all vehicles, especially vehicles with a trailer, tractors, muddy vehicles, etc.
- detect a vehicle when weather limits visibility, such as in fog, rain, or snow.
- detect a vehicle ahead if it is partially blocked by pedestrians or other objects.

Complete attention is always required while driving, and you should be ready to take action and apply the brakes and/or steer the vehicle to avoid crashes.


If equipped, the I-AEB system may help avoid or reduce the harm caused by front-end crashes with crossing vehicles.

The system works when driving in a forward gear above 15 km/h (9 mph) and less than 80 km/h (50 mph). It can detect oncoming vehicles up to approximately 60 m (197 ft).

### **Vehicle Crossing the Path Ahead**

When there is a crossing vehicle detected approaching from the right or the left side that may lead to a collision, I-AEB provides a red flashing alert on the windshield and rapidly chimes or pulses the Safety Alert Seat. See Advanced Driver Assistance Systems 

⇒ 227. I-AEB can provide a boost to braking or automatically brake the vehicle.

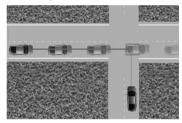

I-AEB can be set to Off, Alert, or Alert and Brake. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

### **Crossing Traffic Alert**

When your vehicle approaches an intersecting vehicle too rapidly and there is risk of a collision, a red warning graphic will flash on the windshield. Also, eight rapid high-pitched

chimes will sound, or the driver seat will pulse five times. The side of the seat that is pulsed and the location of the chimes will depend on the direction that the intersecting vehicle is detected from. When this collision alert occurs, the brake system may prepare for driver braking to occur more rapidly which can cause a brief, mild deceleration. Continue to apply the brake pedal as needed.



With Head-Up Display



Without Head-Up Display

### **Turning Across Oncoming Traffic Alert**

When your vehicle approaches another detected vehicle too rapidly, a red graphic will flash on the windshield. Also, eight rapid high-pitched chimes will sound from the front, or both sides of the Safety Alert Seat will pulse five times. When this Collision Alert occurs, the brake system may prepare for driver braking to occur more rapidly which can cause a brief, mild deceleration. Continue to apply the brake pedal as needed.



With Head-Up Display



Without Head-Up Display

### **Automatic Braking**

### **⚠** Warning

I-AEB may automatically brake or increase vehicle braking in situations when it may not be necessary or desired. Your vehicle could block the flow of traffic. I-AEB may respond to stationary or parked vehicles, signs, and other non-moving objects. To override AEB, firmly press the accelerator pedal, if it is safe to do so.

### **⚠** Warning

Using I-AEB while towing a trailer could cause you to lose control of the vehicle and crash. Turn the system to Alert or Off when towing a trailer.

If I-AEB detects it is about to crash into an intersecting vehicle, and the brakes have not been applied, I-AEB may automatically brake moderately or hard. This can help to avoid some crashes or lessen impact by reducing the speed of the vehicle. Always wear a seat belt, and check that all passengers are properly restrained. I-AEB can automatically

brake between 15 km/h (9 mph) and 80 km/h (50 mph). Automatic braking levels may be reduced under certain conditions, such as higher speeds.

I-AEB may slow the vehicle to a complete stop to try to avoid a potential crash. If this happens, I-AEB may engage the Electric Parking Brake (EPB) to hold the vehicle at a stop. Release the EPB or firmly press the accelerator pedal to continue driving.

I-AEB may also apply the brakes automatically when there is an intersecting vehicle at risk of collision and the system determines that the driver is not braking with sufficient force.

Minor brake pedal pulsations or pedal movement during this time is normal and the brake pedal should continue to be applied as needed.

#### Cleaning the System

If I-AEB does not seem to operate properly, cleaning the outside of the windshield in front of the rearview mirror may correct the issue.

### Front Pedestrian Braking (FPB) System

### **⚠** Warning

FPB does not provide an alert or automatically brake the vehicle, unless it detects a pedestrian or bicyclist. FPB may not detect pedestrians, including children, or bicyclists:

- When the pedestrian or bicyclist is not directly ahead, fully visible, or standing upright, or when part of a group.
- Due to poor visibility, including nighttime conditions, fog, rain, or snow.
- If the FPB sensor is blocked by dirt, snow, or ice.
- If the headlights or windshield are not cleaned or in proper condition.

Be ready to take action and apply the brakes. For more information, see *Defensive Driving* → 172. Keep the windshield, headlights, and FPB sensor clean and in good repair.

If equipped, the FPB system may help avoid or reduce the harm caused by front-end crashes with pedestrians and bicyclists when driving in a forward gear. FPB displays an amber indicator,  $\hat{\mathbf{X}}$ , when a nearby pedestrian or bicyclist is detected ahead. When approaching a detected pedestrian or bicyclist too quickly, FPB provides a red flashing alert on the windshield and rapidly chimes or pulses the driver seat. FPB can provide a boost to braking or automatically brake the vehicle. This system includes Intelligent Brake Assist (IBA), and the Automatic Emergency Braking (AEB) system may also respond to pedestrians or bicyclists. See Automatic Emergency Braking (AEB) ⇒ 244. Always wear a seat belt and ensure that all passengers are properly restrained.

The FPB system can detect and alert to pedestrians or bicyclists in a forward gear at speeds between 8 km/h (5 mph) and 80 km/h (50 mph). During daytime driving, the system detects pedestrians or bicyclists up to a distance of approximately 40 m (131 ft). During nighttime driving, system performance is very limited.

FPB can be set to Off, Alert, or Alert and Brake through vehicle settings. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Sustems.

## Detecting the Pedestrian or Bicyclist Ahead



FPB alerts and automatic braking will not occur unless the FPB system detects a pedestrian or bicyclist. When a nearby pedestrian or bicyclist is detected in front of the vehicle, the pedestrian ahead indicator will display amber.

#### **Front Pedestrian Alert**



#### With Head-Up Display



### Without Head-Up Display

When the vehicle approaches a pedestrian or bicyclist ahead too rapidly, the red FPB alert display will flash on the windshield. Eight rapid high-pitched chimes will sound from the front, or both sides of the Safety Alert Seat will pulse five times. When this Pedestrian Alert occurs, the brake system may prepare for driver braking to occur more rapidly which can cause a brief, mild deceleration. Continue to

apply the brake pedal as needed. Cruise control may be disengaged when the Front Pedestrian Alert occurs.

### **Automatic Braking**



FPB may alert or automatically brake the vehicle suddenly in situations where it is unexpected and undesired. It could falsely alert or brake for objects similar in shape or size to pedestrians or bicyclists, including shadows. This is normal operation and the vehicle does not need service. To override Automatic Braking, firmly press the accelerator pedal, if it is safe to do so.

### ⚠ Warning

Using the Front Pedestrian Braking system while towing a trailer could cause you to lose control of the vehicle and crash. Turn the system to Alert or Off when towing a trailer.

Automatic Braking can be disabled through vehicle settings. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Sustems.

If FPB detects it is about to crash into a pedestrian or bicyclist directly ahead, and the brakes have not been applied, FPB may automatically brake moderately or brake hard. This can help to avoid some very low speed pedestrian and bicyclist crashes or reduce pedestrian injury. FPB can automatically brake to detected pedestrians or bicyclists between 8 km/h (5 mph) and 80 km/h (50 mph). Automatic braking levels may be reduced under certain conditions, such as higher speeds.

FPB may slow the vehicle to a complete stop to try and avoid a potential collision with a pedestrian or bicyclist. If this happens, automatic braking may engage the Electric Parking Brake (EPB) to hold the vehicle at a stop. Firmly press the accelerator pedal to release automatic braking and the EPB.

### Cleaning the System

If FPB does not seem to operate properly, cleaning the outside of the windshield in front of the rearview mirror may correct the issue.

### Lane Change Alert (LCA)


### **⚠** Warning

LCA does not alert the driver to vehicles outside of the system detection zones, pedestrians, bicyclists, or animals. It may not provide alerts when changing lanes under all driving conditions. Failure to use proper care when changing lanes may result in injury, death, or vehicle damage. Before making a lane change, always check mirrors, glance over your shoulder, and use the turn signals.

If equipped, the LCA system is a lane-changing aid that assists drivers with avoiding lane change crashes that occur with moving vehicles in the side blind zone (or spot) areas or with vehicles rapidly approaching these areas from behind. The LCA warning display will light up in the corresponding outside mirror and will flash if the turn signal is on.

Side Blind Zone Alert (SBZA) is included as part of the LCA system.

#### **LCA Detection Zones**

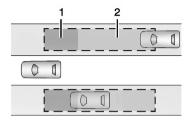

- 1. SBZA Detection Zone
- 2. LCA Detection Zone

The LCA sensor covers a zone of approximately one lane over from both sides of the vehicle, or 3.5 m (11 ft). The height of the zone is approximately between 0.5 m (1.5 ft) and 2 m (6 ft) off the ground. The Side Blind Zone Alert (SBZA) warning area starts at approximately the middle of the vehicle and goes back 5 m (16 ft). Drivers are also warned of vehicles rapidly approaching from up to 70 m (230 ft) behind the vehicle.

### **How the System Works**

The LCA symbol lights up in the side mirrors when the system detects a moving vehicle in the next lane over that is in the side blind zone or rapidly approaching that zone from behind.

A lit LCA symbol indicates it may be unsafe to change lanes. Before making a lane change, check the LCA display, check mirrors, glance over your shoulder, and use the turn signals.





Left Side Mirror Display

Right Side Mirror Display

When the vehicle is started, both outside mirror LCA displays will briefly come on to indicate the system is operating. When the vehicle is in a forward gear, the left or right side mirror display will light up if a moving vehicle is detected in the next lane over in that blind zone or rapidly approaching that zone. If the turn signal is activated in the same direction as a detected vehicle, this display will flash as an extra warning not to change lanes.

LCA can be disabled through vehicle personalization. To view available settings from the infotainment screen, touch Settings

> Vehicle > Collision/Detection Systems. If LCA is disabled by the driver, the LCA mirror displays will not light up.

## When the System Does Not Seem to Work Properly

The LCA system requires some driving for the system to calibrate to maximum performance. This calibration may occur more quickly if the vehicle is driven on a straight highway road with traffic and roadside objects (e.g., guardrails, barriers). During a trip, the LCA system is not operational until the vehicle first reaches a speed of 24 km/h (15 mph).

LCA displays may not come on when passing a vehicle quickly or for a stopped vehicle. LCA may alert to objects attached to the vehicle, such as a bicycle, or object extending out to either side of the vehicle. Attached objects may also interfere with the detection of vehicles. This is normal system operation; the vehicle does not need service.

LCA may not always alert the driver to vehicles in the next lane over, especially in wet conditions or when driving on sharp curves. The system does not need to be serviced. The system may light up due to guardrails, signs,

trees, shrubs, and other non-moving objects. This is normal system operation; the vehicle does not need service.

LCA may not operate when the LCA sensors in the left or right corners of the rear bumper are covered with mud, dirt, snow, ice, or slush, or in heavy rainstorms. For cleaning instructions, see "Washing the Vehicle" under Exterior Care 

⇒ 337. If the Driver Information Center (DIC) still displays the system unavailable message after cleaning both sides of the vehicle toward the rear corners of the vehicle, see your dealer.

If the LCA displays do not light up when moving vehicles are in the side blind zone or rapidly approaching this zone and the system is clean, the system may need service. Take the vehicle to your dealer.

### **Driving with a Trailer**

If equipped with Lane Change Alert (LCA), the LCA detection zones that extend back from the side of the vehicle do not move further back when a trailer is towed.

Use caution while changing lanes when towing a trailer.

#### **Side Bicycle Detection**

If equipped, the system may detect a bicyclist approaching from the side or rear of the vehicle. If this occurs, a chime will sound in the direction of the detection, and the Safety Alert Seat will

If this occurs, a chime will sound in the direction of the detection, and the Safety Alert Seat will pulse if enabled through vehicle settings. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

Bicyclist Detection is available when the vehicle is in D (Drive), P (Park), and for a short time after the vehicle is turned off.

If the vehicle detects a bicyclist when it is off, a DIC message may display and alert to the direction of the detection. In some cases, an Unavailable message may display. This is normal and does not mean that the system is broken.

#### **Detection Zones**

When the vehicle is in P (Park) or is turned off, a bicyclist can be detected 11 m (36 ft) behind the vehicle or 10 m (33 ft) to the side of the vehicle.


When the vehicle is in D (Drive), a bicyclist can be detected 3 m (10 ft) behind the vehicle or to the side of the vehicle.

### Turning the Feature On or Off

Bicyclist Detection can be turned on or off through vehicle settings. To view available settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems.

#### **Driver Attention Assist**

If equipped, Driver Attention Assist alerts the driver to pay closer attention to the road ahead. Driver Attention Assist uses a camera-based Driver Monitoring System. The Driver Monitoring System on the steering column continually monitors the driver's head movements and eye gaze location to determine if the driver is drowsy or distracted. Depending on the level of the driver's distraction or drowsiness, Driver Attention Assist will provide visual warnings, audible alerts, and Safety Alert Seat vibrations to gently guide the driver to refocus on the driving task.

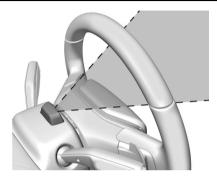

Sunglasses, hats, or other types of clothing that change the shape of the head may interfere with camera performance. To improve camera performance, raise or lower the steering wheel, wear lighter tinted glasses, or change the seat position.

Driver Attention Assist does not record video or audio. It is only active while driving with the feature enabled.

#### **How to Activate Driver Attention Assist**

The feature can be enabled or disabled through vehicle settings. To view available settings from the infotainment screen, select Settings > Vehicle > Driver Attention Assist.

### **Distracted Driving**

Depending on the attention level, Driver Attention Assist will display escalating alerts in the instrument cluster that advance from level one to level two as the attention level decreases. Depending on the driver's distraction level, the system will also send audible alerts or Safety Alert Seat vibrations, if equipped with Safety Alert Seat. See *Driver Attention Assist Light* 

→ 117.

If the system detects that you are severely distracted, it will display a timer for you to take action. If you remain unresponsive, the system will activate Automatic Emergency Braking and Lane Keep Assist, even if they are currently disabled, and reduce the vehicle speed. Driver Attention Assist can automatically adjust the sensitivity of Automatic Emergency Braking and Lane Keep Assist. See Lane Keep Assist (LKA) 

⇒ 253 and Automatic Emergency Braking (AEB) 
⇒ 244

If equipped with Super Cruise, the system will instead start Super Cruise, call OnStar, and bring the vehicle to a stop. See Super Cruise 

⇒ 214

The driver always retains full control of the vehicle and can cancel these interventions at any time. When the system detects that sufficient attention is restored, it will return to the original state of attention monitoring.

#### **Drowsy Driving**

The system monitors the driver for signs of extreme fatique, such as yawning or a change in blinking frequency. Driver Attention Assist provides escalating alerts that may include audible alerts and, if equipped with Safetu Alert Seat, vibrations, Escalating alerts will occur with increasing frequency. Not all types of alerts may occur during a drowsy event. The provided alerts range from when the driver is deemed severely tired, and requiring effort to stay awake, to fighting to stay awake, or drifting in and out of sleep.

When the maximum drowsiness alert occurs, the driver will be presented with the following options on the infotainment screen:

- Phone a Friend
- Start a Plaulist
- Navigate to Nearest Point of Interest (POI)

Select an option from the list and follow the instructions displayed on infotainment screen.

When you are extremely drowsy or asleep, a timer will appear for action to be taken. If you remain unresponsive, the sustem will activate Automatic Emergency Braking and Lane Keep Assist, even if they are currently disabled, and reduce the vehicle's speed. Driver Attention Assist can automatically adjust the sensitivity of Automatic Emergency Braking and Lane Keep Assist. See Lane Keep Assist (LKA) ⇔ 253 and Automatic Emergency Braking (AEB) ⇒ 244

If equipped with Super Cruise, the system will instead start Super Cruise, call OnStar, and bring the vehicle to a stop. See Super Cruise ⇒ 214

#### Cleaning the Camera

The camera lens cover on the steering column may become dirty over time. If this occurs, clean the lens cover with a soft cloth sprayed with glass cleaner. Wipe the lens gently, then dru it. Never use abrasive cloths, cleaners. or corrosive chemicals of any kind on the lens cover.

#### Limitations

Some factors can impact the performance of the Driver Attention Assist feature, causing it to not to function as intended. These include (but are not limited to):

- Damage to the Driver Monitoring System, camera, or lens.
- The camera being blocked by the steering wheel, hands, or objects.

If there is a problem with the system, a Driver Information Center message or icon in the instrument cluster may display.

## Lane Keep Assist (LKA)

## **⚠** Warning

The LKA system does not continuously steer the vehicle. It may not keep the vehicle in the lane or give a Lane Departure Warning (LDW) alert, even if a lane marking is detected

The LKA and LDW systems may not:

 Provide an alert or enough steering assist to avoid a lane departure or crash.

(Continued)

## Warning (Continued)

- Detect lane markings under poor weather or visibility conditions. This can occur if the windshield or headlights are blocked by dirt, snow, or ice, if they are not in proper condition, or if the sun shines directly into the camera.
- Detect road edges.
- Detect lanes on winding or hilly roads.

If LKA only detects lane markings on one side of the road, it will only assist or provide an LDW alert when approaching the lane on the side where it has detected a lane marking. Even with LKA and LDW, you must steer the vehicle. Always keep your attention on the road and maintain proper vehicle position within the lane, or vehicle damage, injury, or death could occur. Always keep the windshield, headlights, and camera sensors clean and in good repair. Do not use LKA in bad weather conditions.

## ⚠ Warning

Using LKA while towing a trailer or on slippery roads could cause loss of control of the vehicle and a crash. Turn the system off.

If equipped, LKA may help avoid crashes due to unintentional lane departures. This sustem uses a camera to detect lane markings. The LKA system can be ready to assist above approximately 50 km/h (31 mph). LKA may assist by gently turning the steering wheel if the vehicle approaches a detected lane marking. It may also provide a Lane Departure Warning (LDW) alert if the vehicle unintentionally crosses a detected lane marking. LKA will not assist or alert if the turn signal is active in the direction of the lane departure, or if it detects that you are accelerating, braking, or actively steering. LKA can be overridden by turning the steering wheel. If the system detects you are steering intentionally across a lane marker, the LDW may not be given. Do not expect the LDW to occur when you are intentionally crossing a lane marker.

#### **How the System Works**

The LKA camera sensor is on the windshield ahead of the rearview mirror.

To turn LKA on and off, press for the instrument panel to the left of the steering wheel

LKA may not be available in extremely cold temperatures of less than approximately -30° F(-34° C).

When on, /\ \ is white and changes green if LKA is available to assist and provide LDW alerts. It may assist by gently turning the steering wheel and display /\ \ as amber if the vehicle approaches a detected lane marking without using a turn signal in that direction. It may also provide an LDW alert by flashing /\ \ \ amber as the lane marking is crossed. Additionally, there may be three beeps on the right or left, depending on the lane departure direction.

#### **Take Steering**

The LKA system does not continuously steer the vehicle. If LKA does not detect active driver steering, an alert, chime, or DIC message may be provided. Move the steering wheel to dismiss.

# When the System Does Not Seem to Work Properly

The system performance may be affected by:

- · Close vehicles ahead.
- Sudden lighting changes, such as when driving through tunnels.
- Banked roads.
- Roads with poor lane markings, such as two-lane roads.

If the LKA system is not functioning properly when lane markings are clearly visible, cleaning the windshield may help.

A system unavailable message may display if the camera is blocked. The LKA system does not need service

LKA assistance and/or LDW alerts may occur due to tar marks, shadows, cracks in the road, temporary or construction lane markings, or other road imperfections. This is normal system operation; the vehicle does not need service. Turn LKA off if these conditions continue.

## Charging When to Charge

When the high voltage battery is low, an amber warning light may appear and the following charging messages may display on the Driver Information Center (DIC):

**CHARGE VEHICLE SOON:** Charge the battery as soon as possible.

#### REDUCED ACCELERATION DRIVE WITH CARE:

There is reduced accelerator pedal response and the remaining range value changes to LOW. Charge the vehicle immediately. See *Propulsion Power Messages* ♀ 128.

**OUT OF ENERGY, CHARGE VEHICLE NOW:** The battery charge is fully depleted. The vehicle will slow to a stop. Brake and steering assist will continue operating. Once stopped, turn the vehicle off.

## Plug-In Charging

#### Caution

To avoid damage to the vehicle, make sure the charging cord plug is in good condition, is not worn or damaged, and is connected securely to the vehicle's charging port. If vehicle charging is intermittent, disconnect the cord and inspect for damage. An excessively worn or damaged AC or DC charging cord plug may result in an intermittent connection and potential damage to the vehicle's charging port.

Do not allow the vehicle to remain in temperature extremes for long periods without being driven or plugged in. When temperatures are below 0 °C (32 °F) and above 32 °C (90 °F), plug in the vehicle to maximize high voltage battery life.

In extreme temperature conditions, a full charge will take additional time.

Charging slows down as the battery recharges. Charge the battery to 80% for daily driving, or when driving in mountainous terrain. The vehicle can be charged above 80% for long trips when not driving in mountainous terrain.

GM recommends the following:

- Unless your drive requires a full charge, charge the high voltage battery to 80% or less.
- Avoid allowing the high voltage battery to fall below 20% charged, if possible. See *Battery* ♀ 300.
- If your route includes steep mountain terrain or if you are towing a trailer, it is important that your battery charge level is 80% or less to maximize regenerative braking performance.

It is normal to hear fans, pumps, and electrical devices clicking while the vehicle is turned off and charging.

The vehicle does not require indoor charging area ventilation before, during, or after charging.

The vehicle cannot be driven while the charge cord is plugged into the vehicle.

There are several infotainment screens that will display depending on the current charging status. See *Charging* ♀ 118.

#### **Charging Override**

A CHARGING OVERRIDE/INTERRUPTION OCCURRED message may display to indicate that a charging override or interruption has occurred due to one or more of the following events:

- Override of the charge settings by the owner.
- Unintended interruption of AC power at the vehicle's charge port.
- Interruption of charging by the utility company.

#### **AC Charging**

If equipped, a loss of AC power alert may sound briefly if AC power is lost for over one minute. This sound alert can be turned off. See Charging 

⇒ 118.



**AC Charge Cord Vehicle Plug** 

#### To Start AC Charging

1. Put the vehicle in P (Park).



2. Push and release the rearward edge of the charge port door to open it.

In cold weather conditions, ice may form around the charge port door. Remove ice from the area before attempting to open or close the charge port door.

- 3. Plug the charge cord into the electrical outlet. To verify the charge cord status, see Electrical Requirements for Battery Charging \$\times 268 and Charge Cord \$\times 263. For instructions to set cord limit settings for a charge session, see Charging ⇒ 118.
- 4. Plug in the AC charge cord into the vehicle charge port. Make sure the AC vehicle plug is fully connected to the AC charge port. If it is not properly connected, the vehicle may not charge.
- 5. Verify that the Headlight Charging Status Indicator (CSI) illuminates on the headlights (if enabled), charge port light turns on, and an audible chirp occurs. See Charging Status Feedback \$\simes 259.

#### To End AC Charging

1. Unlock the charge cord from the vehicle by pressing the button on the top of the charge cord plug. Unplug the charge cord from the vehicle.

- 2. Close the charge port door by pressing firmly in the center until it latches.
- 3. Unplug the charge cord from the electrical outlet
- 4. Place the charge cord into the storage case.

#### DC Charging

DC Charging Station Hardware



## **⚠** Warning

Do not use the charging station if the handle has defects such as cracks, exposed wires, burnt or missing pins, or any other damage. A damaged handle may result in personal injury and/or damage to the vehicle, the charging port or other property.

You can charge the vehicle using DC charging equipment typically found at service stations and other public locations.

This vehicle is compatible with a Combined Charging System 2 (CCS2) connector. Check the charging station DC vehicle plug for compatibility with the DC charge port on this vehicle

When recharging at a DC charge station, the charging cable connected to the vehicle must be less than 10 m (33 ft) in length to meet functionality and regulatory requirements.

For maximum charging performance, and to prevent charging interruptions or damage to the high voltage battery and vehicle:

- Remove your hands from the charging handle once it has been plugged in. If not done, this can cause a charging interruption.
- Ensure that the charge cord plug clicks.

Follow the steps listed on the charging station to perform a DC vehicle charge.

If for any reason DC charging does not begin or is interrupted, check the DC charging station display for messages. Unplug the cord to restart the DC charging process.

#### To Start DC Charging

#### Caution

Do not attempt to disconnect the DC vehicle plug while charging is active. This action may damage the vehicle or charging station hardware.

1. Put the vehicle in P (Park).



 Push and release the rearward edge of the charge port door to open it.
 In cold weather conditions, ice may form around the charge port door. Remove ice from the area before attempting to open or close the charge port door.



- 3. Unlatch the DC charging dust cover and lower it fully.
- 4. Plug in the DC charge cord into the vehicle charge port. Make sure that the DC vehicle plug is fully connected to the DC charge port. If it is not properly connected, the vehicle may not charge. Check the Driver Information Center (DIC) to make sure the vehicle plug is connected properly.
- 5. Follow the steps listed on the charging station to start charging.
- When charging is active, the DC vehicle plug is locked to the DC charge port and cannot be disconnected.

 Verify that the Headlight Charging Status Indicator (CSI) illuminates on the headlights (if enabled), charge port light turns on, and an audible chirp occurs. See Charging Status Feedback 

259.

#### To End DC Charging

When the vehicle is fully charged, charging automatically stops and the plug unlocks. You can also manually stop charging using the button on the DC vehicle plug, the controls at the charging station, or by tapping "Stop" on the Charging screen on the infotainment display.

If the vehicle plug does not unlock from the vehicle charge port after a charge, contact your dealer or use the emergency manual charge cord release. See "Emergency Manual Charge Cord Release" later in this section

- Unplug the DC vehicle plug from the DC charge port on the vehicle and close the dust cover.
- 2. Close the charge port door by pressing firmly in the center until it latches.

#### **Emergency Manual Charge Cord Release**

This vehicle is equipped with an emergency manual charge cord release in the event the DC vehicle plug does not release normally.



1. Reach around the tire to find the emergency manual charge cord release.



Pull the emergency manual charge cord release handle. The DC charge cord will release.

#### To Stop AC or DC Charging

Use the controls on the charging station to stop the charge process at any time.

To stop charging when inside the vehicle, use the Stop Charge button on the Charging screen. See "Active Charging" under *Charging* ⇔ 118.

## **Delayed Charging Override**

To override a delayed charge event, unplug the charge cord from the charge port and then plug it back in within five seconds. A single audible chirp will sound and charging will begin immediately.

To cancel an override, unplug the charge cord, wait for 10 seconds, and then plug the charge cord back in. A double audible chirp will sound and delayed charging will resume.

See *Charging* ♥ 118 for advanced charge scheduling options.

## **Charging Status Feedback**

This vehicle is equipped with a charge port light and a headlight Charge Status Indicator.



When the charge cord is plugged in, a color indicates the charging status.

The headlight Charge Status Indicator bar is located on the headlights. As charging occurs, the white light bars on the headlights fill towards the center of the vehicle.

Refer to the table for charging status feedback:

Charge Port Light Color	Headlight Charge Status Indicator	Sound	Description
Solid Blue	None	None	Initial connection is successful.
Pulsing Blue	Single light bar flashing	Two audible chirps	Charging is delayed by charging screen or by a total utility interruption. Charging will begin later. See Utility Interruption of Charging    268. Utility Override ("Demand Response").
Blinking Green (the longer the blink, the higher the state of charge)	Solid light bars represent the available state of charge. The remaining light bars build in a swipe pattern towards the center of the vehicle.	One audible chirp	Vehicle is actively charging.
Solid Green	All light bars are solid	None	Charging is complete.

Charge Port Light Color	Headlight Charge Status Indicator	Sound	Description
			Error or charging has not initialized at the charging station.
Pulsing Red	Off	None	Check the charge cord connection. There may be no power supplied to the vehicle. Follow the instructions at the charging station to initialize charging.
None (upon plug-in)	None	None	Check the charge cord connection.
None (after blue and green lights up)	None	None	Check the charge cord connection. If the connection is good, this may indicate a power failure or a total utility interruption, and charging will begin later. It may also occur if a high voltage charging system fault is detected. See Utility Interruption of Charging ⇒ 268 or Service Vehicle Soon Light (Propulsion System Failure) ⇒ 110.
None	None	Three audible chirps when the driver door is opened	The charge port door is open.

Charge Port Light Color	Headlight Charge Status Indicator	Sound	Description
Flashing Green (the longer the blink, the higher the state of charge)	None	Four audible chirps	The currently set departure time cannot be met. May be due to charging power level or charge schedule setting factors. Refer to the charging screen for actual charge completion time. See <i>Charging</i> \$\infty\$ 118.
Pulsing Green	None	One audible chirp	The vehicle is actively discharging through the vehicle to vehicle cord.
None	None	Four audible chirps	When using Persistent Power, the vehicle is approaching the Range Reserve Limit or the Timer (if enabled) to end the session.

## **Charge Cord**

This vehicle may come with a portable charge cord. Read and follow all operation and troubleshooting instructions, warnings, and limitations that come with the charge cord before use.

#### **IMPORTANT SAFETY INSTRUCTIONS**



## **⚠** Danger

This symbol indicates risk of electrical shock.

(Continued)

#### Danger (Continued)

If anything on the charge cord is broken, do not touch components with this symbol. To avoid injury, do not touch any metal on the charge cord as this could cause electrical current to flow to your body.

## ⚠ Warning

Using a vehicle charge level that exceeds the electrical circuit or electrical outlet capacity may start a fire or damage the electrical circuit. Use the lowest vehicle charge level until a qualified electrician inspects the electrical circuit capacity. Use the lowest vehicle charge level if the electrical circuit or electrical outlet capacity is not known.

The charge cord must be on a dedicated individual branch circuit. A dedicated circuit ensures that there is enough power available without overloading the system.

If a dedicated circuit is not used, the circuit breaker could trip or open. If a dedicated circuit is not available, contact a qualified electrician. See "Grounding Instructions" later in this section.

## **⚠** Warning

When using electric products, basic precautions should always be followed, including the following:

- Read all the safety warnings and instructions before using this product.
   Failure to follow the warnings and the instructions may result in electric shock, fire, and/or serious injury.
- Never leave children unattended near the vehicle while the vehicle is charging and never allow children to play with the charge cord.
- If the plug provided does not fit the electrical outlet, do not modify the plug. Arrange for a qualified electrician to inspect the electrical outlet.
- Do not put fingers into the electric vehicle connector.

## **⚠** Warning

- To reduce the risk of fire, installations shall comply with the requirements of Electric Code IEC 60364 – Electrical Installations in Buildings and any other standard and regulation that apply depending on the region in which the unit is being installed. The installer shall comply with any additional local requirements mandated by the country and/or municipality.
- Do not use this product if the flexible power cord or the electric vehicle cable is frayed, has broken insulation, or shows any other signs of damage.
- Do not use this product if the enclosure or the vehicle plug is broken, cracked, open, or shows any other indication of damage.
- The plug must be plugged into an appropriate electrical outlet that is properly installed in accordance with all local codes and ordinances. Do not modify the plug provided with

(Continued)

#### Warning (Continued)

the product. If the plug does not fit the electrical outlet, have a proper electrical outlet installed by a qualified electrician. If ground is missing, the charge cord indicators will indicate an electrical system fault and the vehicle may not charge.

## ⚠ Warning

Improper use of portable electric vehicle charge cords may cause a fire, electrical shock, or burns, and may result in damage to property, serious injury, or death.

- Do not use extension cords, multi-outlet power strips, splitters, grounding adapters, surge protectors, or similar devices.
- Do not use an electrical outlet that is worn or damaged, or will not hold the plug firmly in place.
- Do not use an electrical outlet that is not properly grounded.

(Continued)

#### Warning (Continued)

- Do not use an electrical outlet that is on a circuit with other electrical loads.
- Do not wrap the charge cord around the housing of the control box.

## **⚠** Warning

Connecting charging components incorrectly or to a damaged outlet can cause vehicle or property damage, personal injury, or death. When charging your vehicle, ensure all components are connected properly, there is no damage, and the outlet has power.

## ⚠ Warning

Disconnecting the charge cord from the grid outlet while charging can result in damage and/or injury. Do not disconnect while the vehicle while charging.

## ⚠ Warning

Water, moisture, and other foreign objects can pose a risk when using the charge cord. When charging outdoors, plug into an electrical outlet that is weatherproof and avoid situations where water can run along the charge cord to the vehicle inlet or the grid outlet. Do not place the control box and charge cord in a location where it may be submerged in water. Do not use the charge cord in severe weather conditions.

## **⚠** Warning

Check the electrical outlet/plug while charging and discontinue use if the electrical outlet/plug appears hot. Using a hot electrical outlet/plug could result in vehicle or property damage, personal injury, or death. Have the electrical outlet serviced by a qualified electrician.

## **⚠** Warning

Water, moisture, and other foreign objects can damage the portable charge cord. Damage to the charge cord could result in electrical malfunction, vehicle damage, electrical shock, or death. Protect the portable charge cord against water, moisture and foreign objects at all times.

## **⚠** Warning

- Charging an EV can stress a building's electrical system more than a typical household appliance.
- Before plugging the charge cord into any electrical outlet, have a qualified electrician inspect and verify the electrical system (electrical outlet, wiring, junctions, and protection devices) is suitable for a heavyduty service.

(Continued)

#### Warning (Continued)

- Electrical outlets may wear out with normal usage or may be damaged over time, making them unsuitable for EV charging.
- Check the electrical outlet/plug while charging and discontinue use if the electrical outlet/plug appears hot, then have the electrical outlet serviced by a qualified electrician.
- Use an electrical outlet that is weatherproof while charging outdoors. Make sure that the outlet complies with all the standards and regulations for outdoors usage by region.
- Do not attempt to use the charge cord with non-utility supplied electrical power sources such as backup generating equipment.
- If the charge cord overheats, remove from direct sunlight.
- Disconnect the charge cord from the vehicle before disconnecting the attachment plug from the wall.

(Continued)

#### Warning (Continued)

 When charging your vehicle, ensure all components are connected properly, there is no damage, and the outlet has power.

## **⚠** Warning

When using the charge cord, ensure that ambient temperature and any environmental condition (i.e. altitude) are within the range of operation specified in the instructions that come with the cord. Ensure that the charge cord is stored properly and in a location that meets the range of temperature and environmental conditions specified in the instructions that come with the cord.

#### Do not:

 Place the control box and charge cord in a location where it may be submerged in water (or other liquid substances) or subject to physical abuse.

(Continued)

267

#### Warning (Continued)

- Coil the charge cord too tightly, or store the charge cord in a location where it may be crushed, stressed, or forced into a space.
- Stress, excessively rotate, or apply excessive pulling force while wrapping the cord
- Wrap the charge cord around the housing of the control box.
- Store the charge cord in places where water or dust may damage or pose a risk to the integrity of the cord.

#### Caution

Using non-approved electrical sources to charge can cause damage to the charging system. Do not attempt to use the charge cord with non-utility supplied electrical power sources such as backup generating equipment.

#### Caution

Electrical outlets may wear out with normal usage or may be damaged over time making them unsuitable for electric vehicle charging. Regularly inspect outlets for wear and tear. Do not use if worn or damaged.

#### Troubleshooting



If there are signs of melting or scorching, do not touch the charge cord or attachment plug. Have a qualified electrician inspect and repair the issue.

Confirm that the attachment plug is not too hot to grasp before disconnecting the charge cord from the vehicle.

If it is not hot, manually reboot the charge cord by unplugging and plugging the attachment plug back into the electrical outlet. If the same fault reoccurs, test the charge cord with a different electrical outlet.

The charge cord monitors temperature at several locations and may reduce charging power or interrupt charging if temperatures

become too high. The charge cord status indicators illuminate and identify this fault. In hot climates, move the charge cord away from direct sunlight and/or hot surfaces such as asphalt pavement for approximately 30 minutes.

If there are no signs of damage, check how firm the fit of the plug is. If the plug easily pulls away from the electrical outlet, test the plug on a known good electrical outlet. If the fault condition returns, have your charge cord inspected by your dealership. If the fault does not return, stop using the suspected circuit and have a qualified electrician inspect and repair the issue.

#### **Grounding Instructions**

## **⚠** Warning

Improper connection of the charge cord ground may cause electrical shock. Check with a qualified electrician if there is doubt as to whether the charge circuit is properly grounded. Do not modify the plug provided with the product. If it will not fit the electrical outlet, have a proper electrical outlet installed by a qualified electrician.

The charge circuit must be grounded. If the charge circuit should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord that has an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

## **Utility Interruption of Charging**

Utility companies may limit or completely block electrical power grid use to balance electricity demand and supply. If electrical grid power is limited, it will take longer than normal to charge your vehicle. If electrical grid power is completely blocked, your vehicle will not charge until the interruption expires.

During a charging interruption:

- A message displays on the instrument cluster indicating a utility interruption has occurred.
- Changing the charge mode to immediate charging or performing a delayed charging override will not resolve the interruption.

 Leave your vehicle plugged so it will automatically resume charging once the interruption expires.

#### **Managed Charging**

If you have enrolled in a managed charging program, you may receive a text message or notification in your myGMC/myOwner app with more details about the utility interruption, including details on how to optout, if applicable.

#### **Charging Station Troubleshooting**

If the vehicle does not begin charging after you plug it in to a residential 240-volt charging station:

- 1. Verify that the charge mode is not set to a delayed charging override.
- 2. Verify that the charging station circuit breaker is not tripped.
- Plug the portable charge cord into the wall outlet, verify that the indicator light on the charge cord is solid green, and connect it to the vehicle. See "Charge Cord Status Indicators" in Charge Cord 

  263.

4. If the vehicle charges with the portable charge cord and a different 240-volt charging station, such as a public station, there may be a problem with the charging station. Contact the charging station manufacturer for service.

## Electrical Requirements for Battery Charging

The vehicle is designed for compatibility with most standard vehicle charging equipment in the region of sale. Check for charger compatibility before purchasing a charger.

See Charge Cord \$\simeq\$ 263.

# Trailer Towing General Towing Information

## **⚠** Warning

You can lose control when towing a trailer if the correct equipment is not used or the vehicle is not driven properly. For example, if the trailer is too heavy or the trailer brakes are inadequate for the load, the vehicle

(Continued)

## Warning (Continued)

may not stop as expected. You and others could be seriously injured. The vehicle may also be damaged, and the repairs would not be covered by the vehicle warranty. Pull a trailer only if all the steps in this section have been followed. Ask your dealer for advice and information about towing a trailer with the vehicle.

To tow a disabled vehicle, see *Transporting a Disabled Vehicle* \$\simes 336.

For more trailer towing information, see the following sections:

- Driving Characteristics and Towing Tips \$\sip\$269

# Driving Characteristics and Towing Tips

#### **Driving with a Trailer**

Trailering is different than just driving the vehicle by itself. Trailering affects vehicle handling, acceleration, braking, and durability. Successful and safe trailering requires proper use of the correct equipment.

The following information has many timetested, important trailering tips and safety rules. Many of these are important for your safety and that of your passengers. Read this section carefully before towing a trailer.

#### When towing a trailer:

- Follow all state and local laws that apply to trailer towing. These requirements vary from state to state.
- Install extended side view mirrors on your vehicle if your visibility is limited or restricted while towing. State laws may require the use of extended side view mirrors.
- Do not tow a trailer during the first 800 km (500 mi) of vehicle use to prevent damage to the vehicle.

- Do not drive over 80 km/h (50 mph) and do not make starts at full acceleration during the first 800 km (500 mi) of trailer towing.
- Tow in D (Drive). If equipped, Tow/Haul Mode is recommended for heavier trailers.
   See Driver Mode Control ⇒ 197.

If equipped, the following driver assistance features should be turned off when towing a trailer, or may turn off automatically when a trailer is detected:

- Park assist
- Automatic Parking Assist
- Reverse Automatic Braking
- Rear Cross Traffic Alert
- Rear Cross Traffic Braking
- Lane Change Alert

Automatic Emergency Braking, and Front Pedestrian Braking should be set to Alert unless equipped with Super Cruise.

Towing a trailer requires experience. The combination of the vehicle and trailer is longer and not as responsive as the vehicle itself. Become familiar with handling and braking by driving on a level road surface before driving on public roads.

The trailer structure, the tires, and the brakes must all be rated to carry the intended cargo. Inadequate trailer equipment can cause the combination to operate in an unexpected or unsafe manner. Before driving, inspect all trailer hitch parts and attachments, safety chains, electrical connectors, lights, tires, and mirrors. See *Towing Equipment* ⇒ 276. If the trailer has electric brakes, start the combination moving and then manually apply the trailer brake controller to check that the trailer brakes work. During the trip, occasionally check that the cargo and trailer are secure and that the lights and any trailer brakes are working.

#### **Towing with a Stability Control System**

When towing, the stability control system might be heard. The system reacts to vehicle movement caused by the trailer, which mainly occurs during cornering. This is normal when towing heavier trailers.

#### **Following Distance**

Stay at least twice as far behind the vehicle ahead as you would when driving without a trailer to help avoid heavy braking and sudden turns.

#### **Passing**

More passing distance is needed when towing a trailer. The combination of the vehicle and trailer will not accelerate as quickly and is much longer than the vehicle alone. It is necessary to go much farther beyond the passed vehicle before returning to the lane. Pass on level roadways. Avoid passing on hills if possible.

#### **Backing Up**

Hold the bottom of the steering wheel with one hand. To move the trailer to the left, move that hand to the left. To move the trailer to the right, move that hand to the right. Always back up slowly and, if possible, have someone guide you.

#### **Making Turns**

#### Caution

Turn more slowly and make wider arcs when towing a trailer to prevent damage to your vehicle. Making very sharp turns could cause the trailer to contact the vehicle.

Make wide turns when towing to prevent the trailer from crossing over soft shoulders or curbs, or striking road signs, trees, or other objects. Always signal turns well in advance. Do not steer or brake suddenly.

#### **Towing on Grades**

Reduce speed before descending a long or steep downhill grade. Use regenerative braking to help slow the vehicle or maintain speed by keeping the vehicle in gear and limiting the initial battery charge to 80% or less. Avoid using Regen on Demand. See Hill and Mountain Roads 

79.

### **Viewing Systems**

#### **Parking on Hills**



To prevent serious injury or death, always park your vehicle and trailer on a level surface when possible.

When parking your vehicle and your trailer on a hill:

- Press and hold the brake pedal, but do not shift into P (Park) yet. Turn the wheels toward the curb if facing downhill or into traffic if facing uphill.
- 2. Have someone place chocks under the trailer wheels
- When the wheel chocks are in place, gradually release the brake pedal to allow the chocks to support the load of the trailer.

- Reapply the brake pedal. Then apply the Electric Parking Brake (EPB) and shift into P (Park).
- 5. Release the brake pedal.

#### Leaving After Parking on a Hill

- 1. Apply and hold the brake pedal.
  - 1.1 Start the vehicle.
  - 1.2 Shift into the desired gear.
  - 1.3 Release the parking brake.
- 2. Let up on the brake pedal.
- 3. Drive slowly until the trailer is clear of the chocks.
- 4. Stop and have someone pick up and store the chocks.

## Launching and Retrieving a Boat Backing the Trailer into the Water

## 

- Have all passengers get out of the vehicle before backing onto the sloped part of the ramp. Lower the driver and passenger side windows before backing onto the ramp. This will provide a means of escape in the unlikely event the vehicle slides into the water.
- If the boat launch surface is slippery, have the driver remain in the vehicle with the brake pedal applied while the boat is being launched. The boat launch can be especially slippery at low tide when part of the ramp was previously submerged at high tide. Do not back onto the ramp to launch the boat if you are not sure the vehicle can maintain traction.
- Do not move the vehicle if someone is in the path of the trailer. Some parts of the trailer might be underwater and not visible to people who are assisting in launching the boat.

#### **Caution**

If the vehicle tires begin to spin and the vehicle begins to slide toward the water, remove your foot from the accelerator pedal and apply the brake pedal. Seek help to have the vehicle towed up the ramp.

Disconnect the trailer wiring before backing the trailer into the water to prevent damage to the electrical circuits. Reconnect the wiring to the trailer after removing the trailer from the water. If the trailer has electric brakes that can function when the trailer is submerged, leave the electrical trailer connector attached to maintain trailer brake functionality while on the boat ramp.

#### To Back the Trailer Into the Water

- Slowly back down the boat ramp until the boat is floating, but no further than necessary.
- 2. Press and hold the brake pedal, but do not shift into P (Park).
- 3. Have someone place chocks under the front wheels of the vehicle.

- 4. Gradually release the brake pedal to allow the chocks to support the load of the trailer.
- 5. Reapply the brake pedal. Then, apply the parking brake and shift into P (Park).
- 6. Release the brake pedal.

#### **Pulling the Trailer from the Water**

- 1. Press and hold the brake pedal.
- 2. Start the vehicle and shift into D (Drive) or L (Low).
- 3. Release the parking brake.
- 4. Let up on the brake pedal.
- 5. Drive slowly until the tires are clear of the chocks
- 6. Stop and have someone pick up and store the chocks.
- 7. Slowly pull the trailer from the water.

#### Maintenance when Trailer Towing

A vehicle used to tow trailers requires service more often. See *Maintenance Schedule* \$\infty\$ 348. It is especially important to check the cooling system and brake system before and during each trip.

Check periodically that all nuts and bolts on the trailer hitch are tight.

#### **Cooling the Vehicle When Trailer Towing**

The cooling system may temporarily overheat during severe operating conditions. See Cooling System 

≥ 295.

## **Trailer Towing**

#### **Trailer Weight**

## **⚠** Warning

You and others could be seriously injured or killed if the trailer is too heavy or the trailer brakes are inadequate for the load. The vehicle may be damaged, and the repairs would not be covered by the vehicle warranty.

Only tow a trailer if all the steps in this section have been followed. Ask your dealer for advice and information about towing a trailer.

Safe trailering requires monitoring the weight, speed, altitude, road grades, outside temperature, and how frequently the vehicle is used to tow a trailer.

### **Trailer Weight Ratings**

When towing a trailer, the combined weight of the vehicle, vehicle contents, trailer, and trailer contents must be below all of the maximum weight ratings for the vehicle, including:

- Gross Combined Weight Rating
- Gross Vehicle Weight Rating
- Maximum Trailer Weight Rating
- Gross Axle Weight Rating-Rear
- Maximum Trailer Tongue Weight Rating

See "Weight-Distributing Hitch and Adjustment" under *Towing Equipment* \$\times 276\to determine if equalizer bars are required to obtain the maximum trailer weight rating.

See "Trailer Brakes" under *Towing Equipment* 

⇒ 276 to determine if brakes are required based on your trailer's weight.

The only way to be sure the weight ratings are not exceeded is to verify with a scale.

#### **Gross Combined Weight Rating**

Gross Combined Weight Rating is the total allowable weight of the completely loaded vehicle and trailer including any passengers, cargo, equipment, and accessories. Do not

 
exceed the Gross Combined Weight Rating for your vehicle. The Gross Combined Weight Rating for the vehicle is on the Trailering Information Label

To check that the weight of the vehicle and trailer are within the GCWR for the vehicle, follow these steps:

To check that the weight of the vehicle and trailer are within the Gross Combined Weight Rating for the vehicle, follow these steps:

- 1. Start with the "curb weight" from the Trailering Information Label.
- 2. Add the weight of the trailer loaded with cargo and ready for the trip.
- 3. Add the weight of all passengers.
- 4. Add the weight of all cargo in the vehicle.
- Add the weight of hitch hardware such as a draw bar, ball, load equalizer bars, or sway bars.
- 6. Add the weight of any accessories or aftermarket equipment added to the vehicle.

The Gross Combined Weight Rating can also be confirmed by weighing the vehicle and trailer on a public scale. The vehicle and trailer should be loaded for the trip with passengers and cargo.

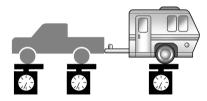

#### **Gross Vehicle Weight Rating**

For information about the vehicle's maximum load capacity, see *Vehicle Load Limits* ⇔ 182. When calculating the Gross Vehicle Weight Rating with a trailer attached, the trailer tongue weight must be included as part of the weight the vehicle is carrying.

#### **Maximum Trailer Weight**

 
The maximum trailer weight rating is calculated assuming the tow vehicle has a driver, a front seat passenger, and all required trailering equipment. The maximum trailer weight rating represents the heaviest trailer the vehicle can tow, but it may be necessary to reduce the trailer weight to stay within the Gross Combined Weight Rating, Gross Vehicle Weight Rating, maximum trailer tongue load, or Gross Axle Weight Rating-Rear. This is especially true for heavier vehicles with high option content.

Use the tow rating chart to determine how much the trailer can weigh, based on the vehicle model, powertrain, and trailering options.

Vehicle	Gross Combined Mass/Weight Rating (GCMR/GCWR)	
Extended Electric Range	8,935 kg (19,700 lb)	
Note Maximum Trailer Weight Rating = GCWR-GVWR Maximum Tongue Load = Max Trailer Weight Rating x 0.10 (10%)		

#### **Rear Gross Axle Weight Rating**

The Rear Gross Axle Weight Rating is the total weight the vehicle's rear axle can support. Do not exceed the Rear Gross Axle Weight Rating for the vehicle with the tow vehicle and trailer fully loaded for the trip, including the weight of the trailer tongue. If using a weight-distributing hitch, do not exceed the Rear Gross Axle Weight Rating before applying the weight distribution spring bars.

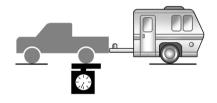


For additional assistance with trailering or additional information, see your dealer.

#### **Maximum Trailer Tongue Weight Rating**

The maximum trailer tongue weight rating is the allowable trailer tongue weight that the vehicle can support using a conventional trailer hitch. It may be necessary to reduce

the overall trailer weight to stay within the maximum trailer tongue weight rating while still maintaining the correct trailer load balance

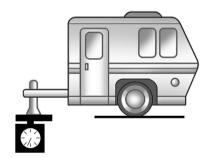


The trailer tongue weight contributes to the Gross Vehicle Weight. Gross Vehicle Weight includes the curb weight of your vehicle, any passengers, cargo, equipment and the trailer

tongue weight. Vehicle options, passengers, cargo, and equipment reduce the maximum allowable tongue weight the vehicle can carry, which also reduces the maximum allowable trailer weight.

#### Trailer Load Balance

 The correct trailer load balance must be maintained to ensure trailer stability. Incorrect load balance is a leading cause of trailer sway.

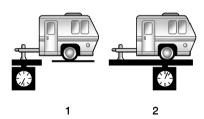

After loading the trailer, separately weigh the trailer and trailer tongue. Calculate the trailer load balance percentage to see if the weights and distribution are appropriate for your vehicle. If the trailer weight is too high, it may be possible to transfer some of the cargo into your vehicle. If the trailer tongue weight is too high or too low, it may be possible to rearrange some of the cargo inside of the trailer.

Do not exceed the maximum allowable tongue weight for your vehicle. Use the shortest hitch extension available to position the hitch ball closer to your vehicle. This will help reduce the effect of the trailer tongue weight on the trailer hitch and the rear axle.

If a cargo carrier is used in the trailer hitch receiver, choose a carrier that positions the load as close to the vehicle as possible. Make sure the total weight, including the carrier, is no more than half of the maximum allowable tongue weight for the vehicle or 227 kg (500 lb), whichever is less.

## **Towing Equipment**

#### Hitches

## **⚠** Warning

In order to avoid serious injury or property damage, always follow the hitch manufacturer's instructions when securing your draw bar/coupling device to the vehicle's hitch receiver.

Ensure that the draw bar/coupling device is secured with a locking retainer pin or other means such that rotation of the pin or locking mechanism will not cause the pin to back out or loosen during use. Failure to correctly secure the draw bar/coupling device to the receiver can result in separation of the hitch/receiver while towing.

Always use the correct hitch equipment for your vehicle. Crosswinds, large trucks going by, and rough roads can affect the trailer and the hitch.

Proper hitch equipment for your vehicle helps maintain control of the vehicle-trailer combination. Many trailers can be towed using a weight-carrying hitch which has a coupler latched to the hitch ball, or a tow eye latched to a pintle hook. Other trailers may require a weight-distributing hitch that uses spring bars to distribute the trailer tongue weight between your vehicle and trailer axles.


#### **Conventional Hitch**

A conventional hitch is bolted to the frame or cross member of the tow vehicle, and is generally rated Class 2, 3, 4, or 5.

#### Weight-Distributing Hitch and Adjustment

A weight-distributing hitch may be useful with some trailers. Use the following guidelines to determine if a weight-distributing hitch is required.

Maximum Trailer Weight	Weight Distributing Hitch	Hitch Distribution
Up to 3 175 kg (7,000 lb)	Optional	50%
Over 3 175 kg (7,000 lb)	Required	50%

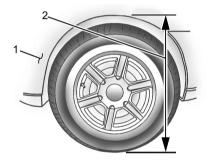

- 1. Front of Vehicle
- 2. H1/H2 Body to Ground Distance

## Adjusting the Equalizer Bars with Air Suspension

- Adjust the vehicle air suspension to Normal Ground Clearance Height. See Air Suspension 

  201
- 2. Position the truck so that the trailer is ready to connect. Keep trailer detached.
- Enable air suspension Service mode using the infotainment screen. See "Service Mode" under Air Suspension 

  201.
- 4. Measure the height of the top of the front wheel opening at the fender to the ground (H1).
- Attach the vehicle to the trailer. Do not attach the weight distribution bars at this time.

- Measure the height of the top of the front wheel opening on the fender to the ground (H2).
- Install and adjust the tension in the weight distributing bars per the manufacturers' recommendations so that the height of the front fender is approximately H2-[(H2-H1)/2] (half way between the two measured ride heights).
- 8. Disable "Service mode".
- 9. Air suspension will automatically adjust ride height following Step 8.
- Visually inspect the trailer and weightdistributing hitch to ensure that the manufacturer's recommendations have been met.

Measurement	Height Example 1500 (mm)
H1	1000
H2	1050
H2-H1	50
(H2-H1)/2	25
H2-[(H2-H1)/2]	1025

Consider using mechanical sway controls with any trailer. Ask a trailering professional about sway controls or see the trailer manufacturer's recommendations and instructions.

#### **Leveling the Trailer**


## **⚠** Warning

Always level the trailer front-to-back using the correct trailer hitch drawbar. Towing with a trailer that is not level can result in incorrect loading of trailer axles, springs, and tires, which can lead to trailer sway, trailer damage, and/or trailer tire blowouts

(Continued)

#### Warning (Continued)

resulting in an accident causing potential injury and/or death. Do not attempt to tow a trailer that is not level.

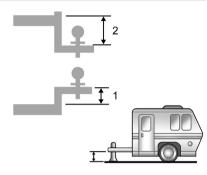

- 1. Drawbar rise
- 2. Drawbar drop

Select the correct hitch drawbar rise or drop to level the trailer.

#### Tires

- Do not tow a trailer while using a compact spare tire on the vehicle.
- Tires must be properly inflated to support loads while towing a trailer. See Tires 

  316 for instructions on proper tire inflation.

#### **Safety Chains**

## 

Always cross trailer safety chains and never allow them to drag on the ground. Improper installation can result in damage to the chains and could lead to loss of control of the trailer and tow vehicle. Serious injuru can occur if the trailer detaches from the tow vehicle.

Always attach chains between the vehicle and the trailer for trailers with a conventional hitch. Leave just enough slack so the combination can turn.

#### Conventional Hitch

Attach the chains to the holes on the trailer hitch platform. Cross the safety chains under the tongue of the trailer to help prevent the tongue from contacting the road if it becomes separated from the hitch.

#### **Trailer Brakes**



Never attempt to tamper with the hydraulic brake system for your trailer brakes. Do not connect a trailer's hydraulic brake system directly to your vehicle's hydraulic brake sustem. If you do, both the vehicle antilock brakes and the trailer brakes may not function, which could result in a crash.

Loaded trailers over 900 kg (2,000 lb) must be equipped with brake systems and with brakes for each axle.

State or local regulations may require trailers to have their own braking system if the loaded weight of the trailer exceeds a maximum value. Read and follow the instructions for the trailer brakes so they are installed, adjusted, and maintained properly.


#### **Trailer Wiring Harness Basic Trailer Wiring**

## ⚠ Warning

Incorrect trailer wiring may cause blown fuses, damaged wires, trailer brakes being permanently applied, or trailer brakes not applying. This could result in a crash and/or may cause damage to the vehicle. Always follow the connector/ trailer manufacturer's instructions for uour trailer's wiring connection.

If the vehicle is not equipped with a trailer connector on the rear bumper, a seven-wire trailering harness is tied to the vehicles frame. The harness requires the installation of a trailer connector, which is available through uour dealer.

Use only a round, seven-wire connector with flat blade terminals meeting SAE J2863 specifications for proper electrical connectivitu.

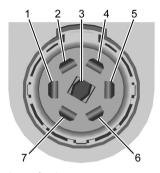

- 1. Left Turn/Brake
- 2. Tail Lights
- 3. Reverse Lights
- 4. Battery Feed
- 5. Right Turn/Brake
- 6. Electric Brakes
- 7. Ground

Refer to the aftermarket electric trailer brake controller owner's manual to determine wire color coding of the electric trailer brake controller. The wire colors on the brake controller may be different from the vehicle.

The electric trailer brake controller should be installed by your dealer or a qualified service center.

#### **Trailer Lights**

Always check that all trailer lights are working at the beginning of each trip, and periodically on longer trips.

#### **Trailer Connection and Light Messages**

When a trailer is properly connected and working, no trailer connection or light messages appear on the DIC. However; if the vehicle detects an issue with a trailer connection or light, you may see the following Driver Information Center message(s):

- TRAILER DISCONNECTED CHECK
   CONNECTION appears when a connected
   trailer is disconnected. It appears
   immediately when the vehicle is on, or
   upon the next start-up if the trailer was
   disconnected while the vehicle was off.
   Check the trailer connection as appropriate.
- CHECK TRAILER LAMP appears when there is a detected light or wiring fault on the trailer. Check the trailer wiring and lights.

#### Turn Signals When Towing a Trailer

When properly connected, the trailer turn signals will illuminate to indicate the vehicle is turning, changing lanes, or stopping. When towing a trailer, the arrows on the instrument cluster will illuminate even if the trailer is not properly connected or the bulbs are burned out.

#### Tow/Haul Mode

If equipped, Tow/Haul Mode assists when pulling a heavy trailer, or a large/heavy load. For instructions on how to enter Tow/Haul Mode, see *Driver Mode Control* 

197.

#### **Integrated Trailer Brake Control System**

## ⚠ Warning

Connecting a trailer that has an air brake system may result in reduced or complete loss of trailer braking, including increased stopping distance or trailer instability which could result in serious injury, death, or property damage. Only use the ITBC system with electric or electric over hydraulic trailer brake systems.

The vehicle may have an Integrated Trailer Brake Control (ITBC) system for use with electric trailer brakes or most electric over hydraulic trailer brake systems. These instructions apply to both types of electric trailer brakes.



This symbol is on the Trailer Brake Control Panel on vehicles with an Integrated Trailer Brake Control system. The output to the trailer brakes is proportional to the amount of vehicle braking. Available output to the trailer brakes can be adjusted to a wide range of trailering situations.

The Integrated Trailer Brake Control system is integrated with the vehicle's brake, antilock brake, and StabiliTrak/Electronic Stability Control (ESC) systems. In trailering conditions that cause the vehicle's antilock brake or StabiliTrak/Electronic Stability Control systems to activate, power sent to the trailer's brakes is automatically adjusted to minimize

trailer wheel lock-up. This does not imply that the trailer has StabiliTrak/Electronic Stability Control.

For the Integrated Trailer Brake Control system to function properly, the vehicle's brake, ABS, and ESC systems must be functioning properly.

The Integrated Trailer Brake Control system is powered through the vehicle's electrical system. Turning the vehicle off will also turn off the Integrated Trailer Brake Control system. The Integrated Trailer Brake Control system is fully functional only when the vehicle is on.



**Trailer Brake Control Panel** 

1. Manual Trailer Brake Apply Lever

- 2. Trailer Symbol
- 3. Trailer Gain Adjustment Buttons

The trailer brake control panel is on the center stack or center console. See *Instrument Panel Overview* 

4

The trailer symbol indicator turns amber when a trailer with electric brakes are connected.

The control panel allows adjustment to the amount of output, referred to as trailer gain, available to the trailer brakes and allows manual application of the trailer brakes. Use the trailer brake control panel and the Driver Information Center trailer brake display page to adjust and display power output to the trailer brakes.

## Trailer Brake Driver Information Center Display Page

The display page indicates:

- Trailer gain setting
- Trailer brakes output
- Trailer connection
- System operational status

To display, perform one of the following:

- Scroll through the Driver Information Center menu
- Press a trailer gain (+) or (-) button
- Activate the manual trailer brake apply lever

TRAILER GAIN: Press a trailer gain button to recall the current trailer gain setting. Press the trailer gain (+) or (-) to adjust. Each press and release of the gain button will change the trailer gain setting. Press and hold to continuously adjust the trailer gain. To turn the output to the trailer off, adjust the trailer gain setting to 0.0. The gain setting can be adjusted from 0.0-10.0 with a trailer connected or disconnected.

TRAILER OUTPUT: This displays anytime a trailer with electric brakes is connected. Output to the trailer brakes is based on the amount of vehicle braking present and relative to the trailer gain setting. Output is displayed from 0-100% for each gain setting.

The Trailer Output will indicate "-----" on the trailer brake display, whenever the following occur:

No trailer is connected.

- A trailer without electric brakes is connected. No Driver Information Center message displays.
- A trailer with electric brakes has become disconnected, A CHECK TRAILER WIRING message displays on the Driver Information Center.
- There is a fault present in the wiring to the trailer brakes. A CHECK TRAILER WIRING message displays on the Driver Information Center.
- The Integrated Trailer Brake Control system is not working due to a fault. A SERVICE TRAILER BRAKE SYSTEM message displays in the Driver Information Center

#### Manual Trailer Brake Apply Lever

Slide this lever to apply the trailer's electric brakes independent of the vehicle brakes. Use this lever to adjust trailer gain to achieve the proper power output to the trailer brakes. This lever may also be used to request additional trailer braking at any time. The trailer and the vehicle brake lights will come on when either vehicle brakes or manual trailer brakes are applied and properly connected.

#### **Trailer Gain Adjustment Procedure**



## 

Trailer brakes that are over-gained or undergained may not stop the vehicle and the trailer as intended and can result in a crash. Always follow the instructions to set the Trailer Gain for the proper trailer stopping performance.

Trailer gain should be set for a specific trailering condition and it must be readjusted anytime vehicle loading, trailer loading, or road surface conditions change.

To adjust trailer gain for each towing condition:

1. Drive the vehicle with the trailer attached on a level road surface representative of the towing condition and free of traffic at about 32-40 km/h (20-25 mph) and fully apply the Manual Trailer Brake Apply Lever.

Adjusting trailer gain at speeds lower than 32-40 km/h (20-25 mph) may result in an incorrect gain setting.

Adjust the trailer gain, using the trailer gain
 (+) or (-) buttons, to just below the point
 of trailer wheel lock-up, indicated by trailer
 wheel squeal or tire smoke when a trailer
 wheel locks.

Trailer wheel lock-up may not occur if towing a heavily loaded trailer. Adjust the trailer gain to the highest allowable setting for the towing condition.

 Readjust trailer gain anytime vehicle loading, trailer loading, or road surface conditions change or if trailer wheel lock-up is noticed at any time while towing.

#### Other Integrated Trailer Brake Control-Related Driver Information Center Messages

## 

Driving while the trailer braking system is malfunctioning increases the load on the vehicle braking system and increases stopping distances, which can lead to trailer instability. Prolonged driving may limit the ability to make a complete stop as intended

(Continued)

#### Warning (Continued)

and can result in a crash. Drive slowly, and when it is safe, pull over to address the issue.

TRAILER BRAKES CONNECTED: This message will briefly display when a trailer with electric brakes is first connected to the vehicle. This message will automatically turn off after about 10 seconds.

CHECK TRAILER WIRING: This message will display if:

- The Integrated Trailer Brake Control system first determines connection to a trailer with electric brakes and then the trailer harness becomes disconnected or loose.
- The disconnect occurs while the vehicle is stationary, this message will automatically turn off in about 30 seconds. This message will also turn off if it is acknowledged or if the trailer harness is reconnected.
- The disconnect occurs while the vehicle is moving, this message will continue until the vehicle is turned off. This message will also turn off if it is acknowledged or if the trailer harness is reconnected.

 There is an electrical fault in the wiring to the trailer brakes. This message will continue as long as there is an electrical fault in the trailer wiring. This message will also turn off if it is acknowledged.

To determine whether the electrical fault is on the vehicle side or trailer side of the trailer wiring harness connection:

- 1. Disconnect the trailer wiring harness from the vehicle
- 2. Turn the vehicle off.
- 3. Wait 10 seconds, then turn the vehicle back on.
  - If the CHECK TRAILER WIRING message reappears, the electrical fault is on the vehicle side.
  - If the CHECK TRAILER WIRING message only reappears when connecting the trailer wiring harness to the vehicle, the electrical fault is on the trailer side.

SERVICE TRAILER BRAKES or REDUCED TRAILER BRAKING: This message will display if the electric trailer brake performance is either reduced or non-functional.

HOLD LAST KNOWN GAIN: This message will display if it is no longer possible to adjust the trailer brake gain. Trailer brakes may or may not be functional, and brake gain cannot be adjusted according to road conditions. The trailer brakes may remain functional until the next time the vehicle is turned off.

TRAILER BRAKES DISABLED SERVICE REQUIRED: This message will display when there is a problem with the Integrated Trailer Brake Control system. If this message continues over multiple restarts, have the vehicle serviced.

If either the CHECK TRAILER WIRING, TRAILER BRAKES DISABLED SERVICE REQUIRED, SERVICE TRAILER BRAKES, or REDUCED TRAILER BRAKING message displays while driving, the Integrated Trailer Brake Control system may not be functional. When traffic conditions allow. carefully pull the vehicle over to the side of the road and turn the vehicle off. Check the wiring connection to the trailer and turn the vehicle back on. If either of these messages continue, either the vehicle or trailer needs service.

A GM dealer may be able to diagnose and repair problems with the trailer. However, any diagnosis and repair of the trailer is not covered under the vehicle warranty. Contact your trailer dealer for assistance with trailer repairs and trailer warranty information.

## Trailer Sway Control (TSC)



## ⚠ Warning

Trailer swau can result in a crash and in serious injury or death, even if the vehicle is equipped with TSC.

If the trailer begins to swau, reduce vehicle speed by gradually removing your foot from the accelerator. Then pull over to check the trailer and vehicle to help correct possible causes, including an improperly or overloaded trailer, unrestrained cargo, improper trailer hitch configuration, or improperly inflated or incorrect vehicle or trailer tires. See Towing Equipment ⇔ 276 for trailer ratings and hitch setup recommendations.

Vehicles equipped with the Trailer Swau Control system use the Stabilitrak/Electronic Stability Control system to control trailer

sway. See Traction Control/Electronic Stability motion of a trailer while towing.

Trailer Sway Control will not function if the Stabilitrak/Electronic Stability Control system is disabled or has failed

If equipped with the Integrated Trailer Brake Control system, and the trailer has an electric brake system, Trailer Sway Control may also apply the trailer brakes.



When the system detects trailer sway and activates, the Stabilitrak/Electronic Stability Control warning light flashes on the instrument cluster.

If the system detects increased trailer sway, it applies the vehicle brakes at each wheel to limit motion. You may notice the vehicle limit acceleration.

## Aftermarket Electronic Trailer Sway Control Devices

## ⚠ Warning

Use of aftermarket electronic trailer sway control devices could result in reduced trailer brake performance, loss of trailer brakes, or other malfunctions, and result in a crash. You or others could be seriously injured or killed. Before using one of these devices:

- Ask the device or trailer manufacturer if the device has been thoroughly tested for compatibility with the make, model, and year of your vehicle and any optional equipment installed on your vehicle.
- Before driving, check the trailer brakes are working properly, if equipped. Drive the vehicle with the trailer attached on a level road surface that is free of traffic at about 32-40 km/h (20-25 mph) and fully apply the manual trailer

(Continued)

#### Warning (Continued)

brake apply lever. Also, check the trailer brake lights and other lights are functioning correctly.

 If the trailer brakes are not operating properly at any time, or if a Driver Information Center (DIC) message indicates problems with the trailer connections or trailer brakes, carefully pull the vehicle over to the side of the road when traffic conditions allow.

Some trailers may come equipped with an electronic device designed to control trailer sway. Aftermarket equipment manufacturers also offer similar devices that connect to the wiring between the trailer and the vehicle. If equipped, these devices may interfere with the vehicle trailer brake systems or other systems, including integrated antisway systems. Messages related to trailer connections or trailer brakes could appear on the Driver Information Center. The effects of these aftermarket devices on vehicle handling or trailer brake performance is not known.

#### **Trailer Tires**

Special Trailer tires differ from vehicle tires. Special Trailer tires are designed with stiff sidewalls to help prevent sway and to support heavy loads. These features can make it difficult to determine if the trailer tire pressures are low only based on a visual inspection.

Always check all trailer tire pressures before each trip when the tires are cool. Low trailer tire pressure is a leading cause of trailer tire blowouts.

Trailer tires deteriorate over time. The trailer tire sidewall will show the week and year the tire was manufactured. Many trailer tire manufacturers recommend replacing tires more than six years old.

Overloading is another leading cause of trailer tire blow-outs. Never load your trailer with more weight than the tires are designed to support. The load rating is located on the trailer tire sidewall.

Always know the maximum speed rating for the trailer tires before driving. This may be significantly lower than the vehicle tire speed rating. The speed rating may be on the trailer tire sidewall. If the speed rating is not shown, the default trailer tire speed rating is 105 km/h (65 mph).

# **Conversions and Add-Ons Add-On Electrical Equipment**

## ⚠ Warning

The Data Link Connector (DLC) is used for vehicle service and Emission Inspection/
Maintenance testing. See Service Vehicle
Soon Light (Propulsion System Failure)

⇒ 110. A device connected to the DLC
— such as an aftermarket fleet or driverbehavior tracking device — may interfere with vehicle systems. This could affect vehicle operation and cause a crash. Such devices may also access information stored in the vehicle's systems.

#### Caution

Some electrical equipment can damage the vehicle or cause components to not work and would not be covered by the vehicle warranty. Always check with your dealer before adding electrical equipment.

Add-on equipment can drain the vehicle's 12-volt battery, even if the vehicle is not operating. When adding electrical equipment, it should only be connected using the accessory power outlets. The maximum power that can be supplied by one accessory power outlet or spread across all three is 200 watts or 15 amps. Exceeding 200 watts or 15 amps may cause erratic vehicle operation.

The vehicle has an airbag system. Before attempting to add anything electrical to the vehicle, see Servicing the Airbag-Equipped Vehicle ⇔ 62 and Adding Equipment to the Airbag-Equipped Vehicle ⇔ 62.

## **Auxiliary Switches**

On-screen auxiliary switches, if equipped, are quick-touch icons that appear within the infotainment system, giving you easy access to some of the features of certain aftermarket accessories installed on the vehicle (off-road lighting, light bars, etc.).

To access the on-screen auxiliary switches, select Controls > See More Controls > Aux Switches. Six on-screen auxiliary switches are available.

Use of the on-screen switches requires installation of an auxiliary switch interface module, which is mounted under the hood. See your dealer for purchase and installation of the necessary components. See Accessories and Modifications 

290.

#### Customizing the On-Screen Auxiliary Switches

To customize an on-screen auxiliary switch:

- With the vehicle on and in (P) Park, select Controls > Aux Switches on the infotainment home screen
- Select the arrow at the top right of the icon for the switch you want to customize, and then:
  - To create a new label, touch the name field and type in a new label. To save your update, touch ✓ (Done) on the keyboard.

- To change the icon, touch a new one on the list.
- Review the additional options listed below the name field. Touch the checkbox next to the option description to enable or disable the option.

Turn on only while switch is held down: When this option is enabled, the switch will only operate while your finger continues to touch and hold the on-screen switch. This may be useful for accessories that only need to be turned on for short intervals.

Turn on parking lights while switch is on: When this option is enabled, the vehicle parking lights will automatically turn on while the switch is in use. This may be particularly useful to use for a light bar, as it will help ensure your vehicle remains visible while driving in low-light conditions with the headlights off.

3. Select the BACK icon to save your customizations.

## **Vehicle Care**

General Information	
General Information	290
Accessories and Modifications	290
Vehicle Checks	
Doing Your Own Service Work	290
Underhood Access Covers	292
Underhood Compartment Overview	
Cooling System	
Washer Fluid	297
Brakes	
Brake Fluid	
Battery	
Park Brake and P (Park) Mechanism	
Check	302
Wiper Blade Replacement	
Glass Replacement	
Windshield Replacement	
Gas Strut(s)	
Headlight Aiming	
Front Headlight Aiming	304
Bulb Replacement	
LED Lighting	304
Electrical System	
High Voltage Devices and Wiring	305
Electrical System Overload	
Liectrical System Overload	

ruses and Circuit Breakers	306
Underhood Compartment Fuse Block	.307
Instrument Panel Fuse Block (Left)	311
Instrument Panel Fuse Block (Right)	313
Wheels and Tires	
Tires	. 316
All-Season Tires	317
Winter Tires	317
Tire Pressure	. 318
Tire Pressure for High-Speed Operation .	. 319
Tire Pressure Monitor System	
Tire Pressure Monitor Operation	
Tire Inspection	
Tire Rotation	. 323
When It Is Time for New Tires	. 324
Buying New Tires	. 324
Different Size Tires and Wheels	. 326
Wheel Alignment and Tire Balance	.326
Wheel Replacement	.326
Tire Chains and Other Traction Devices	. 327
If a Tire Goes Flat	. 327
Tire Sealant and Compressor Kit	.328
Storing the Tire Sealant and	
Compressor Kit	333
ump Starting	
Jump Starting	.334
owing the Vehicle	
Transporting a Disabled Vehicle	. 336

Appearance Care	
Exterior Care	337
Interior Care	342
Floor Mats	345

## **General Information**

For service and parts needs, visit your dealer. You will receive genuine GM parts and GMtrained and supported service people.

Genuine GM parts have one of these marks:





### **Accessories and Modifications**

Adding non-dealer accessories or making modifications to the vehicle can affect vehicle performance and safety, including such things as airbags, braking, stability, ride and handling, emissions systems, aerodynamics, durability, Driver Assistance Systems, and electronic systems like antilock brakes, traction control,

and stability control. These accessories or modifications could even cause malfunction or damage not covered by the vehicle warranty.

Damage to suspension components caused by modifying vehicle height outside of factory settings will not be covered by the vehicle warranty.

Damage to vehicle components resulting from modifications or the installation or use of non-GM certified parts, including control module or software modifications, is not covered under the terms of the vehicle warranty and may affect remaining warranty coverage for affected parts.

GM Accessories are designed to complement and function with other systems on the vehicle. See your dealer to accessorize the vehicle using genuine GM Accessories installed by a dealer technician.

Also, see Adding Equipment to the Airbag-Equipped Vehicle  $\Rightarrow$  62.

# Vehicle Checks Doing Your Own Service Work

## 

Never try to do your own service on high voltage battery components. You can be injured and the vehicle can be damaged if you try to do your own service work. Service and repair of these high voltage battery components should only be performed by a trained dealer technician with the proper knowledge and tools.

Exposure to high voltage can cause shock, burns, and even death. The high voltage components in the vehicle can only be serviced by technicians with special training.

High voltage components are identified by labels. Do not remove, open, take apart, or modify these components. High voltage cable or wiring has orange covering. Do not probe, tamper with, cut, or modify high voltage cable or wiring.

291

## **⚠** Warning

Unexpected wheel motion and/or direction when one or more wheels are off the ground for service work may result in injury. The vehicle may:

- Allow the wheels to rotate unexpectedly in either direction regardless of mode selection.
- Allow the wheels to rotate in reaction to attempts to rotate the tire(s) manually.
- Resist attempts to rotate the

wheels manually.

Before lifting the vehicle to do your own service work, turn the vehicle off or place the vehicle in the Service Mode. To place the vehicle in Service Mode, with the vehicle off and the brake pedal not applied, press and hold POWER for more than five seconds.

## **⚠** Warning

It can be dangerous to work on your vehicle if you do not have the proper knowledge, service manual, tools, or parts. Always follow owner's manual procedures and consult the service manual for your vehicle before doing any service work.

If doing some of your own service work, use the proper service manual. It provides more details on yehicle care than this manual can

This vehicle has an airbag system. Before attempting to do your own service work, see Servicing the Airbag-Equipped Vehicle 

62.

If equipped with remote start, open the hood before performing any service work to prevent remote starting the vehicle accidentally. See *Remote Start* ⇔ 12.

Keep a record with all parts receipts and list the mileage and the date of any service work performed.

## **Underhood Access Covers**




- 1. Remote Negative (−) Location. See *Jump* Starting \$\simes\$ 334.
- 2. Battery (Under Cover). See *Battery* \$\square\$300.
- Power Outlet. See Power Outlets ⇒ 97.
- 5. Emergency Hood Release Button. See *Hood* ⇔ 15.


- 6. Coolant Surge Tank and Pressure Cap (Under Cover). See Cooling System ⇒ 295.
- 7. Brake Fluid Reservoir (Under Cover). See Brake Fluid \$\triangle 299
- 8. Windshield Washer Fluid Reservoir. See Washer Fluid \$\simes\$ 297.

## **Removing the Access Covers**


The underhood access covers conceal various components. You may need to remove one or more access covers to reach a desired component.

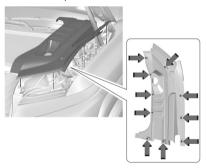

**Right Hand Access Cover** 

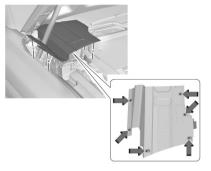

Left Hand Rear Access Cover

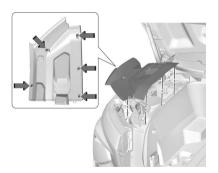

**Left Hand Air Inlet Access Cover** 

The covers interlock with various tabs and clips, and must be removed and replaced carefully. Ensure all access covers are securely attached to the other covers before closing the hood.

## Underhood Compartment Overview

## ⚠ Warning

You or others could be injured if caught in the path of the power hood. Make sure there is no one in the way of the hood as it is opening and closing.

There are several items located under the hood that you should check periodically.

For instructions on opening the hood, see *Hood*  $\Rightarrow$  15.



- 1. Battery (Under Cover). See Battery \$\infty\$ 300.
- Underhood Compartment Fuse Block (Under Cover). Underhood Compartment Fuse Block 

  307.
- 3. Power Outlet. See *Power Outlets* ▷ 97.
- 4. Emergency Hood Release Button. See Hood \$\Display\$ 15.
- 5. Coolant Surge Tank and Pressure Cap (Under Cover). See Cooling System \$\div 295\$.
- 6. Brake Fluid Reservoir (Under Cover). See Brake Fluid \$\sigma\$ 299.

7. Windshield Washer Fluid Reservoir. See Washer Fluid \$\simes\$ 297.

## **Cooling System**

## **⚠** Warning

If the coolant inside the surge tank is boiling, do not do anything else until the cooling system cools down. You or others could be burned. You should have your vehicle checked by your GM dealer.

## **⚠** Warning

The coolant system hoses and related components become hot during vehicle operation. To avoid potential burns, do not touch these components while they are still hot

Electric vehicles have one or more independent cooling systems designed to control the temperature of the high voltage battery, power electronic modules, and cabin heating. These cooling systems are complex and should only be serviced by a qualified technician.

The following explains the cooling systems and how to check coolant levels.

### **High Voltage Battery Cooling System**

The high voltage battery cooling system works to keep the vehicle battery within a normal operating temperature range. If the temperature rises above this range, the battery cooling system turns on the air conditioning compressor to regulate the temperature. If the temperature falls below this temperature, a high voltage heater, located outside the battery on a cradle, heats the coolant until the correct temperature is reached.

## Single Power Inverter Module, Accessory Power Module, and Charger Module

The Single Power Inverter Module (SPIM), Accessory Power Module (APM), and charger module are cooled using a separate coolant loop. These modules are kept below a maximum temperature. If the temperature rises above this temperature, the electric cooling fan will turn on to cool the coolant.

### **Cabin Heating**

Cabin heating is maintained by coolant heated by the Coolant Heater Control Module (CHCM), separate from the power electronics and battery coolant loops. This module heats the coolant based on temperature inputs from the cabin climate control systems.

### **Cooling System Pressure Caps**

### Caution

If the pressure caps are not secured and tightened properly, coolant loss and damage to the vehicle and/or its electrical systems may occur. Always visit your local GM dealer/retailer for service to the electric vehicle cooling systems.

Electric vehicle cooling system pressure caps are tamper-resistant and must be fully installed on the coolant surge tanks at all times. The coolant should only be serviced by a qualified technician.

#### Coolant

### Caution

GM electric vehicle cooling systems require a 50/50 mix of DEXCOOL and de-ionized water. Use only ACDelco Premix (50/50 mixture of DEXCOOL and de-ionized water). which is available from your dealer. Do not use DEXCOOL mixed with tap water or distilled water in an electric vehicle cooling system as it could damage and/or contaminate the cooling system and related components. The vehicle could become disabled.

The electric vehicle cooling systems are filled with coolant that meets GM Standards GMW18270 and GMW3420 (DEXCOOL). This coolant is designed to remain in the vehicle for five years or 240,000 km (150,000 miles), whichever occurs first

### **Checking Coolant**

## Warning

Do not drive the vehicle if there is a coolant leak. Coolant loss can indicate a problem. All the coolant could leak out, causing the vehicle to suddenly lose propulsion while driving, which could result in a crash causing vehicle damage or personal injury/ death. Always visit your local GM dealer/ retailer for electric vehicle cooling systems service

The coolant needs to be replaced at the appropriate interval. See Maintenance Schedule \$ 348.

The coolant reservoir is in the underhood compartment. See Underhood Compartment Overview \$ 293

To access the coolant reservoir under the hood. the right side access cover needs to be removed.


### How to Add Coolant to the Coolant Surge Tank



## **⚠** Warning

Use only ACDelco Premix (50/50 mixture of DEXCOOL and de-ionized water), which is available from your dealer. Do not use any other coolant or mixture. Plain water or other liquid may cause cooling system corrosion and/or cooling system being frozen which eventually may cause a loss of propulsion while driving.

- 1. Park on a level surface and turn the vehicle off.
- 2. Open the hood. See *Hood* ⇔ 15.

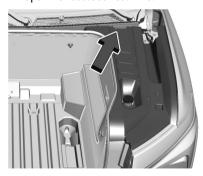

Complete a three-quarter turn on each of the three bolts and remove the right side access cover.



4. After the system has completely cooled, check that the coolant level in the reservoir.



If the coolant level is not visible or needs to be adjusted within the reservoir, contact your dealer.

## Washer Fluid What to Use

### **Caution**

 Do not use washer fluid that contains any type of water repellent coating. This can cause the wiper blades to chatter or skip.

(Continued)

## **Caution (Continued)**

- Do not use engine coolant (antifreeze) in the windshield washer. It can damage the windshield washer system and paint.
- Do not mix water with ready-to-use washer fluid. Water can cause the solution to freeze and damage the washer fluid tank and other parts of the washer system.
- When using concentrated washer fluid, follow the manufacturer instructions for adding water.
- Fill the washer fluid tank only threequarters full when it is very cold. This allows for fluid expansion if freezing occurs, which could damage the tank if it is completely full.

When windshield washer fluid is needed, be sure to read the manufacturer's instructions before use. If operating the vehicle in an area where the temperature may fall below freezing, use a fluid that has sufficient protection against freezing.

## **Adding Washer Fluid**



Open the cap with the washer symbol on it. Add washer fluid until the tank is full. See Underhood Compartment Overview \$\simeq\$ 293 for reservoir location.

### **Brakes**

### Inspections

Visually inspect brake system components as follows:

- Brake lines and hoses for proper attachment, connections, binding, leaks, cracks, and chafing.
- Disc brake pads for wear and rotors for surface condition.
- Drum brake linings/shoes for wear or cracks.
- All other brake parts for cracks and leaks.

When tires are rotated, inspect drum brake linings or disc brake pads for wear.

## **Troubleshooting**

### **Brake Pedal Travel**

See your dealer if the brake pedal does not return to normal height, or if there is a rapid increase in pedal travel. This could be a sign that brake service may be required.

### **Brake Pulsation**

If brakes are pulsating:

- Inspect rotors, pads, linings for uneven wear. Resurface or replace as needed.
- Check torque on all wheel nuts. Properly torqued wheel nuts are necessary to help prevent brake pulsation. Evenly tighten wheel nuts in the proper sequence to torque specifications. See Capacities and Specifications  $\Leftrightarrow$  352.

### **Brake Squeal and Brake Wear Indicators**



## ⚠ Warning

The brake wear warning sound means that soon the brakes will not work well. That could lead to a crash. When the brake wear warning sound is heard, have the vehicle serviced.

Disc brake linings have built-in wear indicators that make a high-pitched warning sound when the brake linings are worn, and new linings are needed. The sound can come and go or can be heard all the time when the vehicle is moving, except when applying the brake pedal firmly.

Some driving conditions or climates can cause a brake squeal when the brakes are first applied, clearing up following several applications. This does not mean something is wrong with the brakes.

### **Replacing Brake System Parts**

### Caution

Continuing to drive with worn-out brake linings could result in costly brake repairs. Brake pads should be replaced as complete axle sets.

Always replace brake system parts with new, approved replacement parts. If this is not done, the brakes may not work properly. The braking performance can change in many ways if the wrong brake parts are installed or if parts are improperly installed.

### **Brake Fluid**



The brake master cylinder reservoir is filled with GM approved DOT 4 brake fluid as indicated on the reservoir cap. See *Underhood Compartment Overview* ⇔ 293 for the location of the reservoir.

When the brake fluid falls to a low level, the brake warning light comes on. See *Brake System Warning Light* ▷ 110.

## **Checking Brake Fluid**

### **Caution**

If too much brake fluid is added, the brake fluid can spill and cause vehicle damage, including damage to electrical components and surfaces. Add brake fluid only when work is done on the brake hydraulic system.

Always clean the brake fluid reservoir cap and the area around the cap before removing it.

To check the brake fluid, place the vehicle in P (Park) on a level surface. The brake fluid level should be between the Min and Max marks on the brake fluid reservoir.

There are only two reasons why brake fluid may be low:

- Normal brake lining wear. When new linings are installed, the fluid level will return to normal.
- Brake system fluid leak. With a leak, the brakes will not work well. To have the brake hydraulic system fixed, see your dealer.

Do not top off the brake fluid. Adding fluid does not correct a leak. If fluid is added when the linings are worn, there will be too much fluid when new brake linings are installed. Add or remove fluid, as necessary, only when work is done on the brake hydraulic system.

Brake fluid absorbs water over time which degrades the effectiveness of the brake fluid. Replace brake fluid at the specified intervals to prevent increased stopping distance. See Maintenance Schedule ⇒ 348.

#### What to Add

## <u> Ma</u>rning

The wrong or contaminated brake fluid could result in damage to the brake system. This could result in the loss of braking leading to a possible injury. Always use the proper GM approved brake fluid.

### Caution

If brake fluid is spilled on the vehicle's painted surfaces, the paint finish can be damaged. Immediately wash off any painted surface.

Use only GM approved DOT 4 brake fluid from a clean, sealed container. See *Recommended Fluids and Lubricants* ⇔ 351.

## Battery

## **⚠** Warning

This vehicle is equipped with high voltage battery thermal detection, mitigation, and notification software. If the high voltage battery overheats, it may create a risk of a vehicle fire and may result in damage to property, serious injury, or death.

If the high voltage battery overheats, an audible alarm may sound, a message may display on the Driver Information Center (DIC), and OnStar may be called. To alert others outside your vehicle, the horn may sound, and the lights may flash.

If driving, pull over as soon as possible to a safe location at least 50 feet (15 m) away from any structure or anything that may burn. Park your vehicle, set the parking brake, and turn the vehicle off. Open a window or door for ventilation.

(Continued)

## Warning (Continued)

Remove the remote key and move yourself and others to a safe, upwind location away from the vehicle. Do not return to the vehicle or attempt to restart or drive the vehicle

Call emergency services and inform them that an electrical vehicle high voltage battery is overheating.

Never attempt to put out a vehicle fire.

Your vehicle must be towed to an authorized dealer to have the high voltage battery inspected before the vehicle can be operated again.

This vehicle has a high voltage battery and a standard 12-volt battery.

See your dealer if either the 12-volt or high voltage battery needs service.

### **Absorbent Glass Mat 12-Volt Battery**

The vehicle has an Absorbent Glass Mat (AGM) 12-volt, maintenance-free battery.

• Do not remove the cap or add fluid.

- Do not install a standard 12-volt battery.
   Doing so will result in reduced battery life.
- If using a battery charger, use the AGM setting, if equipped, to limit the charge voltage to 14.8 volts.
- Do not disconnect the 12-volt battery during storage.

## **High Voltage Battery**

Only a trained service technician should inspect, test, or replace the high voltage battery. The dealer has information on how to recycle the high voltage battery. There is also information available at https://www.recyclemybattery.com.

## ⚠ Warning

Damage to the high voltage battery or high voltage system can create a risk of electric shock, overheating, or fire.

If the vehicle is damaged from a moderate to severe crash, flood, fire, or other event, the vehicle should be inspected as soon as possible. Until the vehicle has been inspected, store it outside at least 15 m (50

(Continued)

## Warning (Continued)

ft) from any structure or anything that can burn. Ventilate the vehicle by opening a window or a door.

If the vehicle is in a crash, the sensing system may shut down the high voltage system. When this occurs, the high voltage battery is disconnected and the vehicle will not start. The SERVICE VEHICLE SOON message in the Driver Information Center (DIC) will display. Before the vehicle can operate again, it must be serviced at your dealer.

Keep the vehicle plugged in, even when fully charged, to keep the high voltage battery temperature ready for the next drive. This is important when outside temperatures are extremely hot or cold.

Propulsion power may be reduced in extremely cold temperatures, or if the high voltage battery is too cold. The message BATTERY TOO COLD, PLUG IN TO WARM will display. If the message displays, a level 2 charger is required to heat the battery to a minimum temperature to enable propulsion or charging.

A vehicle cover, which can reduce sun loading on the vehicle and improve high voltage battery life, is available from your dealer.

### Vehicle Storage

The best way to store the vehicle for any length of time is to plug in the charge cord and leave it plugged in. The vehicle monitors and maintains the 12-volt battery daily. It is okay to leave the vehicle plugged in for extended periods of time. Once charged to full, very little energy is required to maintain the 12-volt battery and high voltage battery.

If it is not possible to charge the vehicle with the charge cord left plugged in, be sure to fully charge the high voltage battery before storing. The vehicle will stop maintenance of the 12-volt battery if the high voltage battery state of charge gets too low.

When storing the vehicle on a long-term basis:

- Keep the high voltage battery state of charge at 30%.
- Attach an AGM/VRLA compatible battery tender or trickle charger to the 12volt battery.
- Keep the remote key more than 3 m (10 ft) away from the vehicle.

### 12-Volt Battery













## <u> Ma</u>rning

Do not use a match or flame near a vehicle's battery. If you need more light, use a flashlight.

Do not smoke near a vehicle's battery. When working around a vehicle's battery, shield your eyes with protective glasses. Keep children away from vehicle batteries.

## ⚠ Warning

Batteries have acid that can burn you and gas that can explode. You can be hurt badly if you are not careful.

Always wear eye protection. Follow instructions carefully when working around a battery.

Battery posts, terminals and related accessories contain lead and lead compounds which can cause cancer and reproductive harm. Wash hands after handling.

## **⚠** Warning

The battery contains acid that can be exposed if the battery is tipped or opened. Exposure to the battery acid could result in chemical burns which could damage the vehicle and cause personal injury. Do not tip or open the battery.

### Caution

The vehicle is equipped with an AGM/VRLA 12-volt battery, which can be damaged by using the incorrect type of trickle charger. An AGM/VRLA-compatible charger must be used, with the appropriate setting selected. Follow the trickle charger manufacturer instructions.

A trickle charger may be attached to the 12-volt battery terminals or trickle charge from the underhood remote positive (+) and negative (−) terminals. See Jump Starting ⇒ 334 for location of these terminals.

With a trickle charger connected to the 12-volt battery, the vehicle will still monitor the 12-volt battery daily, but it will not use energy from the high voltage battery for maintenance.

### **High Voltage Battery**

After extended storage, it is possible that the vehicle may not operate. If this happens, the high voltage battery may need to be plugged in and charged.

## Park Brake and P (Park) Mechanism Check

## **⚠** Warning

When you are doing this check, the vehicle could begin to move. You or others could be injured and property could be damaged. Make sure there is room in front of the vehicle in case it begins to roll. Be ready to apply the regular brake at once should the vehicle begin to move.

Park on a steep hill, with the vehicle facing downhill. Keeping your foot on the regular brake, set the Electric Parking Brake.

- To check the Electric Parking Brake's holding ability: With the propulsion system active and the electric drive unit in N (Neutral), slowly remove foot pressure from the regular brake pedal. Do this until the vehicle is held by the Electric Parking Brake only.
- To check the P (Park) mechanism's holding ability: With the propulsion system active, shift to P (Park). Then release the Electric Parking Brake and slowly remove foot pressure from the regular brake pedal.

Contact your dealer if service is required.

## **Wiper Blade Replacement**


### Caution

Allowing the wiper arm to touch the windshield when no wiper blade is installed could damage the windshield. Any damage that occurs would not be covered by the vehicle warranty. Do not allow the wiper arm to touch the windshield

Replacement blades come in different types and are removed in different ways. For proper type and length, see your dealer.

To replace the windshield wiper blade:

1. Pull the windshield wiper assembly away from the windshield.

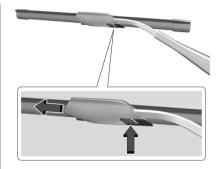

- 2. Press the button in the middle of the wiper arm connector, and pull the wiper blade away from the arm connector.
- 3. Remove the wiper blade.
- Reverse Steps 1–3 for wiper blade replacement.

## **Glass Replacement**

If the windshield or front side glass must be replaced, see your dealer to determine the correct replacement glass.

## Windshield Replacement Driver Assistance Systems

If the windshield needs to be replaced and the vehicle is equipped with a front camera sensor for the Driver Assistance Systems, a GM replacement windshield is recommended. The replacement windshield must be installed according to GM specifications for proper alignment. If it is not, these systems may not work properly, they may display messages, or they may not work at all. See your dealer for proper windshield replacement.

## Gas Strut(s)

## **Marning**

If the gas struts that hold open the hood, trunk, and/or liftgate fail, you or others could be seriously injured. Take the vehicle to your dealer for service immediately. Visually inspect the gas struts for signs of wear, cracks, or other damage periodically. Checkto make sure the hood/trunk/liftgate is held open with enough force. If struts are failing to hold the hood/trunk/liftgate, do not operate. Have the vehicle serviced.

### Caution

Do not apply tape or hang any objects from gas struts. Also do not push down or pull on gas struts. This may cause damage to the vehicle.

Your vehicle may be equipped with gas strut(s) to provide assistance in lifting and holding open the hood/trunk/liftgate system in full open position.

See Maintenance Schedule \$\simeq\$ 348.



Hood



Trunk



Liftgate

# Headlight Aiming Front Headlight Aiming

Headlight aim has been preset and should need no further adjustment.

If the vehicle is damaged in a crash, the headlightaim may be affected. If adjustment to the headlights is necessary, see your dealer.

# **Bulb Replacement LED Lighting**

This vehicle is equipped with LED light sources for all exterior lights.

The light assemblies do not contain any serviceable light sources (e.g., incandescent bulbs).

For replacement of any LED lighting assembly, contact your dealer.

# Electrical System High Voltage Devices and Wiring

## ⚠ Warning

Exposure to high voltage can cause shock, burns, and even death. The high voltage components in the vehicle can only be serviced by technicians with special training.

High voltage components are identified by labels. Do not remove, open, take apart, or modify these components. High voltage cable or wiring has orange covering or labels. Do not probe, tamper with, cut, or modify high voltage cable or wiring.

## **Electrical System Overload**


The vehicle has fuses and circuit breakers to protect against an electrical system overload.

When the current electrical load is too heavy, the circuit breaker opens and closes, protecting the circuit until the current load returns to normal or the problem is fixed. This greatly reduces the chance of circuit overload and fire caused by electrical problems.

Fuses and circuit breakers protect the wires that provide the power to the devices in your vehicle.

If there is a problem on the road and a fuse needs to be replaced, the same amperage fuse can be borrowed. Choose some feature of the vehicle that is not needed to use and replace it as soon as possible.


To check a fuse, look at the band inside the fuse. If the band is broken or melted, replace the fuse. Be sure to replace a bad fuse with a fuse of the identical size and rating.

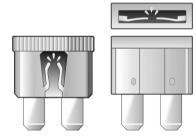



## Replacing a Blown Fuse

- 1. Turn off the vehicle.
- Locate the fuse puller in the underhood compartment fuse block.

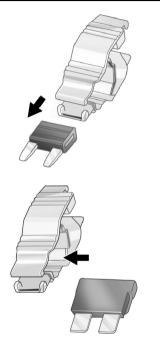

3. Use the fuse puller to remove the fuse from the top or side, as shown above.

- If the fuse must be replaced immediately, borrow a replacement fuse with the same amperage from the fuse block. Choose a vehicle feature that is not needed to safely operate the vehicle. Repeat Steps 2–3.
- 5. Insert the replacement fuse into the empty slot of the blown fuse.

At the next opportunity, see your dealer to replace the blown fuse.

## **Headlight Wiring**

An electrical overload may cause the lights to go on and off, or in some cases to remain off. Have the headlight wiring checked right away if the lights go on and off or remain off.

### **Windshield Wipers**

If the wiper motor overheats due to heavy snow or ice, the windshield wipers will stop until the motor cools and will then restart.

Although the circuit is protected from electrical overload, overload due to heavy snow or ice may cause wiper linkage damage. Always clear ice and heavy snow from the windshield before using the windshield wipers.

If the overload is caused by an electrical problem and not snow or ice, be sure to get it fixed.

## **Fuses and Circuit Breakers**

## **⚠** Danger

Fuses and circuit breakers are marked with their ampere rating. Do not exceed the specified amperage rating when replacing fuses and circuit breakers. Use of an oversized fuse or circuit breaker can result in a vehicle fire. You and others could be seriously injured or killed.

## **⚠** Warning

Installation or use of fuses that do not meet GM's original fuse specifications is dangerous. The fuses could fail, and result in a fire. You or others could be injured or killed, and the vehicle could be damaged.

The fuses and circuit breakers protect the electrical system from short circuits, greatly reducing the chance of electrical damage or fire.




See Accessories and Modifications  $\diamondsuit$  290 and General Information  $\diamondsuit$  290.

To check or replace a blown fuse, see *Electrical System Overload* ♥ 305.

## Underhood Compartment Fuse Block

The underhood compartment fuse block is in the underhood compartment, on the passenger side of the vehicle.

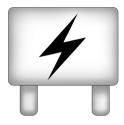


Press the clips on the sides and lift the cover to access the fuse block.

### Caution

Spilling liquid on any electrical component on the vehicle may damage it. Always keep the covers on any electrical component.

A fuse puller is available in the left instrument panel end cap.

The vehicle may not be equipped with all of the fuses, relays, and features shown.

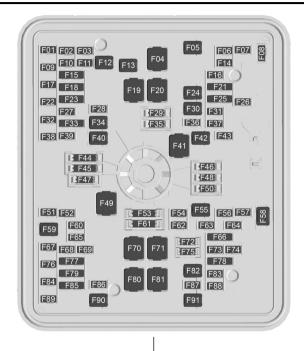

Fuses	Usage
F01	-
F02	-
F03	-
F04	-
F05	-
F06	ACEC – Air Conditioning Electric Compressor
F07	ESSCP – Energy Storage System Coolant Pump
F08	-
F09	PECP — Power Electric Cooling Pump
F10	-
F11	-
F12	-
F13	TRLR_HD – Trailer Headlights

Fuses	Usage	Fuses	Usage	Fuses	Usage
F14	-		TAIL LMP RT — Right Tail Light	F34	TIM1 – Trailer Interface Module 1
F15	VLM – Vehicle Leveling Module	F23	VICMS –	F35	Spare
	Spare		Vehicle Integrated Control Module	F36	TPIM1_BAT2
F16	-	F24	_	F37	-
F17	ELM 1 – Exterior lighting Module 1	F25	-	F38	TRLR_STP_TRN_LT — Trailer Stop
	SADS – Semi Active	F26	-	F39	TRLR_STP_TRN_RT
F18	Damping System	F27	PKLPS_TRLR — Trailer Park Lights	F40	VLM_M
	TAIL LMP LT – Left Tail Light	F28	-	F41	-
F19	IECL 2 – Left Internal	F29	Spare	F42	-
FID	Electrical Center 2	F30	PUMP_ONE	F43	-
F20	-	F31	_	F44	Spare
F21	-	F32	_	F45	Spare
F22	IRM_ACM – Integrated	132	Spare	F46	Spare
F22	Refrigerant Module and Air Conditioning Module	F33	TRLR REV LMPS – Reverse	F47	Spare
			Trailer Lights	F48	Spare

Fuses	Usage	Fuses	Usage	Fuses	Usage
F49	TBPM – Trailer Brake Power Module	F64	-		MIDGATE CROSS BAR MOTOR 2
F50	Spare	F65 F66	ELM 4 _	F78	MIDGATE CROSS BAR MOTOR 1
F51	MIDGATE MOTOR RIGHT	F67	EMB/GRILL LIGHT		PCV_PEEV_ALD
F52	-	F68	HDLP_LT	F79	FR RADAR/VIRTUAL KEY
F53	Spare	F69	MIDGATE LEFT MOTOR	F80	IECR 2
F54	PFCM	F70	EBCM 1	F81	IECL 1
F55	REAR DEFOG	F71	DC/AC INV	F82	-
F56 F57	– MINOR ENDGATE HIGH	F72	Spare	F83	_
F58	FRNT WIPER	F73	-	F84	V2LIM
F59	TIM2	F74	-		Spare
F60	PKLPS_ID	F75 F76	Spare HDLP_RT	F85	HVS (HIGH VOLTAGE SERVICE DISCONNECT)
F61	Spare	F77	HDLF_KI	F86	HORN
F62	ELM 3	177		F87	FRT WSHR PMP
F63	GLASS BREAK			F88	_


Fuses		Usage
F89	-	
F90	-	
F91	_	

## **Instrument Panel Fuse Block (Left)**




The instrument panel fuse block is on the driver side of the instrument panel, between the steering wheel and the door. To access the fuses, remove the panel, starting at the bottom. Once clips are disengaged, the tabs along the top of the door can be disengaged from the instrument panel to remove the door.

To reinstall the door, place the top tabs into the slots, and rotate the door into position, engaging the clips.

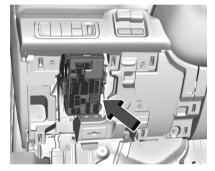

The vehicle may not be equipped with all of the fuses, relays, and features shown.

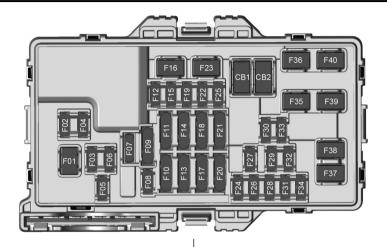

Fuses	Usage	Fuses	Usage
F01	DRIVER_PWR_ST	F05	ELM 5 – Exterior Lighting
F02	VKS_TTPM		Module 5
F03	VECM	F06	PASSENGER DSP
103		F07	SPARE
F04	BCM1 – Body Control Module 1	F08	TCP – Telematics Control Platform

IW_Co_Driver PWR LUMBAR
SPARE
NCM_VKM – Wireless Charger Module
TVR_APA_PFA
ND HTD SEAT – 2nd Row Heated Seat
ND HTD SEAT – 2nd Row Heated Seat 1
SPARE
ГРІМ
TPIM 2
SPARE
SPARE
Tonneau Accessory

- 21	


Fuses	Usage		
F17	SDM_AOS		
ГИ	SRR		
F18	SPARE		
F19	SPARE		
F20	OBCM 2		
FZU	MSM		
F21	HSM ROW		
	HSM ROW 1		
F22	SPARE		
F23	MJR END HIGH		
F24	TPIM1 & VBAT1 – Traction Power Inverter Module 1		
F25	SPARE		
F26	TPIM 2 & VBAT 1 – Traction Power Inverter Module 1		
F27	DSP		
F28	ELM 7 – Exterior Lighting Module 7		

Fuses	Usage
F29	SPARE
F30	MJR END LOW
F31	ELM 2 – Exterior Lighting Module 2
F32	RFR/PLCM
F33	MIDGATE CONTROL LOW
F34	ACP_VPM
F35	AMP – Amplifier
F36	CO-DRVR_PWR_ST
F37	SPARE
F38	ELM 6 – Exterior Lighting Module 6
F39	RT WNDW – Right Hand Power Window
F40	LT WNDW – Left Hand Power Window

Circuit Breakers		Usage
CB01	-	
CB02	-	


# Instrument Panel Fuse Block (Right)

The instrument panel fuse block is located behind the glove box. It is accessible by removing the hush panel located underneath the glove box. To remove the hush panel, remove the four push-pins that secure the hush panel.

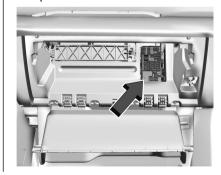

_				_
21/1	ام۱۷	hic	ا ما	Cara

venicie care See your dealer if additional assistance is needed.

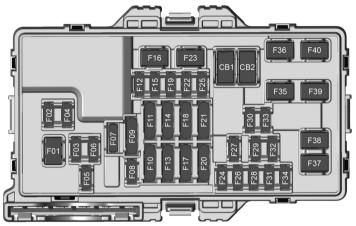

The vehicle may not be equipped with all of the fuses and relays shown.

Fuses	Usage
F01	FRT BLWR MTR – Front Blower Motor
F02	CPM
F03	VDM

Fuses	Usage
F04	SPARE
F05	BCM 2 – Body Control Module 2
F06	BCM 4 – Body Control Module 4
F07	COIL CLOCK SPRING

Fuses	Usage
F08	TBCS/EPB – Trailer Brake Control Switch/Electric Park Brake
F09	ESM
	SPARE
F10	Displays
	SPARE
F11	CGM – Central Gateway Module
	SPARE
F12	Steering Column Lock
F13	SPARE
	DLC – Data Link Connection
F14	BODY MISC
	BODY MISC1
F15	MISC_IP1
F16	SPARE

Fuses	Usage	Fuses	Usage
F17	SPARE	F28	SPARE
BDY 1	BDY 1	F29	FRT_HVAC_DIS
F18	HDLNR	F30	SPARE
F19 Integration Co Traction Powe	VICM TPIM IGN – Vehicle Integration Control Module/	F31	BCM 3 – Body Control Module 3
	Module/Ignition	F32	HSWM – Heating Steering Wheel Module
	OHC	F33	SPARE
F20 I	HUD	F34	SPARE
	ETC	F35	SPARE
F21	VCU	F36	SPARE
VCU 2	VCU 2	F37	SPARE
F22	SPARE	F38	SPARE
F23	SPARE	F39	SPARE
F24	FCM_RLH_UGDO	F40	SPARE
F25	USB_ROW 2	140	JI AILE
F26	SPARE		
F27	USB		

Circuit Breakers	Usage
CB01	APO – Auxiliary Power Outlet Center Console
CB02	SPARF

## **Wheels and Tires**

### **Tires**

Every new GM vehicle has high-quality tires made by a leading tire manufacturer. See the warranty manual for information regarding the tire warranty and where to get service. For additional information refer to the tire manufacturer.

## **⚠** Warning

• Poorly maintained and improperly used tires are dangerous.

(Continued)

## Warning (Continued)

- Overloading the tires can cause overheating as a result of too much flexing. There could be a blowout and a serious crash. See Vehicle Load Limits \$\sigma\$ 182
- Underinflated tires pose the same danger as overloaded tires. The resulting crash could cause serious injury. Check all tires frequently to maintain the recommended pressure. Tire pressure should be checked when the tires are cold.
- Overinflated tires are more likely to be cut, punctured, or broken by a sudden impact — such as when hitting a pothole. Keep tires at the recommended pressure.
- Worn or old tires can cause a crash. If the tread is badly worn, replace them.

(Continued)

## Warning (Continued)

- Replace any tires that have been damaged by impacts with potholes, curbs, etc.
- Improperly repaired tires can cause a crash. Only your dealer or an authorized tire service center should repair, replace, dismount, and mount the tires.
- Do not spin the tires in excess of 56 km/h (35 mph) on slippery surfaces such as snow, mud, ice, etc. Excessive spinning may cause the tires to explode.

See *Tire Pressure for High-Speed Operation* 

⇒ 319 for inflation pressure adjustment for high-speed driving.

## **All-Season Tires**

This vehicle may come with all-season tires. These tires are designed to provide good overall performance on most road surfaces and weather conditions. Original equipment tires

designed to GM's specific Tire Performance Criteria (TPC) have a TPC specification code molded onto the sidewall.

Consider installing winter tires on the vehicle if frequent driving on snow or ice-covered roads is expected. All-season tires provide adequate performance for most winter driving conditions, but they may not offer the same level of traction or performance as winter tires on snow or ice-covered roads. See "Winter Tires" following.

### **Winter Tires**

This vehicle was not originally equipped with winter tires. Winter tires are designed for increased traction on snow and ice-covered roads. Consider installing winter tires on the vehicle if frequent driving on ice or snow covered roads is expected. See your dealer for details regarding winter tire availability and propertire selection. Also, see *Buying New Tires* ⇒ 324.

With winter tires, there may be decreased dry road traction, increased road noise, and shorter tread life. After changing to winter tires, be alert for changes in vehicle handling and braking.

If using winter tires:

- Use tires of the same brand and tread type on all four wheel positions.
- Use only radial ply tires of the same size, load range, and speed rating as the original equipment tires.

Winter tires with the same speed rating as the original equipment tires may not be available for H, V, W, Y, and ZR speed rated tires. If winter tires with a lower speed rating are chosen, never exceed the tire's maximum speed capability.

## **Tire Pressure**

Tires need the correct amount of air pressure to operate effectively.

## **⚠** Warning

Neither tire underinflation nor overinflation is good. Underinflated tires, or tires that do not have enough air, can result in:

(Continued)

## Warning (Continued)

- Tire overloading and overheating, which could lead to a blowout
- Premature or irregular wear
- Poor handling
- Reduced fuel economy for internal combustion engine vehicles
- Reduced range for electric vehicles
   Overinflated tires, or tires that have too

much air, can result in:

- Unusual wear
- Poor handling
- Rough ride
- Needless damage from road hazards

The Tire and Loading Information label on the vehicle indicates the original equipment tires and the correct cold tire inflation pressures. The recommended pressure is the minimum air pressure

How the vehicle is loaded affects vehicle handling and ride comfort. Never load the vehicle with more weight than it was designed to carry.

### When to Check

Check the pressure of the tires once a month or more.

### How to Check

Use a good quality pocket-type gauge to check tire pressure. Proper tire inflation cannot be determined by looking at the tire. Check the tire inflation pressure when the tires are cold, meaning the vehicle has not been driven for at least three hours or no more than 1.6 km (1 mi).

Remove the valve cap from the tire valve stem. Press the tire gauge firmly onto the valve to get a pressure measurement. If the cold tire inflation pressure matches the recommended pressure on the Tire and Loading Information label, no further

adjustment is necessary. If the inflation pressure is low, add air until the recommended pressure is reached. If the inflation pressure is high, press on the metal stem in the center of the tire valve to release air.

Recheck the tire pressure with the tire gauge.

Put the valve caps back on the valve stems to keep out dirt and moisture. Use only valve caps designed for the vehicle by GM. TPMS sensors could be damaged and would not be covered by the vehicle warranty.

## Tire Pressure for High-Speed Operation

## ⚠ Warning

Driving at high speeds, 160 km/h (100 mph) or higher, puts additional strain on tires. Sustained high-speed driving causes excessive heat buildup and can

(Continued)

## Warning (Continued)

cause sudden tire failure. This could cause a crash, and you or others could be killed. Some high-speed rated tires require inflation pressure adjustment for high-speed operation. When speed limits and road conditions allow the vehicle to be driven at high speeds, make sure the tires are rated for high-speed operation, are in excellent condition, and are set to the correct cold tire inflation pressure for the vehicle load.

## **Tire Pressure Monitor System**

## **Caution**

Modifications made to the Tire Pressure Monitor System (TPMS) by anyone other than an authorized service facility may void authorization to use the system.

The Tire Pressure Monitor System (TPMS) uses radio and sensor technology to check tire pressure levels. The TPMS sensors monitor the

air pressure in your vehicle's tires and transmit tire pressure readings to a receiver located in the vehicle.

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces energy efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to

ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

See "Tire Pressure Monitor Operation" following.

## **Tire Pressure Monitor Operation**

This vehicle may have a Tire Pressure Monitor System (TPMS). The TPMS is designed to warn the driver when a low tire pressure condition exists. TPMS sensors are mounted onto each tire and wheel assembly, excluding the spare tire and wheel assembly. The TPMS sensors monitor the air pressure in the tires and transmit the tire pressure readings to a receiver located in the vehicle.



When a low tire pressure condition is detected, the TPMS illuminates the low tire pressure warning light located on the instrument cluster. If the warning light comes on, stop as soon as possible and inflate the tires to the

A message to check the pressure in a specific tire displays in the Driver Information Center (DIC). The low tire pressure warning light and the DIC warning message come on each time the vehicle is started until the tires are inflated to the correct inflation pressure. If the vehicle has DIC buttons, tire pressure levels can be viewed. For additional information and details about the DIC operation and displays, see *Driver Information Center (DIC)* ⇒ 122.

The low tire pressure warning light may come on in cool weather when the vehicle is first started, and then turn off as the vehicle is driven. This could be an early indicator that the air pressure is getting low and needs to be inflated to the proper pressure.

A Tire and Loading Information label shows the size of the original equipment tires and the correct inflation pressure for the tires when they are cold. See *Vehicle Load Limits* ❖ 182, for an example of the Tire and Loading Information label and its location. Also see *Tire Pressure* ❖ 318

The TPMS can warn about a low tire pressure condition but it does not replace normal tire maintenance. See *Tire Inspection* ⇔ 322, *Tire Rotation* ⇔ 323, and *Tires* ⇔ 316.

### Caution

Tire sealant materials are not all the same. A non-approved tire sealant could damage the TPMS sensors. TPMS sensor damage caused by using an incorrect tire sealant is not covered by the vehicle warranty. Always use only the GM approved tire sealant available through your dealer or included in the vehicle.

### **TPMS Malfunction Light and Message**

The TPMS will not function properly if one or more of the TPMS sensors are missing or inoperable. When the system detects a malfunction, the low tire pressure warning light flashes for about one minute and then stays on for the remainder of the time the vehicle is on. A DIC warning message also displays. The malfunction light and DIC warning message will come on each time

the vehicle is turned on until the problem is corrected. Some of the conditions that can cause these to come on are:

- One of the road tires has been replaced with the spare tire. The spare tire does not have a TPMS sensor. The malfunction light and the DIC message should go off after the road tire is replaced and the sensor matching process is performed successfully. See "TPMS Sensor Matching Process — Auto Learn Function" later in this section.
- The TPMS sensor matching process was not done or not completed successfully after rotating the tires. The malfunction light and the DIC message should go off after successfully completing the sensor matching process. See "TPMS Sensor Matching Process — Auto Learn Function" later in this section.
- One or more TPMS sensors are missing or damaged. The malfunction light and the DIC message should go off when the TPMS sensors are installed and the sensor matching process is performed successfully. See your dealer for service.

- Replacement tires or wheels do not match the original equipment tires or wheels. Tires and wheels other than those recommended could prevent the TPMS from functioning properly. See Buying New Tires 

  ⇒ 324.
- Operating electronic devices or being near facilities using radio wave frequencies similar to the TPMS could cause the TPMS sensors to malfunction.

If the TPMS is not functioning properly, it cannot detect or signal a low tire pressure condition. See your dealer for service if the TPMS malfunction light and DIC message come on and stay on.

### Tire Fill Alert

If equipped, this feature provides visual and audible alerts outside the vehicle to help when inflating an underinflated tire to the recommended cold tire pressure.

When the low tire pressure warning light comes on:

- 1. Park the vehicle in a safe, level place.
- 2. Set the parking brake firmly.
- 3. Place the vehicle in P (Park).

4. Add air to the tire that is underinflated. The turn signal light will flash.

When the recommended pressure is reached, the horn sounds once and the turn signal light will stop flashing and briefly turn solid.

Repeat these steps for all underinflated tires that have illuminated the low tire pressure warning light.

## **⚠** Warning

Overinflating a tire could cause the tire to rupture and you or others could be injured. Do not exceed the maximum pressure listed on the tire sidewall

If the tire is overinflated by more than 35 kPa (5 psi), the horn will sound multiple times and the turn signal light will continue to flash for several seconds after filling stops. To release and correct the pressure, while the turn signal light is still flashing, briefly press the center of the valve stem. When the recommended pressure is reached, the horn sounds once.

If the turn signal light does not flash within 15 seconds after starting to inflate the tire, the tire fill alert has not been activated or is not working.

If the hazard warning flashers are on, the tire fill alert visual feedback will not work properly.

The TPMS will not activate the tire fill alert properly under the following conditions:

- There is interference from an external device or transmitter.
- The air pressure from the inflation device is not sufficient to inflate the tire.
- There is a malfunction in the TPMS.
- There is a malfunction in the horn or turn signal lights.
- The TPMS sensor identification code is not registered to the system.
- The TPMS sensor battery is low.

If the tire fill alert does not operate due to TPMS interference, move the vehicle about 1 m (3 ft) back or forward and try again. If the tire fill alert feature is not working, use a tire pressure gauge.

### TPMS Sensor Matching Process — Auto Learn Function

Each TPMS sensor has a unique identification code. The identification code needs to be matched to a new tire/wheel position after rotating the tires or replacing one or more of the TPMS sensors. When a tire is installed, the vehicle must be stationary for about 20 minutes before the system recalculates. The following relearn process takes up to 10 minutes, driving at a minimum speed of 20 km/h (12 mph). A dash (-) or pressure value will display in the DIC. See *Driver Information Center (DIC)* □ 122. A warning message displays in the DIC if a problem occurs during the relearn process.

## **Tire Inspection**

We recommend that the tires, including the spare tire, if the vehicle has one, be inspected for signs of wear or damage at least once a month.

Replace the tire if:

 The indicators at three or more places around the tire can be seen.

- There is cord or fabric showing through the tire's rubber.
- The tread or sidewall is cracked, cut, or snagged deep enough to show cord or fabric
- The tire has a bump, bulge, or split.
- The tire has a puncture, cut, or other damage that cannot be repaired well because of the size or location of the damage.


## **Tire Rotation**

When rotating the tires, inspect the brake pads for signs of wear. See *Brakes* ⇒ 298.

Tires are rotated to achieve a more uniform wear for all tires. The first rotation is the most important.

Anytime unusual wear is noticed, rotate the tires as soon as possible, check for proper tire inflation pressure, and check

for damaged tires or wheels. If the unusual wear continues after the rotation, check the wheel alignment. See When It Is Time for New Tires \$\dip\$ 324 and Wheel Replacement \$\dip\$ 326.

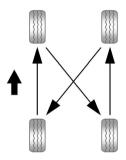

Use this rotation pattern when rotating the tires.

Adjust the front and rear tires to the recommended inflation pressure on the Tire and Loading Information label after the tires have been rotated. See *Tire Pressure* ❖ 318 and *Vehicle Load Limits* ❖ 182.

Reset the Tire Pressure Monitor System. See *Tire Pressure Monitor Operation* ⇒ 320.

## 

Rust or dirt on a wheel, or on the parts to which it is fastened, can cause wheel nuts to become loose over time. The wheel could come off and cause a crash. When changing a wheel, remove any rust or dirt from places where the wheel attaches to the vehicle. In an emergency, a cloth or paper towel can be used; however, use a scraper or wire brush later to remove all rust or dirt.


## 

Do not apply grease to the wheel mounting surface, wheel conical seats, or the wheel nuts or bolts. Grease applied to these areas could cause a wheel to become loose or come off, resulting in a crash.

Check that all wheel nuts are properly tightened. See "Wheel Nut Torque" under Capacities and Specifications ▷ 352.
Lightly coat the inner diameter of the wheel hub opening with wheel bearing grease after a wheel change or tire rotation to prevent corrosion or rust build-up.

### When It Is Time for New Tires

Factors, such as maintenance, temperatures, driving speeds, vehicle loading, and road conditions affect the wear rate of the tires.

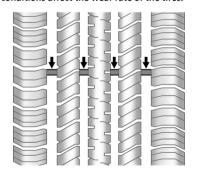

Treadwear indicators are one way to tell when it is time for new tires. Treadwear indicators appear when the tires have only 1.6 mm (1/16 in) or less of tread remaining. See *Tire Inspection* ♀ 322 and *Tire Rotation* ♀ 323.

The rubber in tires ages over time. This also applies to the spare tire, if the vehicle has one, even if it is never used. Multiple factors including temperatures, loading conditions, and inflation pressure maintenance affect how fast aging takes place. GM recommends that tires, including the spare if equipped, be replaced after six years, regardless of tread wear. To identify the age of a tire, use the tire manufacture date, which is the last four digits of the DOT Tire Identification Number (TIN) molded into one side of the tire sidewall. The last four digits of the TIN indicate the tire manufactured date. The first two digits represent the week and the last two digits, the year. For example, the third week of the year 2020 would have a 4-digit DOT date of 0320. Week 01 is the first full week (Sunday through Saturday) of each year.

## **Vehicle Storage**

Tires age when stored normally mounted on a parked vehicle. Park a vehicle that will be stored for at least a month in a cool, dry, clean area away from direct sunlight to slow aging. This area should be free of grease, gasoline, or other substances that can deteriorate rubber.

Parking for an extended period can cause flat spots on the tires that may result in vibrations while driving. When storing a vehicle for at least a month, remove the tires or raise the vehicle to reduce the weight from the tires.

## **Buying New Tires**

GM has developed and matched specific tires for the vehicle. The original equipment tires installed were designed to meet General Motors Tire Performance Criteria Specification (TPC Spec) system rating. When replacement tires are needed, GM strongly recommends buying tires with the same TPC Spec rating.

GM's exclusive TPC Spec system considers over a dozen critical specifications that impact the overall performance of the vehicle, including brake system performance, ride and handling, traction control, and tire pressure monitoring performance. GM's TPC Spec number is molded onto the tire's sidewall near the tire size.

## **⚠** Warning

Tires could explode during improper service. Attempting to mount or dismount a tire could cause injury or death. Only your dealer or authorized tire service center should mount or dismount the tires.

## <u>Marning</u>

Mixing tires of different sizes (other than those originally installed on the vehicle), brands, tread patterns, or types may cause loss of vehicle control, resulting in a crash or other vehicle damage. Use the correct size, brand, and type of tire on all wheels.

GM recommends replacing worn tires in complete sets of four. Uniform tread depth on all tires will help to maintain the performance of the vehicle. Braking and handling performance may be adversely affected if all the tires are not replaced at the same time. If proper rotation and maintenance have been done, all four tires should wear out at about the same time. However, if it is necessary to replace only one axle set of worn tires, place the new tires on the rear axle. See *Tire Rotation* 

⇒ 323.

Winter tires with the same speed rating as the original equipment tires may not be available for H, V, W, Y and ZR speed rated tires. Never exceed the winter tires' maximum speed capability when using winter tires with a lower speed rating.

## ⚠ Warning

Using bias-ply tires on the vehicle may cause the wheel rim flanges to develop cracks after many miles of driving. A tire and/or wheel could fail suddenly and cause a crash. Use only radial-ply tires with the wheels on the vehicle.

If the vehicle tires must be replaced with a tire that does not have a TPC Spec number, make sure they are the same size, load range, speed rating, and construction (radial) as the original tires.

The Tire and Loading Information label indicates the original equipment tires on the vehicle. See *Vehicle Load Limits* ❖ 182.

## **Different Size Tires and Wheels**



If different sized wheels are used, there may not be an acceptable level of performance and safety if tires not recommended for those wheels are selected. This increases the chance of a crash and serious injury. Only use GM specific wheel and tire systems developed for the vehicle, and have them properly installed by a GM certified technician.

If wheels or tires are installed that are a different size than the original equipment wheels and tires, vehicle performance, including its braking, ride and handling characteristics, stability, and resistance to rollover may be affected. If the vehicle has electronic systems such as antilock brakes, rollover airbags, traction control, electronic stability control, or all-wheel drive, the performance of these systems can also be affected

See Buying New Tires \$\diamoldo 324 and Accessories and Modifications \$\diamoldo 290.

# Wheel Alignment and Tire Balance

The tires and wheels were aligned and balanced at the factory to provide the longest tire life and best overall performance. Adjustments to wheel alignment and tire balancing are not necessary on a regular basis. Consider an alignment check if there is unusual tire wear or the vehicle is significantly pulling to one side or the other. Some slight pull to the left or right, depending on the slope of the road and/or other road surface variations such as troughs or ruts, is normal. If the vehicle is vibrating when driving on a smooth road, the tires and wheels may need to be rebalanced. See your dealer for proper diagnosis.

## **Wheel Replacement**



Using the wrong replacement wheels, wheel bolts, or wheel nuts can be dangerous. It could affect the braking and handling of the vehicle. Tires can lose

(Continued)

## Warning (Continued)

air and cause loss of control, resulting in a crash. Always use the correct wheel, wheel bolts, and wheel nuts for replacement.

## **⚠** Warning

Replacing a wheel with a used one is dangerous. How it has been used or how far it has been driven may be unknown. It could fail suddenly and cause a crash. When replacing wheels, use a new GM original equipment wheel.

## Caution

The wrong wheel can also cause problems with bearing life, brake cooling, speedometer or odometer calibration, headlight aim, bumper height, vehicle ground clearance, and tire or tire chain clearance to the body and chassis.

Replace any wheel that is bent, cracked, or badly rusted or corroded. If wheel nuts keep coming loose, the wheel, wheel bolts, and wheel nuts should be replaced. If the wheel leaks air, replace it. Some aluminum wheels can be repaired. See your dealer if any of these conditions exist.

Your dealer will know the kind of wheel that is needed.

Each new wheel should have the same loadcarrying capacity, diameter, width, offset, and be mounted the same way as the one it replaces.

Replace wheels, wheel bolts, wheel nuts, or Tire Pressure Monitor System (TPMS) sensors with new GM original equipment parts.

# Tire Chains and Other Traction Devices

## **⚠** Warning

Do not use tire chains. There is not enough clearance. Tire chains used on a vehicle without the proper amount of clearance can

(Continued)

## Warning (Continued)

cause damage to the brakes, suspension, or other vehicle parts. The area damaged by the tire chains could cause loss of control and a crash.

Use another type of traction device only if its manufacturer recommends it for the vehicle's tire size combination and road conditions. Follow that manufacturer's instructions. To avoid vehicle damage, drive slowly and readjust or remove the traction device if it contacts the vehicle. Do not spin the wheels. If traction devices are used, install them on the tires of the drive axle only.

## If a Tire Goes Flat

It is unusual for a tire to blow out while driving, especially if the tires are maintained properly. It is much more likely for a tire to experience a slow leak. See *Tires* ⇔ 316.

In the event of a blowout, follow these tips:

- A front tire blowout causes the vehicle to pull toward the side of the flat. Take your foot off the accelerator pedal and grip the steering wheel firmly. Steer to maintain lane position, and then gently brake to a stop.
- A rear blowout, particularly on a curve, acts much like a skid and may require the same correction as used in a skid. Stop pressing the accelerator pedal and steer to straighten the vehicle. It may be very bumpy and noisy. Gently brake to a stop.

The vehicle has no spare tire, no tire changing equipment, and no place to store a tire.

## ⚠ Warning

Driving on a flat tire will cause permanent damage to the tire. Re-inflating a tire after it has been driven on while severely underinflated or flat may cause a blowout and a serious crash. Never attempt to re-inflate a tire that has been driven on while severely underinflated or flat. Have

(Continued)

## Warning (Continued)

your dealer or an authorized tire service center repair or replace the flat tire as soon as possible.

If a tire goes flat, avoid further tire and wheel damage by driving slowly to a level place, well off the road, if possible. Turn on the hazard warning flashers. See Hazard Warning Flashers 

→ 134.

This vehicle may come with a tire sealant and compressor kit. To use the tire sealant and compressor kit, see *Tire Sealant and Compressor Kit* ⇒ 328.

## **Tire Sealant and Compressor Kit**

## ⚠ Warning

Overinflating a tire could cause the tire to rupture and you or others could be injured. Be sure to read and follow the tire sealant and compressor kit instructions and inflate the tire to its recommended pressure. Do not exceed the recommended pressure.

## **⚠** Warning

Storing the tire sealant and compressor kit or other equipment in the passenger compartment of the vehicle could cause injury. In a sudden stop or collision, loose equipment could strike someone. Store the tire sealant and compressor kit in its original location.


If this vehicle has a tire sealant and compressor kit, there may not be a spare tire or tire changing equipment, and on some vehicles there may not be a place to store a tire.

The tire sealant and compressor can be used to temporarily seal punctures up to 6 mm (0.25 in) in the tread area of the tire. It can also be used to inflate an underinflated tire.


If the tire has been separated from the wheel, has damaged sidewalls, or has a large puncture, the tire is too severely damaged for the tire sealant and compressor kit to be effective.

Read and follow all of the tire sealant and compressor kit instructions.

The kit includes:

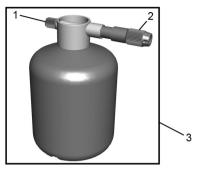

- 1. Sealant Canister Inlet Valve
- 2. Sealant/Air Hose
- 3. Tire Sealant Canister

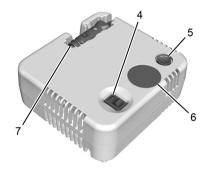

- 4. On/Off Button
- 5. Pressure Deflation Button
- 6. Pressure Gauge
- 7. Power Plug



8. Air Only Hose

## **Tire Sealant**

Read and follow the safe handling instructions on the label adhered to the tire sealant canister (3).

Check the tire sealant expiration date on the tire sealant canister. The tire sealant canister (3) should be replaced before its expiration date. Replacement tire sealant canisters are available at your local dealer.

There is only enough sealant to seal one tire. After usage, the tire sealant canister must be replaced.

## Using the Tire Sealant and Compressor Kit to Temporarily Seal and Inflate a Punctured Tire


When using the tire sealant and compressor kit during cold temperatures, warm the kit in a heated environment for five minutes. This will help to inflate the tire faster.

If a tire goes flat, avoid further tire and wheel damage by driving slowly to a level place. Turn on the hazard warning flashers. See *Hazard Warning Flashers* ♀ 134.


See *If a Tire Goes Flat* \$\infty\$ 327 for other important safety warnings.

Do not remove any objects that have penetrated the tire.

- 2. Remove the air only hose (8) and the power plug (7) from the compressor.
- 3. Place the compressor on the ground near the flat tire.

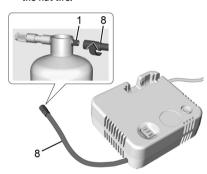

- Remove the cap from the sealant canister inlet valve (1) by turning it counterclockwise. Attach the air only hose (8) to the sealant canister inlet valve (1) by turning it clockwise until tight.
- 5. Remove the valve stem cap from the flat tire by turning it counterclockwise.

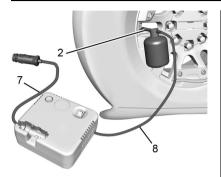

- Attach the sealant/air hose (2) to the tire valve stem by turning it clockwise until tight.
- Plug the power plug (7) into the accessory power outlet in the vehicle. Unplug all items from other accessory power outlets. See Power Outlets \$\sim\$ 97

If the vehicle has an accessory power outlet, do not use the cigarette lighter.

If the vehicle only has a cigarette lighter, use the cigarette lighter.

Do not pinch the power plug cord in the door or window.

- 8. Start the vehicle. The vehicle must be running while using the air compressor.
- 9. Press the on/off button (4) to turn the tire sealant and compressor kit on.

The compressor will inject sealant and air into the tire.

The pressure gauge (6) will initially show a high pressure while the compressor pushes the sealant into the tire. Once the sealant is completely dispersed into the tire, the pressure will quickly drop and start to rise again as the tire inflates with air only.

10. Inflate the tire to the recommended

inflation pressure using the pressure gauge (6). The recommended inflation pressure can be found on the Tire and Loading Information label. See *Tire Pressure* 

318. The pressure gauge (6) may read higher than the actual tire pressure while the compressor is on. Turn the compressor off to get an accurate pressure reading. The compressor may be turned on/off until the correct pressure is reached.

#### Caution

If the recommended pressure cannot be reached after approximately 25 minutes, the vehicle should not be driven farther. The tire is too severely damaged and the tire sealant and compressor kit cannot inflate the tire. Remove the power plug from the accessory power outlet and unscrew the inflating hose from the tire valve.

11. Press the on/off button (4) to turn the tire sealant and compressor kit off.

The tire is not sealed and will continue to leak air until the vehicle is driven and the sealant is distributed in the tire. Therefore, Steps 12–20 must be done immediately after Step 11.

Be careful while handling the tire sealant and compressor kit as it could be warm after usage.

- 12. Unplug the power plug (7) from the accessory power outlet in the vehicle.
- Turn the sealant/air hose (2) counterclockwise to remove it from the tire valve stem.
- 14. Replace the tire valve stem cap.

- Turn the air only hose (8) counterclockwise to remove it from the tire sealant canister inlet valve (1).
- 16. Replace the tire sealant canister inlet valve (1) cap.
- 17. Return the air only hose (8) and power plug (7) back to their original storage location.



- 18. If the flat tire was able to inflate to the recommended inflation pressure, remove the maximum speed label from the sealant canister and place it in a highly visible location.
  - Do not exceed the speed on this label until the damaged tire is repaired or replaced.
- 19. Return the equipment to its original storage location in the vehicle.
- 20. Immediately drive the vehicle 8 km (5 mi) to distribute the sealant in the tire.

 Stop at a safe location and check the tire pressure. Refer to Steps 1–10 under "Using the Tire Sealant and Compressor Kit without Sealant to Inflate a Tire (Not Punctured)."


If the tire pressure has fallen more than 68 kPa (10 psi) below the recommended inflation pressure, stop driving the vehicle. The tire is too severely damaged and the tire sealant cannot seal the tire.

If the tire pressure has not dropped more than 68 kPa (10 psi) from the recommended inflation pressure, inflate the tire to the recommended inflation pressure.

- 22. Wipe off any sealant from the wheel, tire, or vehicle.
- 23. Dispose of the used tire sealant canister (3) at a local dealer or in accordance with local state codes and practices.
- 24. Replace it with a new canister available from your dealer.
- 25. After temporarily sealing a tire using the tire sealant and compressor kit, take the vehicle to an authorized dealer within 161 km (100 mi) of driving to have the tire repaired or replaced.


## Using the Tire Sealant and Compressor Kit without Sealant to Inflate a Tire (Not Punctured)

The kit includes:

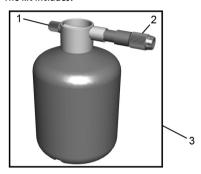

- 1. Sealant Canister Inlet Valve
- 2. Sealant/Air Hose

3. Tire Sealant Canister

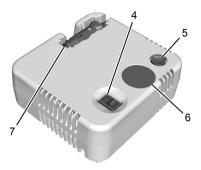

- 4. On/Off Button
- 5. Pressure Deflation Button
- 6. Pressure Gauge

7. Power Plug



8. Air Only Hose

If a tire goes flat, avoid further tire and wheel damage by driving slowly to a level place. Turn on the hazard warning flashers. See *Hazard Warning Flashers* 

↑ 134.

See *If a Tire Goes Flat* ⇒ 327 for other important safety warnings.

- Remove the compressor from its storage location. See Storing the Tire Sealant and Compressor Kit 

  333.
- 2. Remove the air only hose (8) and the power plug (7) from the compressor.

- 3. Place the compressor on the ground near the flat tire.
  - Make sure the tire valve stem is positioned close to the ground so the hose will reach it.
- 4. Remove the valve stem cap from the flat tire by turning it counterclockwise.
- 5. Attach the air only hose (8) to the tire valve stem by turning it clockwise until tight.
- Plug the power plug (7) into the accessory power outlet in the vehicle. Unplug all items from other accessory power outlets. See Power Outlets \$> 97.

If the vehicle has an accessory power outlet, do not use the cigarette lighter.

If the vehicle only has a cigarette lighter, use the cigarette lighter.

Do not pinch the power plug cord in the door or window.

- 7. Start the vehicle. The vehicle must be running while using the air compressor.
- 8. Press the on/off button (4) to turn the tire sealant and compressor kit on.

The compressor will inflate the tire with air only.

9. Inflate the tire to the recommended inflation pressure using the pressure gauge (6). The recommended inflation pressure can be found on the Tire and Loading Information label. See *Tire Pressure* ▷ 318. The pressure gauge (6) may read higher than the actual tire pressure while the compressor is on. Turn the compressor off to get an accurate pressure reading. The compressor may be turned on/off until the correct pressure is reached.

#### Caution

If the recommended pressure cannot be reached after approximately 25 minutes, the vehicle should not be driven farther. The tire is too severely damaged and the tire sealant and compressor kit cannot inflate the tire. Remove the power plug from the accessory power outlet and unscrew the inflating hose from the tire valve.

 Press the on/off button (4) to turn the tire sealant and compressor kit off.
 Be careful while handling the compressor as it could be warm after usage.


- 11. Unplug the power plug (7) from the accessory power outlet in the vehicle.
- 12. Turn the air only hose (8) counterclockwise to remove it from the tire valve stem.
- 13. Replace the tire valve stem cap.
- 14. Return the air only hose (8) and power plug(7) back to their original storage location.
- 15. Return the equipment to its original storage location in the vehicle.

Accessory adapters that can be used to inflate an air mattress or a ball, etc., are located on the bottom of the compressor kit

# Storing the Tire Sealant and Compressor Kit

The tire sealant and compressor kit is stored in the underhood compartment. To remove the kit:

1. Open the hood. See *Hood* ⇔ 15.

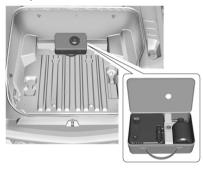

- Loosen and remove the retainer by turning it counterclockwise.
- Open the lid and remove the contents, or remove the case and contents.

To store the tire sealant and compressor kit, reverse Steps 1–3.

## **Jump Starting**

For more information about the vehicle battery, see *Battery*  $\Rightarrow$  300.

If the battery has run down, use another vehicle and some jumper cables to start the vehicle. Be sure to use the following steps to do it safely.

## **⚠** Warning

Batteries can hurt you. They can be dangerous because:

- They contain acid that can burn you.
- They contain gas that can explode or ignite.
- They contain enough electricity to burn you.

Use eye protection when handling the battery. If you do not follow these steps exactly, some or all of these things can hurt you.

## **⚠** Warning

Charging the 12-volt battery and the high voltage battery at the same time may result in overheating or failure. Do not attempt to charge the 12-volt battery and the high voltage battery at the same time. If jumpstarting fails, see your dealer for service.

#### Caution

The vehicle is equipped with an AGM/VRLA 12-volt battery, which can be damaged by using the incorrect type of trickle charger. An AGM/VRLA-compatible charger must be used, with the appropriate setting selected. Follow the trickle charger manufacturer instructions.

## Caution

Ignoring these steps could result in costly damage to the vehicle that would not be covered by the vehicle warranty. Trying to start the vehicle by pushing or pulling it will not work, and it could damage the vehicle.


The battery is under a cover in the underhood compartment.

To access the battery under the hood, the left cover needs to be removed.

Before you connect the cables, here are some basic things you should know. Positive (+) will go to the positive (+) terminal. Negative (-) will go to the negative (-) terminal on the battery providing the jump start to the negative grounding point for the discharged battery.

#### Caution

If the jumper cables are connected or removed in the wrong order, electrical shorting may occur and damage the vehicle. The repairs would not be covered by the vehicle warranty. Always connect and remove the jumper cables in the correct order, making sure that the cables do not touch each other or other metal.

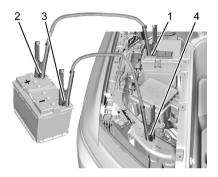

## **Connection Points and Sequence**

- 1. Discharged Battery Positive (+) Terminal
- 2. Good Battery Positive (+) Terminal
- 3. Good Battery Negative (-) Terminal
- Discharged Battery Negative (-) Grounding Point

The good battery positive (+) terminal and the good battery negative (-) terminal are on the battery of the vehicle providing the jump start.

The discharged battery positive (+) terminal and the discharged battery negative (-) grounding point are on the passenger side of the vehicle.

The discharged battery positive (+) terminal is under a cover. Remove the cover to expose the terminal.

#### Caution

If the other vehicle does not have a 12-volt system with a negative ground, both vehicles can be damaged. Only use a vehicle that has a 12-volt system with a negative ground for jump starting.


- Check the other vehicle. It must have a 12-volt battery with a negative ground system.
- Get the vehicles close enough so the jumper cables can reach, but be sure the vehicles are not touching each other. If they are, it could cause a ground connection you do not want. You would not be able to start the vehicle, and the bad grounding could damage the electrical systems.
- To avoid the possibility of the vehicles rolling, set the parking brake firmly on both vehicles involved in the jump start procedure. Put the vehicles into P

(Park). If the other vehicle has a manual transmission, put the vehicle in N (Neutral) before setting the parking brakes.

#### Caution

If any accessories are left on or plugged in during the jump starting procedure, they could be damaged. The repairs would not be covered by the vehicle warranty. Whenever possible, turn off or unplug all accessories on either vehicle when jump starting.

- Turn off both vehicles. Unplug unnecessary accessories plugged into the cigarette lighter or the accessory power outlet. Turn off the radio and all lights that are not needed. This will avoid sparks and help save both batteries and the radio.
- 5. Open the hood. See *Hood* ⇒ 15.

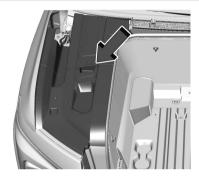

- Turn the three bolts three quarter turn counter-clockwise and remove the left side access cover.
- 7. Locate the battery positive (+) terminal and negative (-) grounding point.
- Connect one end of the red positive (+) cable to the discharged battery positive (+) terminal.

Do not let the other end touch metal.

Connect the other end of the red positive
 (+) cable to the good battery positive
 (+) terminal.

- 10. Connect one end of the black negative
  - (-) cable to the good battery negative
  - (-) terminal.

Do not let the other end touch anything until the next step.

- Connect the other end of the negative (-)
  cable to the discharged battery negative (-)
  grounding point.
- 12. Now start the vehicle with the good battery and keep the vehicle running for a while.
- Try to start the vehicle that had the dead battery. If it will not start after a few tries, it probably needs service.

## **Jumper Cable Removal**

To remove the jumper cables, reverse Steps 8–11 in exact order.

After starting the disabled vehicle and removing the jumper cables, allow it to idle for several minutes.

After removing the jumper cables, install the left side access cover by turning the three bolts three quarters clockwise.

# Towing the Vehicle Transporting a Disabled Vehicle

## Caution

Incorrectly transporting a disabled vehicle may cause damage to the vehicle. Use proper tire straps to secure the vehicle to the flatbed tow truck. Do not strap or hook to any frame, underbody, or suspension component not specified below. Do not move vehicles with drive axle tires on the ground. Damage is not covered by the vehicle warranty.

#### Caution

The vehicle may be equipped with an Electric Parking Brake (EPB) and/or an electronic shifter. In the event of a loss of 12-volt battery power, the EPB cannot be released, and the vehicle cannot be shifted to N (Neutral). Tire skates or dollies must be used under the non-rolling tires to prevent damage while loading/

(Continued)

## **Caution (Continued)**

unloading the vehicle. Dragging the vehicle will cause damage not covered by the vehicle warranty.

Contact a professional towing service if the disabled vehicle must be transported. GM recommends a flatbed tow truck to transport a disabled vehicle. Use ramps to help reduce approach angles, if necessary.

The vehicle must be in N (Neutral) and the Electric Parking Brake must be released when loading the vehicle onto a flatbed tow truck.

- If the vehicle will not start but still has 12-volt battery power, bucklethe driver seat belt then press and hold the brake pedal for 60 seconds and shift into N (Neutral).
- If the 12-volt battery is dead and/or the vehicle will not start. Try to jump start the vehicle. See Battery \$\infty\$ 300 and if the jump start is successful, retry the "Car Wash Mode" procedure.

## **Front Attachment Points**



The vehicle is equipped with specific attachment points to be used to pull the vehicle onto a flatbed car carrier from a flat road surface. Do not use these attachment points to pull the vehicle from snow, mud, sand, or a ditch.

# Appearance Care Exterior Care

#### Locks

Locks are lubricated at the factory. Only use a de-icing agent when absolutely necessary, and have the locks greased after using the de-icing agent. See Recommended Fluids and Lubricants ♀ 351.

## Washing the Vehicle

## **⚠** Warning

Do not power wash any part of the vehicle's interior, including the vinyl floor covering. This could damage safety and other systems in the vehicle, which would not be covered by the vehicle warranty.

#### Caution

Do not use petroleum-based, acidic, or abrasive cleaning agents as they can damage the vehicle's paint, metal,

(Continued)

## **Caution (Continued)**

or plastic parts. If damage occurs, it would not be covered by the vehicle warranty. Approved cleaning products can be obtained from your dealer. Follow all manufacturer directions regarding correct product usage, necessary safety precautions, and appropriate disposal of any vehicle care product.

To preserve the exterior finish, wash it often and out of direct sunlight.

Take care to wash materials such as calcium chloride and other salts, ice melting agents, road oil and tar, tree sap, bird droppings, chemicals from industrial chimneys, etc. from the finish as soon as possible. These materials can damage the finish if they remain on painted surfaces.

## **Automatic Car Wash**

#### Caution

Some automatic car washes can cause damage to the vehicle, wheels, and ground effects. Automatic car washes are not recommended, due to lack of clearance for the undercarriage and/or wide rear tires and wheels.

#### Caution

To avoid damage to a matte paint finish, do not use an automatic car wash equipped with brushes or scrubbers. Only use touchless automatic car washes.

Follow the posted instructions at the automatic car wash carefully. Turn off the windshield wipers and rear window wiper, if equipped. Remove any accessories that can be damaged or interfere with the car wash equipment.

## **Hand Wash**

Thoroughly rinse all cleaning agents before and after hand washing. Agents left to dry on the exterior may stain the finish.

Dry the exterior finish with a soft, clean chamois or an all-cotton towel to avoid surface scratches and water spotting.

## **Cleaning Underhood Components**

## Caution

Do not power wash any component under the hood that has this symbol.

This could cause damage that would not be covered by the vehicle warranty.

Only use water when cleaning underhood components. Solvents and aggressive cleaners can be harmful.

#### Caution

Avoid using high-pressure washers closer than 30 cm (12 in) to the surface of the vehicle. Use of power washers exceeding 8,274 kPa (1,200 psi) can result in damage or removal of paint and decals.

If you choose to use a pressure washer, user care when handling and follow this criteria:

- Keep water pressure below 14 000 KPa (2,000 PSI).
- Keep water temperature below 80 °C (180 °F).
- Use a spray nozzle with a 40 degree-wide or greater angle spray pattern.
- Keep the nozzle at least 30 cm (12 in) away from all surfaces.

#### **Finish Care**

#### Caution

Do not apply waxes or polishes to uncoated plastic, vinyl, rubber, decals, simulated wood, or matte paint as damage can occur.

## **Caution**

Machine compounding or aggressive polishing on a basecoat/clearcoat paint finish may damage it. Use only nonabrasive waxes and polishes that are made for a basecoat/clearcoat paint finish on the vehicle.

Performing occasional hand waxing or mild polishing removes residue from the paint finish. Do not apply aftermarket clearcoat sealant/wax materials. See your dealer for approved cleaning products.

Avoid rubbing the finish vigorously. This can create bright spots and an uneven appearance on the finish.

Airborne pollutants can damage painted vehicle surfaces and cause ring-shaped discolorations and small, irregular dark spots. If painted surfaces are damaged, see your dealer to have the damage assessed and repaired.

To keep paint finish looking new, keep the vehicle garaged or covered whenever possible.

## **Protecting Exterior Bright Metal Moldings**

#### Caution

Failure to clean and protect the bright metal moldings can result in a hazy white finish or pitting. This damage would not be covered by the vehicle warranty.

The bright metal moldings on the vehicle are made of aluminum, chrome, or stainless steel. To prevent damage, always follow these cleaning instructions:

- Be sure the molding is cool to the touch before applying any cleaning solution.
- Use only approved cleaning solutions for aluminum, chrome, or stainless steel. Some cleaners are highly acidic or contain alkaline substances and can damage the moldings.
- Always dilute a concentrated cleaner according to the manufacturer's instructions.
- Do not use cleaners that are not intended for automotive use.
- Use a nonabrasive wax after washing to protect and extend the molding finish.

## Spray-In Bedliner Care

#### Caution

Using silicone-based products may damage the bedliner, reduce the slip-resistant texture, and attract dirt.

A spray-in bedliner is a permanent coating that bonds to the truck bed and cannot be removed. Promptly rinse the bedliner surface following a chemical spill to avoid permanent damage.

Spray-in bedliners can fade from oxidation, road dirt, heavy-duty hauling, and hard water stains. Clean it periodically by washing off the loose dirt and using a mild detergent. To restore the original appearance, apply the bedliner conditioner available through your dealer.

## Cleaning Exterior Lights/Lenses, Emblems, Decals, and Stripes

#### Caution

Failure to clean lights properly can cause damage to the light cover that would not be covered by the vehicle warranty.

#### Caution

Using wax on low gloss black finish stripes can increase the gloss level and create a non-uniform finish. Clean low gloss stripes with soap and water only.

Use lukewarm or cold water, a soft cloth, and a car washing soap to clean exterior lights, lenses, emblems, decals, and stripes. Follow instructions under "Washing the Vehicle" previously in this section.

Light covers are made of plastic, and may have a UV protective coating. Do not clean or wipe them while they are dry.

Do not use any of the following on light covers:

- Abrasive or caustic agents
- Washer fluids and other cleaning agents in higher concentrations than suggested by the manufacturer
- Solvents, alcohols, fuels, or other harsh cleaners
- Ice scrapers or other hard items

 Aftermarket appearance caps or covers while the lights are illuminated. Excessive heat may be generated and can damage the covers.

#### Air Intakes

Clear debris from the air intakes, between the hood and windshield, when washing the vehicle.

## **Shutter System**



The vehicle may have a shutter system that automatically closes the frontal cooling openings. This system promotes airflow around the vehicle, reducing drag and providing energy savings. Ensure the shutter

system is clear of any visible debris, snow, or ice. If the Service Vehicle Soon light activates and remains after clearing the shutter system, see Service Vehicle Soon Light (Propulsion System Failure) ⇒ 110.

## **Windshield and Wiper Blades**

Clean the outside of the windshield with glass cleaner.

Clean rubber wiper blades using a lint-free cloth or paper towel soaked with windshield washer fluid or a mild detergent. Wash the windshield thoroughly when cleaning the blades. Bugs, road grime, sap, and a buildup of vehicle wash/wax treatments may cause wiper streaking.

Extreme dusty conditions, sand, salt, heat, sun, snow, and ice can cause damage. Replace the wiper blades when they are worn or damaged. Damage can be caused by extreme dusty conditions, sand, salt, heat, sun, snow, and ice.

## Weatherstrips

Apply weatherstrip lubricant once a year to help weaterstrips last longer, seal better, and not stick or squeak. Hot, dry climates may require more frequent application.

Use a clean cloth to remove any black marks caused by weatherstrips.

## Tires, Wheels, and Wheel Trim

#### Caution

Using petroleum-based tire dressing products on the vehicle may damage the paint finish and/or tires. When applying a tire dressing, always wipe off any overspray from all painted surfaces on the vehicle.

Use a stiff brush with tire cleaner to clean the tires.

## **Caution**

Chrome wheels and chrome wheel trim may be damaged if the vehicle is not washed after driving on roads that have been sprayed with magnesium chloride or calcium chloride. These are used on roads for conditions such as dust control. Always wash the chrome with soap and water after exposure.

#### Caution

To avoid surface damage on wheels and wheel trim, do not use strong soaps, chemicals, abrasive polishes, cleaners, or brushes. Use only GM approved cleaners. Do not drive the vehicle through an automatic car wash that uses silicon carbide tire/wheel cleaning brushes. Damage could occur and the repairs would not be covered by the vehicle warranty.

Use a soft, clean cloth with mild soap and water to clean the wheels. After rinsing thoroughly with clean water, dry with a soft, clean towel. Wax as desired.

## **Body Component Lubrication**

Lubricate all key lock cylinders, hood hinges, liftgate hinges, and the steel charge port door hinge unless the components are plastic. See Recommended Fluids and Lubricants ♀ 351.

## **Underbody Maintenance**

#### Caution

For electric or hybrid vehicles, perform regular care around the high voltage system. Do not direct high pressure spray at or around connectors, cables, or any of the vents. High pressure can damage the seals and battery components.

Every six months, flush any corrosive materials from the underbody with plain water. Take care to thoroughly clean any areas where mud and other debris can collect. If equipped, extend power assist steps and use a high pressure wash to clean all joints and gaps.

Do not directly power wash the transfer case and/or front/rear axle output seals. High pressure water can get into the seals and contaminate the fluid. Contaminated fluid decreases the life of the transfer case and/or axles and should be replaced.

## **Sheet Metal Damage**

If the vehicle is damaged and requires sheet metal repair or replacement, use original manufacturer replacement parts which provide corrosion protection and maintain the vehicle warrantu.

If original manufacturer replacement parts are not used, make sure the body repair shop applies anti-corrosion material to parts repaired or replaced.

## **Finish Damage**

Quickly repair minor chips and scratches with touch-up materials available from your dealer to avoid corrosion. See your dealer's body and paint shop to correct larger areas of finish damage.

## **Chemical Paint Spotting**

Airborne pollutants can damage painted vehicle surfaces and cause ring-shaped discolorations and small, irregular dark spots. See "Finish Care" previously in this section for cleaning instructions.

## **Interior Care**

#### Caution

Immediately remove cleaners, hand lotions, sunscreen, and insect repellent from all interior surfaces or permanent damage may result.

#### Caution

Use cleaners specifically designed for the surfaces being cleaned to prevent permanent damage to the vehicle. Apply all cleaners directly to a cleaning cloth. Do not spray cleaners on any switches or controls.

## Caution

To prevent damage:

- Never use a razor or any other sharp object to remove soil from any interior surface.
- Never use a brush with stiff bristles.

(Continued)

## **Caution (Continued)**

- Never rub any surface aggressively or with too much pressure.
- Do not get any exposed electrical components wet.
- Do not use laundry detergents or dishwashing soaps with degreasers. Do not use solutions that contain strong or caustic soap.
- Do not heavily saturate the upholstery when cleaning.
- Do not use solvents or cleaners containing solvents.
- Do not use disinfecting wipes that are scented or contain bleach. Do not use wipes or cleaners that show a color transfer to the wipe or change the appearance of the interior surface when used.
- Do not use scented or gel-type hand sanitizers. If hand sanitizer comes in contact with interior surfaces of the vehicle, blot immediately and clean with a soft cloth dampened with a mild soap and water solution.

To prevent dirt particle abrasions to the vehicle's interior, regularly clean it. Before using cleaners, read and follow all safety instructions on the label. While cleaning the interior, open the doors and windows for proper ventilation. Newspapers or dark garments can transfer color to the interior.

When using liquid soap cleaners, follow the directions on the specific cleaner or soap solution for dilution instructions.

#### Interior Glass

#### Caution

To prevent scratching, never use abrasive cleaners on automotive glass. Abrasive cleaners or aggressive cleaning may damage the rear window defogger.

Use a microfiber cloth fabric dampened with water to clean interior glass. Wipe droplets left behind with a clean dry cloth. If necessary, use a commercial glass cleaner after cleaning with plain water.

Cleaning the interior windshield with water during the first three to six months of ownership will reduce tendency to fog.

## **Speaker Covers**

Vacuum gentlu around speaker covers to prevent damage. Clean spots with water and mild soap.

## Vinul/Rubber Floor and Mats



Do not use cleaners that contain silicone. wax-based products, or cleaners that increase gloss on vinul/rubber floor and mats. These cleaners can permanently change the appearance and feel of the vinul/rubber and can make the floor slipperu. Your foot could slip while operating the vehicle, and you could lose control, resulting in a crash. You or others could be injured.

If equipped with vinul/rubber floor and mats, use a soft cloth and/or brush dampened with water to remove dust and loose dirt. For more thorough cleaning, use a mild soap and water solution.

## **Coated Moldings**

When cleaning coated moldings.

- When lightly soiled, wipe with a sponge or soft, lint-free cloth dampened with water.
- When heavily soiled, use warm soapy water.

## Fabric/Carpet/Suede

Before cleaning, remove as much solid soils as possible, then gently vacuum the surface using a soft brush attachment. If a rotating vacuum brush attachment is used, only use it on the floor carpet.

Gently blot liquids with a paper towel. Continue blotting until no more soil can be removed.

#### To clean:

- Saturate a clean, lint-free colorfast cloth with water. Microfiber cloth is recommended to prevent lint transfer to the fabric or carpet.
- Remove excess moisture by gently wringing until water does not drip from the cleaning cloth.
- Start on the outside edge of the soil and gently rub toward the center. Fold the cleaning cloth to a clean area frequently to prevent forcing the soil into the fabric.

- 4. Continue gently rubbing the soiled area until there is no longer any color transfer from the soil to the cleaning cloth.
- If the soil is not completely removed, use a mild soap solution followed only by plain water.
- 6. After cleaning, use a paper towel to blot excess moisture.

Stubborn stains may require a commercial upholstery cleaner or spot lifter. Test a small hidden area for colorfastness before using a commercial upholstery cleaner or spot lifter. If ring formation occurs, clean the entire fabric or carpet.

# Cleaning High Gloss Surfaces and Vehicle Information and Radio Displays

## Caution

Do not attach a device with a suction cup to the display. This may cause damage and would not be covered by the vehicle warranty.

Use a microfiber cloth on high gloss surfaces or vehicle displays. First, use a soft bristle brush to remove dirt that can scratch the surface.

Then gently clean by rubbing with a microfiber cloth. Never use window cleaners or solvents. Periodically hand wash the microfiber cloth separately, using mild soap. Do not use bleach or fabric softener. Rinse thoroughly and air dry before next use.

- 1. Use a soft bristle brush to remove any dirt from the high gloss surface/display.
- Gently clean the surface/display with a clean microfiber cloth that has not been bleached or washed with fabric softener. Never use window cleaners or solvents.

Instrument Panel, Leather, Vinyl, Other Plastic Surfaces, Low Gloss Paint Surfaces, and Natural Open Pore Wood Surfaces

#### Caution

Soaking or saturating leather, especially perforated leather, as well as other interior surfaces, may cause permanent damage. Wipe excess moisture from these surfaces after cleaning and allow them to dry naturally. Never use heat, steam, or spot removers. Do not use liquids that contain

(Continued)

## **Caution (Continued)**

alcohol or solvents on leather seats. Do not use cleaners that contain silicone or wax-based products. Cleaners containing these solvents can permanently change the appearance and feel of leather or soft trim and are not recommended.

#### Caution

Use of air fresheners may cause permanent damage to plastics and painted surfaces. If an air freshener comes in contact with any plastic or painted surface in the vehicle, blot immediately and clean with a soft cloth dampened with a mild soap solution. Damage caused by air fresheners would not be covered by the vehicle warranty.

Use compressed air or a vacuum to remove dust under the Multi-Functional Controller (MFC) cap, if equipped.

To remove dust and dirt from knobs and crevices on the instrument cluster:

1. Use a soft bristle brush.

2. Wipe with a soft microfiber cloth dampened with water. Use a mild soap and water solution for more thorough cleaning.

Do not use cleaners that increase gloss, especially on the instrument panel. Reflected glare can decrease visibility through the windshield under certain conditions.

#### **Care of Seat Belts**



Do not bleach or dye seat belt webbing. It may severely weaken the webbing. In a crash, they might not be able to provide adequate protection. Clean and rinse seat belt webbing only with mild soap and lukewarm water. Allow the webbing to dry.

Keep belts clean and dry.

## Floor Mats

## **⚠** Warning

If a floor mat is the wrong size or is not properly installed, it can interfere with the pedals. Interference with the pedals can cause unintended acceleration and/or increased stopping distance which can cause a crash and injury. Make sure the floor mat does not interfere with the pedals.

The original equipment floor mats are specially designed for your vehicle. If the floor mats need replacing, see "Removing and Replacing the Floor Mats" later in this section.

#### **Proper Use:**

- Use only GM-certified floor mats.
- Do not use a floor mat if the vehicle is not equipped with a floor mat retainer on the driver side floor.
- Use the floor mat with the correct side up.
   Do not turn it over.
- Do not place anything on top of the driver side floor mat.

Use only a single floor mat on the driver side.

## Removing and Replacing the Floor Mats

The driver and passenger side floor mat is held in place by two button-type carpet retainers.



- 1. Pull up on the rear of the floor mat to unlock each retainer and remove.
- Reinstall by lining up the floor mat retainer openings over the button-type carpet retainers and snapping them into position.
- Make sure the floor mat is properly secured in place. Verify the floor mat does not interfere with the pedals.

# Cleaning Rubber All-Weather Floor Mats and Floor Liners

See "Vinyl/Rubber" under Interior Care ⇒ 342 for important cleaning information.

## **Service and Maintenance**

#### 347

## **Service and Maintenance**

General Information General Information	. 347
Maintenance Schedule  Maintenance Schedule	348
Multi-Point Vehicle Inspection (MPVI)  Multi-Point Vehicle Inspection (MPVI)	
Recommended Fluids, Lubricants, and Parts Recommended Fluids and Lubricants	351
Maintenance Records  Maintenance Records	351

## **General Information**

Your vehicle is an important investment. This section describes the required maintenance for the vehicle. Follow this schedule to help protect against major repair expenses resulting from neglect or inadequate maintenance. It may also help to maintain the value of the vehicle if it is sold. It is the responsibility of the owner to have all required maintenance performed.

Your dealer has trained technicians who can perform required maintenance using genuine replacement parts. They have upto-date tools and equipment for fast and accurate diagnostics. Many dealers have extended evening and Saturday hours, courtesy transportation, and online scheduling to assist with service needs.

Your dealer recognizes the importance of providing competitively priced maintenance and repair services. With trained technicians, the dealer is the place for routine maintenance such as tire rotations and additional maintenance items like tires, brakes, batteries, and wiper blades.

## Caution

Damage caused by improper maintenance can lead to costly repairs and may not be covered by the vehicle warranty.

Maintenance intervals, checks, inspections, recommended fluids, and lubricants are important to keep the vehicle in good working condition.

Do not have chemical flushes that are not approved by GM performed on the vehicle. The use of flushes, solvents, cleaners, or lubricants that are not approved by GM could damage the vehicle, requiring expensive repairs that are not covered by the vehicle warranty.

The Tire Rotation and Required Services are the responsibility of the vehicle owner. It is recommended to have your dealer perform these services every 12 000 km/7,500 mi. Proper vehicle maintenance helps to keep the vehicle in good working condition.

## 348 Service and Maintenance

The Additional Required Services are for vehicles that:

- Carry passengers and cargo within recommended limits on the Tire and Loading Information label. See Vehicle Load Limits 

  182.
- Are driven on reasonable road surfaces within legal driving limits.

## **⚠** Warning

Performing maintenance work can be dangerous and can cause serious injury. Perform maintenance work only if the required information, proper tools, and equipment are available. If they are not, see your dealer to have a trained technician do the work. See *Doing Your Own Service Work* 

⇒ 290.

## **Maintenance Schedule**

# Rotate Tires and Perform Required Services Every 10 000 km

 Rotate the tires. Rotating the tires helps achieve a more uniform wear. The first rotation is the most important. Anytime you notice unusual tire wear, rotate the tires as soon as possible, check for proper tire inflation pressure, and check for damage to tires or wheels. If unusual wear continues after a rotation, check the wheel alignment.

See When It Is Time for New Tires  $\diamondsuit$  324 and Wheel Replacement  $\diamondsuit$  326.

- Perform the Multi-Point Vehicle Inspection.
   See Multi-Point Vehicle Inspection (MPVI)

   ⇒ 349.
- Lubricate body components. See Exterior Care ⇒ 337.

## **Additional Required Services**

#### Everu 12 000 km

 Replace the passenger compartment air filter. Or every 12 months, whichever comes first. More frequent passenger compartment air filter replacement may be needed if driving in areas with heavy traffic, poor air quality, high dust levels, or environmental allergens. Passenger compartment air filter replacement may also be needed if there is reduced airflow, window fogging, or odors. Your GM dealer can help determine when to replace the filter

## Every 160 000 km

 Replace the hood and/or body lift support gas struts. Or every 10 years, whichever comes first. See Gas Strut(s) 

303.

## Every 240 000 km

 Drain and fill the coolant circuits. Or every five years, whichever comes first. See Cooling System 

295.

## Severe Conditions Requiring More Frequent Maintenance

- Mainly driven in heavy city traffic in hot weather.
- Mainly driven in hilly or mountainous terrain.
- Frequently towing a trailer.
- Used for high speed or competitive driving.
- Used for taxi, police, or delivery service.

## Additional Required Services — Severe Service

#### Every 70 000 km

 Change electric drive unit fluid. See Recommended Fluids and Lubricants \$\sim\$ 351.

## Owner Checks and Services

## **Every Five Years**

## **Every Seven Years**

 Replace Air Conditioning Desiccant every seven years. This service requires replacement of the desiccant to help the longevity and efficient operation of the air conditioning system. This service can be complex. See your dealer.

## Multi-Point Vehicle Inspection (MPVI)

A Multi Point Vehicle Inspection (MPVI) completed by a trained technician is a maintenance assessment of your vehicle. The benefit of the MPVI is to identify service items that require immediate attention and those that may require attention in the future.

The technician will perform the following checks on your vehicle. You can obtain a copy of the appropriate MPVI checklist on your country's GM Certified Service website. For a complete list of checks, inspections, and services, see your dealer.

Some items may not apply to your vehicle and/or region.

## Diagnostics

• Service history/recall check

## **Exterior Lights**

Visual inspection

## Windshield and Wipers

Visual inspection

## 12 Volt Battery

- Battery visual inspection
- Battery test results
- Battery cables and connections

## Systems, Fluids, and Visible Leak Inspection

- Electric Drive Unit
- Drive axle
- Transfer case
- Power electronics cooling system
- Windshield washer fluid

## Tire Inspection

- Tire pressure, tread depth, and wear
- Rotation, if applicable
- Alignment check, optional
- Reset tire pressure monitor

## Service and Maintenance

- Check tire sealant expiration date, if equipped
- Check spare tire, if equipped

## **Brakes**

350

Check brake system

## **Visible and Functional Inspections**

- Seat belt components
- Accelerator pedal
- Passenger compartment air filter, if equipped
- Hoses
- Shocks and struts
- Steering components
- Axle boots or driveshaft and u-joints
- Compartment lift struts, if equipped
- Floor mats secured, no interference with pedals
- Horn
- Starter switch

## Lubricate

Chassis components

## **Recommended Fluids, Lubricants, and Parts**

## **Recommended Fluids and Lubricants**

Fluids and lubricants identified below by name or specification, including fluids or lubricants not listed here, can be obtained from your dealer.

Usage	Fluid/Lubricant
Electric Drive Unit	DEXRON ULV Automatic Transmission Fluid.
Hydraulic Brake System	GM approved DOT 4 Hydraulic Brake Fluid.
Key Lock Cylinders, Hood and Tailgate Hinges	Multi-Purpose Lubricant, Superlube. See your dealer.
Vehicle Coolant Circuits	Use only ACDelco Premix (50/50 mixture of de-ionized water and DEX-COOL Coolant). See your dealer.
Windshield Washer	Automotive windshield washer fluid that meets regional freeze protection requirements.

## **Maintenance Records**

After the scheduled services are performed, record the date, odometer reading, who performed the service, and the type of services performed. Retain all maintenance receipts.

## 352 Technical Data

## **Technical Data**

Vehicle Identification	
Vehicle Identification Number (VIN) .	352
Service Parts Identification	352
Vehicle Data	
Capacities and Specifications	352

# Vehicle Identification Vehicle Identification Number (VIN)



This legal identifier is in the front corner of the instrument panel, on the driver side of the vehicle. It can be seen through the windshield from outside. The Vehicle Identification Number (VIN) also appears on the Vehicle Certification label and certificates of title and registration.

## **Service Parts Identification**

The certification label is intended to provide the service technician with vehicle service information.

There may be a large barcode on the certification label on the center pillar that the service technician can scan for the following information:

- Vehicle Identification Number (VIN)
- Model designation
- Paint information
- Production options

If there is not a large barcode on this label, then this same information can be found on a label inside of the glove box.

# **Vehicle Data Capacities and Specifications**

The following capacities are approximate. See your dealer for any capacity not listed.

Refer to Recommended Fluids and Lubricants  $\diamondsuit$  351 for more information.

Application	Capacities	
Аррисации	Metric	English
Air Conditioning Refrigerant	For the air conditioning system refrigerant charge type and amount, see the refrigerant label under the hood. See your dealer for more information.	
Total Cooling System*	See your dealer.	
Wheel Nut Torque	190 <b>N•</b> m	140 lb ft
*The refilling or adding coolant procedures can be complex. See your dealer.		

## 354 Technical Data

## **Electric Drive Unit Specifications**

Power	562 kW
Torque	1066 N m

	Technical Data	355
Performance		
Vehicle Top Speed	180 km/h	

## **Customer Information**

Customer Information	
Declaration of Conformity	356
Vehicle Data Recording and Privacy	
Vehicle Data Recording and Privacy	363
Cybersecurity	364
Event Data Recorders	364
OnStar	365
Infotainment System	365

## **Declaration of Conformity** Radio Frequency Devices

## China

- Shall not change transmission frequency, increase transmission power (including additional RF power amplifier), and shall not connect external antenna or change the transmitting antenna.
- When used, it shall not generate harmful interference to various legitimate radio communication services. Once interference is found, it shall be stopped immediately, and measures shall be taken to eliminate interference before it can continue to be used.
- When using micropower radio equipment, interference from various radio services or radiation interference from industrial, scientific and medical applications must be tolerated.
- Shall not be used near aircraft and airports.
- The use of micro-power short-distance radio transmission equipment shall comply with the relevant regulations of the State on Radio Management.

## Nigeria

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission.

## Battery Radio-Frequency Module — Dual Visteon

#### Jordan

Type Approval No. TRC/34/11063/2022

#### Oman

OMAN TRA TA-R/17720/24 D192564

## **United Arab Emirates (UAE)**





357

# Battery Radio-Frequency Module — Dual Vitesco

Jordan

Type Approval No. TRC/36/14751/2024

Oman

OMAN - TRA TA-R/18611/24 D172338

## **United Arab Emirates (UAE)**





# Body Control Module (B2NAO) Jordan

Type Approval No. TRC/34/10062/2022

## Oman

OMAN - TRA TA-R/13741/22 D100428

## United Arab Emirates (UAE)

TDRA Authorization No. ER10725/22

# Cell Monitoring Unit (SLA8) Visteon Jordan

Type Approval No. TRC/34/10865/2022

Oman

OMAN TRA TA-R/14681/22 D172338

## **United Arab Emirates (UAE)**



## Cell Monitoring Unit (SLA 3P8S) Vitesco Jordan

Type Approval No. TRC/34/12765/2023

Oman

OMAN TRA/ R/16358/23 D172338

## **United Arab Emirates (UAE)**





## Garage Door Opener (SAHL5K) Jordan

Tupe Approval No. TRC/34/12659/2023

#### Oman

**OMAN TRA** TA-R/13539/22 D172338

## **United Arab Emirates (UAE)**

TRA REGISTERED No: ER46032/16 **DEALER No:** DA35176/14

## Radar Long Range (77V12FLR/LRR120) Jordan

Tupe Approval No. TRC/32/6863/2020

## Oman

OMAN TRA TA-R/7713/19 D172338

## **United Arab Emirates (UAE)**

TRA REGISTERED No: ER72325/19 DEALER No: DA0020858/10

## Radar Short Range (SBZA RS5.3A) Jordan

Type Approval No. TRC/31/10345/2022

## Oman

OMAN TRA TA-R/14101/22 D172338

## **United Arab Emirates (UAE)**



TDRA - United Arab Emirates Dealer ID: DA44932/15 TA RTTE: ER11776/22



## Remote Function Receiver (RFR)

Jordan

Approval No. TRC/36/7716/2020

Oman

**OMAN TRA** R/6220/18 D172338

## **United Arab Emirates (UAE)**

TRA REGISTERED No: ER66706/18 **DEALER No:** DA36976/14

359

## Remote Key

## Jordan

TRC No. TRC/34/7116/2020

#### Oman

OMAN TRA TA-R/7981/19 D172249

## United Arab Emirates (UAE)

TRA
REGISTERED No:
ER73891/19
DEALER No:
DA36976/14

# Telematics Module (Continental) Gen 12 Jordan

Type Approval No. TRC/34/12066/2023

## United Arab Emirates (UAE)





## Telematics Module (LGE) Gen 12 Jordan

Type Approval No. TRC/34/13342/2023 Model TFGMEIBBCDB

#### Oman

OMAN TRA/ TA-R/18360/24 D182435

# United Arab Emirates (UAE) Model TFGMEIBBCD9





#### Model TFGMEIBBCDA

United Arab Emirates







# Tire Pressure Sensor (AHMPD4) Jordan

Type Approval No. TRC/32/5867/2021

#### Oman

OMAN TRA R/8931/20 D172338

## **United Arab Emirates (UAE)**





# Tire Pressure Sensor (BBFPL4) Jordan

Type Approval No. TRC/32/11541/2023

#### Oman

OMAN TRA R/15278/23 D172338

## **United Arab Emirates (UAE)**





## Virtual Cockpit Unit (VCU) - Mid/High Jordan

Type Approval No. TRC/34/13414/2023

#### Oman

OMAN TRA/ TA-R/17064/23 D172338

## **United Arab Emirates (UAE)**





## Virtual Key Backup Module (VKBM) Jordan

Model VTVKBM1

Tupe Approval No. TRC/36/11014/2022

## Oman

OMAN TRA TA-R/14721/22 D202897

## **United Arab Emirates (UAE)**

TRA
REGISTERED No:
ER16852/23
DEALER No:
DA37380/15

## Virtual Key Module (VKM)

Jordan

Type Approval No. TRC/36/10887/2022

361

#### United Arab Emirates (UAE)

TRA
REGISTERED No:
ER15639/22
DEALER No:
Not Available

## Virtual Key Sensor (VKS)

Jordan

Model PKA2.0.0

Type Approval No. TRC/36/10884/2022

United Arab Emirates (UAE)
Model PKA2.0.0:



TDRA - UNITED ARAB Emirates
Mode Dealer ID Name: DA0089882/12
TARITE: ER15747/22
Model Name: SLA8



#### Model PKA2.0.1:



#### Model PKA2.1.1:



## Wireless Phone Charger (Gen 3.0) Jordan

Type Approval No. TRC/20/11004/2022 Model WCGMM00N3C7

#### Oman

OMAN TRA TA-R/14839/22 D172338

#### **United Arab Emirates (UAE)**



Model Name: WCGMM00N3C7

## 2014/53/EU Radio Equipment Directive (RED) Declaration of Conformity

This vehicle has systems that transmit and/or receive radio waves subject to 2014/53/EU. The manufacturers of the systems listed below declare conformity with Directive 2014/53/EU. The full text of the EU declaration of conformity for each system is available at the following Internet address: www.gmceurope.com.

#### Importer

GM Mobility Europe GmbH Bethmannstraße 50–54 Ort 60311 Frankfurt am Main Hessen Germany

## Battery Radio-Frequency Module — Dual (BRFMd)

Visteon Corporation
One Village Center Drive

Van Buren Township, Michigan 48111-5711

USA

Frequency Band: 2.4–2.5 GHz
Maximum Power Output: 10 dBm

## **Body Control Module (B2NA0)**

DENSO Manufacturing Tennessee 203 1420 Middlesettlements Road

Maryville, TN 37801

Operating Frequency: 125 kHz
Maximum Output Power (ERP): 1.58 mW

Van Buren Township, Michigan 48111-5711

#### Cell Monitoring Unit (SLA8)

Visteon Corporation

One Village Center Drive

USA

Frequency Band: 2.4–2.5 GHz

Maximum Power Output: 10 dBm

## Garage Door Opener (SAHL5K)

Gentex Corporation
600 North Centennial Street

7eeland, MI 49464

USA

Operating Frequency: 433.05–434.79 MHz Maximum Output Power: 0.138 mW E.R.P.

#### Radar Long Range (77V12FLR/LRR120)

Veoneer US

26545 American Drive Southfield, MI 48034

Operating Frequency: 76–77 GHz

Maximum Transmit Power: 0.153 W E.I.R.P

## Radar Short Range (SBZA RS5.3A)

HELLA GmbH & Co. KGaA

Rixbecker Strasse 75 Lippstadt, D-59552

Germany

Frequency Range: 7.603–7.697 MHz

Output Watts: 0.4365

#### Remote Function Receiver (RFR)

Huf Hülsbeck and Fürst and Co. KG Steeger Str. 17 42251 Velbert Germany

Operating Frequency: 433.92 MHz

## Remote Key

Huf Hülsbeck & Fürst GmbH & Co. KG Steeger Str. 17, 42551 Velbert, Germany Operating Frequency: 433 MHz

Maximum Transmit Power: 0.3 mW EIRP

#### Roof Antenna

Molex, LLC 8100 Industrial Park Dr

Grand Blanc, MI 48439

## Telematics Module (Continental)

Continental Automotive Systems 21440 West Lake Cook Rd.

Deer Park, IL 60010

## Telematics Module (LGE)

LG Electronics Inc

128, Yeoui-daero, Yeongdeungpo-gu,

363

Seoul, Republic of Korea

Tire Pressure Sensor (BBFPL4)

Schrader Electronics Ltd.

11 Technology Park

Belfast Road

Antrim BT41 1QS

Ireland

Operating Frequency: 433.92 MHz

Virtual Cockpit Unit (VCU) - Mid/High

Robert Bosch GmbH
Robert-Bosch-Strasse 200

Hildesheim, 31139

Germany

Frequency Ranges: 5725–5850 MHz, 2400–2483.5 MHz

Maximum Transmitting Power: <= 33 dBm (EIRP). <= 20 dBm (EIRP)

Frequency Range: 88.0–108.0 MHz Maximum Transmit Power: 13.87 dBm

Virtual Key Backup Module (VKBM)

PTC-TES-CMS

2400 Executive Hills Blvd

Auburn Hills, MI 48326

Virtual Key Module (VKM)

Robert Bosch LLC 15000 Haggerty Rd.

Plymouth, MI 48170 USA

DTS Grant: Frequency Range: 2.402–2.480 GHz

Output Watts: 0.00158

**UWB Grant:** Frequency Ranges: 6.206–6.765 GHz. 7.703–8.265 GHz

Virtual Key Sensor (VKS)

Robert Bosch LLC

15000 Haggerty Rd. Plymouth, MI 48170 USA

**Model PKA2.0.0, DTS Grant:** Frequency Range: 2.402–2.480 GHz

Output Watts: 0.00162

**Model PKA2.0.0, UWB Grant:** Frequency Ranges: 6.196–6.767 GHz, 7.686–8.242 GHz

**Model PKA2.1.1, UWB Grant:** Frequency Ranges: 6.196–6.766 GHz, 7.694–8.254 GHz

Wireless Phone Charger (Gen 3.0)

BH EVS Co., Ltd.

Leaders Avenue

Magok 2nd Floor, 791-7,

Magokdong, Gangseo-gu

Seoul, Korea, 07794

Operating Frequency: 127.7 KHz

Maximum Transmitting Power: 37.7 dBμA/m (at 10 meters)

Wireless Phone Charger (Gen 3.1)

Aptiv Services US, LLC

13085 Hamilton Crossing Blvd.

Carmel, IN 46032

USA

Operating Frequency: 127.7 KHz

Maximum Transmit Power: 3 amp (15w)

# Vehicle Data Recording and Privacy

The vehicle has a number of computers that record information about the vehicle's performance and how it is driven or used. For example, the vehicle uses computer modules to monitor and control electric drive unit performance, to monitor the conditions for airbag deployment and to deploy them in

a crash, and, if equipped, to provide antilock braking to help the driver control the vehicle. These modules may store data to help the dealer technician service the vehicle or to help GM improve safety or features. Some modules may also store data about how the vehicle is operated, such as rate of energy consumption or average speed. These modules may retain personal preferences, such as radio presets, seat positions, and temperature settings.

## Cybersecurity

GM collects information about the use of your vehicle including operational and safety related information. We collect this information to provide, evaluate, improve, and troubleshoot our products and services and to develop new products and services. The protection of vehicle electronics systems and customer data from unauthorized outside electronic access or control is important to GM. GM maintains appropriate security standards. practices, quidelines and controls aimed at defending the vehicle and the vehicle service ecosystem against unauthorized electronic access, detecting possible malicious activity in related networks, and responding to suspected cubersecurity incidents in a timely, coordinated and effective manner. Security incidents could impact your safety or compromise your private data. To minimize security risks, please do not connect your vehicle electronic systems to unauthorized devices or connect your vehicle to any unknown or untrusted networks (such as Bluetooth, Wi-Fi or similar technology). In the event you suspect any security incident impacting your data or the safe operation of your vehicle, please stop operating your vehicle and contact your dealer.

#### **Event Data Recorders**

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

 How various systems in your vehicle were operating;

- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

#### Note

EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

GM will not access these data or share it with others except: with the consent of the vehicle owner or, if the vehicle is leased, with the consent of the lessee; in response to an official request by police or similar government office; as part of GM's defense of litigation through the discovery process; or, as permitted by law. Data that GM collects or receives may also be used for GM research needs or may be made available to others for research purposes, where a need is shown and the data is not tied to a specific vehicle or vehicle owner.

#### OnStar

If the vehicle is equipped with OnStar and has an active service plan, additional data may be collected and transmitted through the OnStar system. This includes information about the vehicle's operation; collisions involving the vehicle; the use of the vehicle and its features, including infotainment; and the location and approximate GPS speed of the vehicle. Refer to the OnStar Terms and Conditions and Privacy Statement on the OnStar website.

See OnStar Additional Information  $\diamondsuit$  368.

### Infotainment System

If the vehicle is equipped with a navigation system as part of the infotainment system, use of the system may result in the storage of destinations, addresses, telephone numbers, and other trip information. See the infotainment section for information on stored data and for deletion instructions.

#### 366 OnStar

## **OnStar**

OnStar Overview	
OnStar Overview	366
OnStar Services	
Emergency	368
Security	368
OnStar Additional Information	
OnStar Additional Information	368

## **OnStar Overview**









- Privacy Button
- Blue OnStar Button
- ® Red Emergency Button

This vehicle may be equipped with a comprehensive, in-vehicle system that can connect to an OnStar Advisor for Emergency, Security, Navigation, Connections, and Diagnostics Services. OnStar and connected services may require a paid service plan and data plan. OnStar requires the vehicle battery and electrical system, cellular service, and GPS satellite signals to be available and operating. OnStar acts as a link to existing emergency service providers. OnStar may collect information about you and your vehicle, including location information. See OnStar User Terms, Privacy Statement, and

Software Terms for more details including system limitations at my.gmcarabia.com or onstararabia.com.

The OnStar system status light is next to the OnStar buttons. If the status light is:

- Solid Green: System is ready.
- Flashing Green: On a call.
- Red: Indicates a problem.
- Off: System is off. Press twice to speak with an OnStar Advisor.

Functionality of the Blue OnStar Button may vary by vehicle and region.

Press (h) to speak to an Advisor. See "Contacting OnStar" later in this section.

#### Press 🕅 to:

 Obtain and customize the Wi-Fi hotspot name (Service Set Identifier) and password, if equipped.

#### Or

• End incoming OnStar advisor call.

Press on to connect to an Advisor to:

Verify account information or update contact information.

- Receive a Diagnostic check of the vehicle's key operating systems.
- Receive Roadside Assistance.
- Manage Wi-Fi Settings, if equipped.

Press to get a priority connection to an OnStar Advisor available 24/7 to:

- Get help for an emergency.
- Be a Good Citizen.

### **Contacting OnStar**

To contact an OnStar Advisor, press oo or call one of the following phone numbers.

#### 368 OnStar

Country	Phone Number
Bahrain	800 06956
Kuwait	22285334
UAE	800 04444433
Saudi Arabia STC	800 8449102
Saudi Arabia not STC	800 8500674

## OnStar Services Emergency

Emergency Services require an active safety and security plan. With Automatic Crash Response, built-in sensors can automatically alert a specially trained OnStar Advisor who is immediately connected in to the vehicle to help.

Press for a priority connection to an OnStar Advisor who can contact emergency service providers, direct them to your exact location, and relay important information.

With Roadside Assistance, Advisors can locate a nearby service provider to help with a flat tire or a battery jump.

### Security

If equipped, OnStar provides these services:

- With Stolen Vehicle Assistance, OnStar Advisors can use GPS to pinpoint the vehicle and help authorities quickly recover it.
- With Remote Ignition Block, if equipped, OnStar can block the vehicle from being restarted.
- With Stolen Vehicle Slowdown, if equipped, OnStar can work with law enforcement to gradually slow the vehicle down.

#### **Theft Alarm Notification**

If Equipped, when the vehicle alarm system is armed and the alarm is activated, a notification by text, email, or app push will be sent. If the vehicle is stolen, an OnStar Advisor can work with authorities to recover the vehicle.

## OnStar Additional Information

### **Transferring Service**

Press to request account transfer eligibility information. The Advisor can cancel or change account information.

#### Selling/Transferring the Vehicle

Call immediately to terminate your OnStar or connected services if the vehicle is disposed of, sold, transferred, or if the lease ends. See "Contacting OnStar" later in this section.

#### **Reactivation for Subsequent Owners**

Press and follow the prompts to speak to an Advisor as soon as possible. The Advisor will update vehicle records and explain OnStar or connected service options.

#### **How OnStar Service Works**

Automatic Crash Response, Emergency Services, Stolen Vehicle Assistance, Remote Services, and Roadside Assistance are available on most vehicles. Not all OnStar services are available everywhere or on all vehicles. For more information, a full description of OnStar services, system limitations, and OnStar User Terms, Privacy Statement, and Software Terms. See "Contacting Onstar" later in this section:

- See my.gmcarabia.com.
- Press on to speak with an Advisor.

OnStar or connected services cannot work unless the vehicle is in a place where OnStar has an agreement with a wireless service provider for service in that area. The wireless service provider must also have coverage, network capacity, reception, and technology compatible with OnStar or connected services. Service involving location information about the vehicle cannot work unless GPS signals are available, unobstructed, and compatible with the OnStar hardware. OnStar or connected services may not work if the OnStar equipment is not properly installed or it has not been properly maintained. If equipment or software is added, connected, or modified, OnStar

or connected services may not work. Other problems beyond the control of OnStar — such as hills, tall buildings, tunnels, weather, electrical system design and architecture of the vehicle, damage to the vehicle in a crash, or wireless phone network congestion or jamming — may prevent service.

## OnStar Personal Identification Number (PIN)

A PIN is needed to access some OnStar services. The PIN will need to be changed the first time when speaking with an Advisor. To change the OnStar PIN, contact an OnStar Advisor by pressing of or calling. See "Contacting Onstar" later in this section.

#### Warranty

On Star equipment may be warranted as part of the vehicle warranty.

#### Languages

The vehicle can be programmed to respond in multiple languages. Press and ask for an Advisor. Advisors are available in English and Arabic. Available languages may vary by vehicle.

#### **Potential Issues**

OnStar cannot perform Remote Door Unlock or Stolen Vehicle Assistance after the vehicle has been off continuously for 10 days without an ignition cycle. If the vehicle has not been started for 10 days, OnStar can contact Roadside Assistance or a locksmith to help gain access to the vehicle.

#### Global Positioning System (GPS)

- Obstruction of the GPS can occur in a large city with tall buildings; in parking garages; around airports; in tunnels and underpasses; or in an area with very dense trees. If GPS signals are not available, the OnStar system should still operate to call OnStar. However, OnStar could have difficulty identifying the exact location.
- In emergency situations, OnStar can use the last stored GPS location to send to emergency responders.

#### Cellular and GPS Antennas

Cellular reception is required for OnStar to send remote signals to the vehicle. Do not place items over or near the antenna to prevent blocking cellular and GPS signal reception.

#### 370 OnStar

#### **Unable to Connect to OnStar Message**

If there is limited cellular coverage or the cellular network has reached maximum capacity, this message may come on. Press to try the call again or try again after driving a few miles into another cellular area.

#### Vehicle and Power Issues

OnStar services require a vehicle electrical system, wireless service, and GPS satellite technologies to be available and operating for features to function properly. These systems may not operate if the battery is discharged or disconnected.

#### **Add-on Electrical Equipment**

The OnStar system is integrated into the electrical architecture of the vehicle. Do not add any electrical equipment. See *Add-On Electrical Equipment* ⇒ 287. Added electrical equipment may interfere with the operation of the OnStar system and cause it to not operate.

#### **Vehicle Software Updates**

OnStar or GM may remotely deliver software updates or changes to the vehicle without further notice or consent. These updates or changes may enhance or maintain safety,

security, or the operation of the vehicle or the vehicle systems. Software updates or changes may affect or erase data or settings that are stored in the vehicle, such as saved navigation destinations or pre-set radio stations. Neither OnStar nor GM is responsible for any affected or erased data or settings. These updates or changes may also collect personal information. Such collection is described in the OnStar privacy statement or separately disclosed at the time of installation. These updates or changes may also cause a system to automatically communicate with GM servers to collect information about vehicle system status, identify whether updates or changes are available, or deliver updates or changes. An active OnStar agreement constitutes consent to these software updates or changes and agreement that either OnStar or GM mau remotely deliver them to the vehicle.

#### Privacy

The complete OnStar Privacy Statement may be found at my.gmcarabia.com. We recommend that you review it. If you have any questions, call or press of to speak with an Advisor. Users of wireless communications are cautioned that the privacy of any information sent via wireless cellular communications

cannot be assured. Third parties may unlawfully intercept or access transmissions and private communications without consent. See "Contacting Onstar" later in this section.

### **OnStar - Software Acknowledgements**

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit https://opensource.lge.com. In addition to the source code, all referred license terms, warranty disclaimers, and copyright notices are available for download. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

\*Provided through LG Electronics Inc., who is solely responsible for provisions of related OSS compliance.

#### **Contacting Onstar**

To contact an OnStar Advisor, press of or call one of the following phone numbers.

Country	Phone Number
Bahrain	80006956
Kuwait	22285334
UAE	800 04444433
Saudi Arabia STC	800 8449102
Saudi Arabia not STC	800 8500674

#### 372 eCall

## eCall

eCall Overview	
eCall Overview (UAE)	372

# eCall Overview eCall Overview (UAE)

This vehicle may be equipped with a 999 based eCall system that is free of charge. In the event of a crash, an eCall-equipped vehicle may automatically call the nearest 999 emergency center. If built-in sensors detect a crash, an emergency call is placed automatically. An advisor will determine whether help is needed. The exact location of the crash site is sent to the emergency center even if the occupants of the vehicle are unable to communicate with emergency personnel.

The eCall system can also be activated manually. Press <sup>609</sup> on the overhead console to contact the nearest 999 emergency center. Press <sup>609</sup> within two seconds to cancel the manually activated eCall.







A problem with the system may be indicated by the following:

- A red light near the 🕝 button displays.
- The 6 button does not light when the vehicle is on
- A Driver Information Center (DIC) message appears.

See your dealer for service.

When the system is active, the green light near the  $\bigcirc$  button is lit.

Usage of personal data is strictly limited to the purpose of handling the emergency call to the emergency number 999.

The eCall system may collect and process the following data:

- Vehicle Identification Number
- Vehicle type, such as passenger vehicle or light commercial vehicle
- Vehicle propulsion storage type, such as gasoline, diesel, Compressed Natural Gas (CNG), Liquefied Petroleum Gas (LPG), electric, or hudrogen
- Last three vehicle locations and direction of travel

- Automatic activation log file for the system and its timestamp
- Number of passengers/number of occupants in the vehicle
- · Location of impact
- Delta V difference between velocity just after and just before impact

Data collected by the eCall system is shared only with the 999 emergency center when a connection is made.

Data collected by the system is:

- Temporarily stored in the system memory, but it is not available outside of the system before an eCall is triggered.
- Not traceable and not subject to constant tracking during normal system operation.
- Stored in the system's memory but is automatically and continuously deleted.

Vehicle location data is continuously overwritten and limited to the last three locations for normal operation of the system.

The system activity log is kept for the duration of the emergency call, or a maximum of 13 hours after the call was initiated.

The data subject, or vehicle owner, has the right to access the data and as appropriate, to request the rectification, erasure, or blocking of personal data when processing of the data does not comply with local regulations. Any third parties who received the data must be notified of any rectification, erasure, or blocking done to comply with local regulations unless it proves impossible or involves a disproportionate effort.

The data subject, or vehicle owner, has a right to complain to the competent data protection authority if he or she feels that his or her rights have been infringed as a result of the processing of his or her personal data.

This vehicle is equipped with GM's third-party service system called OnStar. See *OnStar Overview* ⇔ 366.

When OnStar Automatic Crash Response is enabled, emergency calls will be handled by OnStar and the nearest 999 emergency center as a backup. When OnStar Automatic Crash Response is disabled, emergency calls will be answered by the nearest 999 emergency center.

OnStar processes personal data only after the vehicle owner's explicit consent. See OnStar Privacy Policy at https://

www.onstararabia.com/en/privacy-policy for information regarding traceability, tracking, and processing of personal data.

The owner of a vehicle equipped with OnStar service in addition to the 999-based eCall in-vehicle system has the right to choose to use the 999-based eCall in-vehicle system rather than OnStar. You may cancel your OnStar service at any time by pushing your blue OnStar button or by calling 800 04444433.

#### 374 Connected Services

## **Connected Services**

#### **Connected Services**

Navigation	374
Connections	
Diagnostics	376

## **Navigation**

Connected navigation services enable you to use the vehicle's mobile app or an OnStar Advisor to get route guidance.

If equipped, you can remotely send navigation instructions to your vehicle through your vehicle's mobile app or by connecting with an OnStar advisor.

An active OnStar or connected services plan is required. For coverage maps, see www.onstararabia.com. Services vary by model.

#### **Destination Download**

If equipped, OnStar can send directions to the vehicle's built-in navigation system. Press (3), then ask the OnStar Virtual Assistant to download directions to the built-in navigation system.

After the navigation session is downloaded, the navigation screen will provide prompts to begin driving directions.

Downloaded routes can only be canceled through the built-in navigation system.

#### **Connections**

The following services help with staying connected.

For more information, see my.gmcarabia.com.

#### **Ensuring Security**

- Change the default password for the myGMC mobile application. Use a combination of letters and numbers to increase the security.
- Change the Wi-Fi hotspot name (Service Set Identifier) and password. The Service Set Identifier is your network's name that is visible to other wireless devices. Choose a unique name and avoid family names or vehicle descriptions.

#### Wi-Fi Hotspot

If equipped and enabled, the vehicle has a builtin Wi-Fi hotspot that provides access to the Internet and web content up to 5G. Multiple devices can be connected, but a data plan is required. Use the in-vehicle controls only when it is safe to do so.

 To retrieve Wi-Fi hotspot information, touch the Wi-Fi Hotspot icon on the infotainment home screen.

- 2. The Wi-Fi settings will display the Wi-Fi hotspot name, password, and on some vehicles, the connection type (no Internet connection, 3G, 4G, 4G LTE, 5G), and signal quality (poor, good, excellent) is also displayed. The LTE icon shows connection to Wi-Fi. It is possible that the icon may not illuminate even though the vehicle has an active connection.
- 3. To change the Wi-Fi hotspot name or password, press . On some vehicles, the Wi-Fi hotspot name and password can be changed in the Wi-Fi Hotspot menu, or call to connect with an Advisor if you are unable to change it yourself.

#### 376 Connected Services

Country	Phone Number
Bahrain	80006956
Kuwait	00965 22285334
UAE	80004444433
Saudi Arabia STC	800 8449102
Saudi Arabia not STC	800 8500674
International	0020 221601847

After initial set-up, your vehicle's Wi-Fi hotspot will connect automatically to your mobile devices. Manage data usage by turning Wi-Fi on or off on your mobile device, using the myGMC mobile app, or by contacting an OnStar Advisor. On some vehicles, Wi-Fi can also be managed from the Wi-Fi Hotspot menu.

#### myGMC App

If available, download the myGMC mobile app to compatible Apple and Android smartphones. Features are subject to change. For myGMC

mobile app information and compatibility, see my.qmcarabia.com.

An active OnStar or connected service plan may be required. A compatible device, factory-installed remote start, and power locks are required. Data rates apply. See www.gmcarabia.com or www.onstararabia.com for details and system limitations.

#### Wireless Configuration

Export of this vehicle to another region may require reset of internal settings for wireless communication configuration to ensure regulatory compliance or enable connectivity. See your dealer. The end-user of the device does not have an option to modify the regulatory wireless configuration.

### Diagnostics

By monitoring and reporting on the vehicle's key systems, OnStar Advanced Diagnostics, if equipped, provides a way to keep up on maintenance. Capabilities vary by model. See www.onstararabia.com for details and system limitations. Features are subject to change. For updates on feature capabilities, see my.gmcarabia.com. Message and data rates may apply.

## Index

A
Accessories and Modifications 290 Adaptive
Cruise Control 117, 204
7.00.01.01.01
OnStar Information
Add-On Electrical Equipment 287
Advanced
Driver Assistance Systems 227
Agreements
Trademarks and License 162
Aiming
Headlight, Front 304
Air
Filter, Passenger Compartment 167
Suspension 201
Suspension Light 115
Vents 166
Airbags
Adding Equipment to the Vehicle 62
How Does an Airbag Restrain? 56
Passenger Sensing System 59
Passenger Status Indicator 108
Readiness Light 107
Replacing System Parts after a Crash 63
Servicing Airbag-Equipped Vehicles 62
System 52
System Check
- 3 0

What Makes an Airbag Inflate? What Will You See after an Airbag	56
Inflates?	56
When Should an Airbag Inflate?	55 55
Where Are the Airbags?	
Alarm	
Vehicle Security	27
Alert	21
Lane Change (LCA)	250
Rear Cross Traffic	
Rear Pedestrian	
All-Season Tires	
AM-FM Radio	
Antenna	
Multi-band	146
Antilock Brake System (ABS)	
Warning Light	
Appearance Care	
Exterior	337
Interior	
Assistance Systems	5
Advanced	227
Automatic Emergency Braking (AEB)	
Automatic Parking Assist (APA)	
Driver Attention	
Driving	
Forward Collision Alert (FCA) System	
Front Pedestrian Braking (FPB)	248
Lane Change Alert (LCA)	

Lane Keep Assist (LKA)	
Parking	236
Parking and Backing	228
Rear Cross Traffic Alert (RCTA)	241
Rear Pedestrian Alert	240
Rear Vision Camera (RVC)	228
Reverse Automatic Braking (RAB)	
Surround Vision System	
Audio	
Bluetooth	147
Automatic	
Dimming Mirrors	. 30
Door Locks	
Emergency Braking (AEB) Disabled	
Light	. 113
Parking Assist (APA)	237
Auxiliary	
Switches	287
Avoiding Untrusted Media Devices	146
_	
В	
Battery	300
Charging Electrical Requirements	268
Exterior Lighting Battery Saver	
Fault Light	
Gauge	
Jump Starting	334
Load Management	
Power Protection	

Bluetooth	505
Audio	1/17
Overview	
Brakes	
Antilock	
Brake Assist	
Electric Brake Boost	
Electric Parking Brake	
Fluid	
Regenerative Braking	
System Warning Light	110
Braking	172
Automatic Emergency (AEB)	244
Front Pedestrian (FPB) System	248
Reverse Automatic	239
Break-In, New Vehicle	
Buckle To Drive	
Buying New Tires	
-	
C	
Camera	
Rear Vision (RVC)	228
Capacities and Specifications	
Carbon Monoxide	
Midgate	19
Tailgate	
Winter Driving	
willer briving	100

Cargo	
Area	90
Lights, Exterior	13!
Tie-Downs	
Car Wash Mode	
Caution, Danger, and Warning	••••••
Chains and Other Traction Devices	
Tire	327
Charge	
Cord	. 109, 263
Charging	
Delay Override	
Plug-In	
Status Feedback	259
System Light	
Utility Interruption	
When to Charge, Vehicle	
Charging Phone	
Wireless	10
Child Restraints	
Infants and Young Children	6!
Lower Anchors and Tethers for	
Children	70
Older Children	
Securing	
Systems	
Where to Put	
Child Safety Locks	
Circuit Breakers	

#### **INDEX** 379 Diagnostics Cleaning On-Screen...... 103 Steering Wheel.......140 Diaital **Climate Control Sustems** Cornering Lights...... 135 Audio Broadcast (DAB) Radio...... 144 Dual Automatic...... 164 Disable Button Covers Rollover Detection...... 57 Underhood Access......292 Disabled Vehicle Cruise Control Setting...... 157 Cluster, Instrument...... 104 Adaptive...... 204 Distracted Driving...... 171 Collision Alert Light...... 117 Forward (FCA) System...... 242 Dome Lights...... 136 Compartment Cupholders...... 87 Door Ajar Light...... 118 Delayed Locking...... 14 Compartments Storage...... 87 Compressor Kit, Tire Sealant...... 328 Power Locks...... 14 Danger, Warning, and Caution...... 1 Conformitu Driver Dashboard......4 Assistance Systems, Advanced...... 227 Data Collection Connected Services Infotainment System...... 365 Connections...... 374 Attention Assist Light...... 117 Diagnostics...... 376 Information Center (DIC)...... 122 Mode Control...... 197 Navigation...... 374 Dautime Running Lights...... 133 Mode Control Light...... 114 Connections **Declaration of Conformity** Connected Services...... 374 Certification Information...... 356 Teen...... 159 **Drive Unit** Control Defensive Driving...... 172 of a Vehicle...... 172 Electric...... 187 Delayed Traction and Electronic Stability...... 196 Driving Charging Override...... 259 Controls Locking...... 14 Assistance Systems...... 242 Characteristics and Towing Tips............. 269 Headlight...... 131 Destination...... 149 Defensive...... 172

for Better Energy Efficiency 170	J
Hill and Mountain Roads 179	9
If the Vehicle is Stuck 18	1
Loss of Control 174	4
Off-Road 174	•
Off-Road Recovery 173	
One-Pedal 19	1
Vehicle Load Limits182	2
Wet Roads 178	3
Winter 180	J
Dual	
Automatic Climate Control System 164	4
r	
E	
eCall	
Overview	2
Electric	
Brake Boost 192	
Drive Unit 18	
Parking Brake193	3
Parking Brake Light11	1
Electrical	
Equipment, Add-On 28	
Requirements for Battery Charging 268	3
Electrical System	
Fuses and Circuit Breakers 306	
Instrument Panel Fuse Block 311, 31	
Overload 30!	5

Electronic Stability Control (ESC) Off	
Light 11	14
Emergency	
OnStar 36	8
Energy Efficiency	
Driving 17	0
Engine	
Cooling System29	95
Entry Lighting 13	6
Equipment, Towing 27	6
Event Data Recorders 36	
Exit Lighting 13	37
Exterior	
Lighting Battery Saver 13	8
F	
Flashers, Hazard Warning 13	4
Flat Tire 32	
Floor Console	
Storage 8	9
Floor Mats 34	
Fluid	
Brakes 29	9
Washer 29	97
Folding Mirrors 2	9
Four-Wheel	
Steering 19	
Steering Light 11	
Four-Wheel Drive 19	92

Four-Wheel Drive Service Warning Light 11 Fuses	12
Fuses and Circuit Breakers 30	6
Instrument Panel Fuse Block 311, 31	
Underhood Compartment	
G	
Garage Door Opener	
Programming 12	8
Gas Strut(s) 30	
Gauges	
Battery 10	!
Odometer 10	
Power Indicator 10	6
Speedometer 10	!
Trip Odometer 10	!
Warning Lights and Indicators 10	):
General Information	
Service and Maintenance 34	ŀ
Towing 26	8
Vehicle Care 29	
Generator	
Onboard 9	9
Glass Replacement 30	
Global Positioning System (GPS) 14	9
Glove Box 8	
Guidance	
Problems with the Route 15	(

Hill

#### **INDEX** 381 Lap-Shoulder Belt...... 49 **LATCH System** Hazard Warning Flashers...... 134 Indicators Replacing Parts after a Crash...... 80 Pedestrian Ahead..... Headlights LED Lighting...... 304 Vehicle Ahead...... 113 Lighting Warning Lights and Gauges...... 103 Controls...... 131 Entry...... 136 High-Beam On Light...... 116 Infants and Young Children, Restraints...... 65 Off Reminder...... 133 Infotainment Illumination Control...... 135 System, Automatic...... 133 Using the System...... 141 LED...... 304 Head Restraints...... 35 Inspection Lights Head-Up Display (HUD)...... 125 Multi-Point Vehicle.......349 Adaptive Cruise Control...... 117 Instrument Cluster...... 104 Heated Air Suspension...... 115 and Ventilated Front Seats...... 41 Instrument Panel Overview...... 4 Airbag Readiness...... 107 Mirrors..... Interior Antilock Brake System (ABS) Warning.... 111 Rearview Mirrors.......30 Automatic Emergency Braking (AEB) Introduction...... 1, 139 Disabled...... 113 High-Beam Battery Fault...... 110 On Light...... 116 Brake System Warning...... 110 Systems...... 131 Jump Charge Cord Connected...... 109 High-Speed Operation...... 319 Starting..... Charging System...... 109 High Voltage Cornering....... 135 Battery Gauge...... 105 Cruise Control Light...... 117 Devices and Wiring...... 305 Keus...... 6 Daytime Running...... 133 Remote...... 7 and Mountain Roads...... 179 Remote Operation...... 7 Door Ajar..... 118 Start Assist (HSA)...... 194 Driver Attention Assist...... 117 Hood.......15 Driver Mode Control...... 114 Lane Electric Parking Brake......111 How to Wear Seat Belts Properly...... 47 Keep Assist Light...... 112 Electronic Stability Control (ESC), Off..... 114

Exterior Cargo 135	Loss of Control 174	Power
Exterior Lighting Battery Saver 138	Lower Anchors and Tethers for Children	Rear Camera 31
Four-Wheel Steering 115	(LATCH System) 70	Tilt in Reverse
Gauges and Indicators 103	Low State of Charge Light 109	Modes
High-Beam On 116	Lumbar Adjustment	Car Wash 187
Lane Centering Assistance 112	Front Seats 38	Driver Control
Lane Keep Assist 112		Power 186
Low State of Charge 109	M	Monitor System, Tire Pressure 319
On Reminder 117	Maintenance	Multi-band Antenna 146
Reading 136	Records	Multi-Point Vehicle Inspection (MPVI) 349
Seat Belt Reminders 106	Schedule	
Security 116	Maintenance Schedule	N
Service Electric Parking Brake 111	Recommended Fluids and Lubricants 351	Navigation
Service Four-Wheel Drive Warning	Maps 148	Connected Services
Light 112	Media	Destination
Service Vehicle Soon 110	Avoiding Untrusted Devices 146	Symbols148
Super Cruise 117	Memory Seats	Using the System 147
Tire Pressure 116	Messages	New Vehicle Break-In
Traction Control System (TCS)/	Propulsion Power 128	_
Electronic Stability Control Light 113	Vehicle 127	0
Traction Off 113	Vehicle Speed 128	Odometer 105
Vehicle Ready 116	Midgate 19	Trip105
Locks	Mirrors	Off-Road
Automatic Door14	Automatic Dimming	Driving 174
Delayed Locking 14	Automatic Dimming Rearview 31	Recovery 173
Door	Folding 29	Older Children, Restraints
Lockout Protection 15	Heated30	Onboard Generator
Power Door 14	Interior Rearview30	One-Pedal Driving
Safety 15	Manual Rearview	On-Screen Controls
-		011 3616611 601161013

#### **INDEX** 383 Port Additional Information.......368 USB...... 146 Rearview Mirrors.......31 Emergency...... 368 Power Automatic Dimming...... 31 Door Locks...... 14 Indicator Gauge...... 106 Outlets Recognition Voice...... 151 Power...... 97 Modes...... 186 Outlets...... 97 Recommended Fluids and Lubricants....... 351 Instrument Panel...... 4 Protection, Battery...... 137 Records Seat Adjustment..... Windows..... Regenerative Braking...... 195 Pregnancy, Using Seat Belts...... 51 Reminder Park Privacu Vehicle Data Recording....... 363 Lights On...... 117 Parking Problems with Route Guidance...... 150 Seat Belt...... 106 Brake and P (Park) Mechanism Check.... 302 **Propulsion** Remote Parking Assist Power Messages...... 128 Keu...... 7 Parking or Backing Key Operation...... 7 Start...... 12 Assistance Systems...... 228 Replacement Radiator Passenger Airbag Status Indicator...... 108 Radio Glass...... 303 **Replacement Parts** AM-FM Radio..... Compartment Air Filter...... 167 Digital Audio Broadcast (DAB)...... 144 Airbags...... 63 Sensing System...... 59 Pedestrian Replacing Reception...... 146 Airbaq System...... 63 Ahead Indicator...... 113 Reading Lights...... 136 LATCH System Parts After a Crash........... 80 Safety Signal.......96 Ready Indicator...... 116 Seat Belt System Parts after a Crash....... 52 Phone Rear Bluetooth...... 152, 153 Camera Mirror...... 31 Requirements Electrical Battery Charging...... 268 Heated Seats.....

Reverse Tilt Mirrors	30	Heated, Rear		Start	
Ride Control Systems		Lumbar Adjustment, Front	38	Assist, Hill	19
Air Suspension	201	Memory	39	Remote	1
Roads		Power Adjustment, Front	37	Status	
Driving, Wet	178	Rear		Charging Feedback	25
Rollover Detection Disable Button	57	Rear Seat Reminder	42	Vehicle	12
Rollover Detection System Status		Reclining Seatbacks	38	Status Indicator	
Indicator	108	Underseat Storage		Rollover Detection System	10
Rotation		Securing Child Restraints	80, 84	Steering	
Tires	323	Security		Four-Wheel	19
_		Light	116	Heated Wheel	
S		OnStar	368	Wheel Adjustment	
Safety		Vehicle		Wheel Controls	
Kit	92	Vehicle Alarm	27	Storage	
Locks		Service	168	Cargo Area	9
Pedestrian Signal		Maintenance Records	351	Compartments	8
System Check		Accessories and Modifications	290	Cupholders	
Sealant Kit, Tire	328	Doing Your Own Work	290	Floor Console	8
Seat Belts		Electric Parking Brake Light		Glove Box	8
Buckle To Drive		Four-Wheel Drive Warning Light.		Underhood	8
Care		Maintenance, General Information		Underseat	8
How to Wear Seat Belts Properly		Parts Identification		Storing the Tire Sealant and	
Lap-Shoulder Belt		Vehicle Soon Light	110	Compressor Kit	33
Reminders		Servicing the Airbag System		Struts	
Replacing after a Crash		Settings		Gas	30
Use During Pregnancy		Signals, Turn and Lane-Change	134	Stuck Vehicle	
Seats		Software Updates		Sun Visors	
Head Restraints	35	Specifications and Capacities		Super Cruise	21
Heated and Ventilated, Front		Speedometer		Light	

Surround	Sealant and Compressor Kit 328
Vision System 229	Sealant and Compressor Kit, Storing 333
Switches	Wheel Alignment and Tire Balance 326
Auxiliary 287	Wheel Replacement 326
Symbols 2	When It Is Time for New Tires 324
Navigation 148	Winter 317
System	Towing
Global Positioning 149	Driving Characteristics 269
Systems	Equipment 276
Airbag 52	General Information 268
High Beam131	Trailer
Infotainment, Data Recording 365	Trailer Sway Control (TSC) 285
_	Traction
1	Control System (TCS)/Electronic
Tailgate 23	Stability Control Light 113
Teen Driver	Control/Electronic Stability Control 196
Theft-Deterrent Systems	Off Light 113
Tires	Trademarks and License Agreements 162
All-Season 317	Trailer
Buying New Tires 324	Sway Control (TSC) 285
Chains and Other Traction Devices 327	Towing 272
Different Size 326	Transfer Case
If a Tire Goes Flat 327	Four-Wheel Drive 192
Inspection 322	Transporting
Pressure 318, 319	a Disabled Vehicle 336
Pressure Light 116	Trip Odometer 105
Pressure Monitor Operation 320	Truck-Camper Loading Information 185
Pressure Monitor System 319	Turn and Lane-Change Signals 134
Rotation 323	
	I .

U
Underhood
Access Covers
Compartment Fuse Block 307
Compartment Overview
Storage 87
Universal Remote System
Operation 130
Programming 128
Updates
Software 143
USB Port
Using
Infotainment System 141
Navigation System 147
This Manual1
Utility Interruption of Charging 268
V
Vehicle
Ahead Indicator 113
Alarm System 27
Control 172
Data Recording and Privacy 363
Identification Number (VIN) 352
Load Limits 182
Messages 127
Positioning 150

Windshield	
Replacement	303
Wiper/Washer	. 96
Winter	
Driving	180
Tires	317
Wiper	
Blade Replacement	303
Wireless Phone Charging	101
Wiring, High Voltage Devices	